


7 Dimensional drawings

7 - 1 Dimensional Drawings with Accessories

7

FXFQ80-125A

with auto-cleaning panel

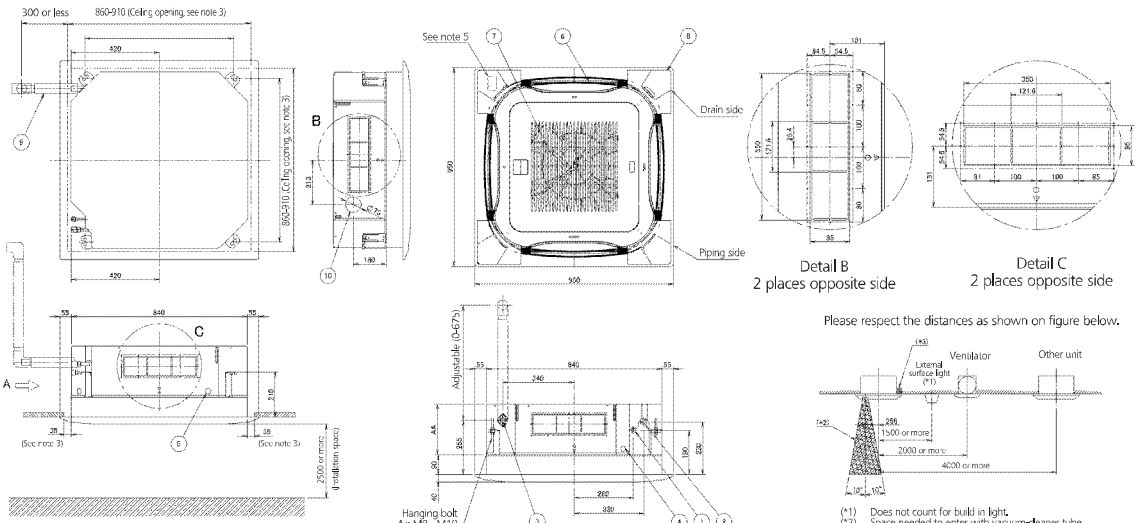

- 1 Liquid pipe connection
- 2 Gas pipe connection
- 3 Drain pipe connection
- 4 Power supply entry hole
- 5 Transmission wiring entry hole
- 6 Air discharge opening
- 7 Air suction grille
- 8 Corner decoration cover
- 9 Drain hose
- 10 Knock out hole

AA	Model
246	FCQG100-140F, FXFQ80-100A
288	FCQHGT-140F, FXFQ125A


- Notes:**
1. Location of the nameplates:
 - Unit body: on the control box cover.
 - Decoration panel: on the panel frame at the piping side under the corner cover.
 2. When installing an optional accessory, refer to the installation drawings.
 - For fresh air intake kit an inspection part is necessary.
 3. Make sure the spacing between the ceiling and the cassette is no more than 35mm. MAX ceiling opening: 910mm.
 4. When the conditions exceed 30°C and RH 80% in the ceiling or fresh air is inducted into the ceiling, an additional insulation is required (polyethylene foam, thickness 10 mm or more).
 5. In case of using a sensor kit, this position will be a sensor, refer to the drawing of the sensor kit for more detail.

Required space
 In case a discharge opening is closed with the 'sealing member' option, the distance of 1500mm can be reduced to 500mm on the closed side.

3D077131D

FXFQ80-125A

with standard panel

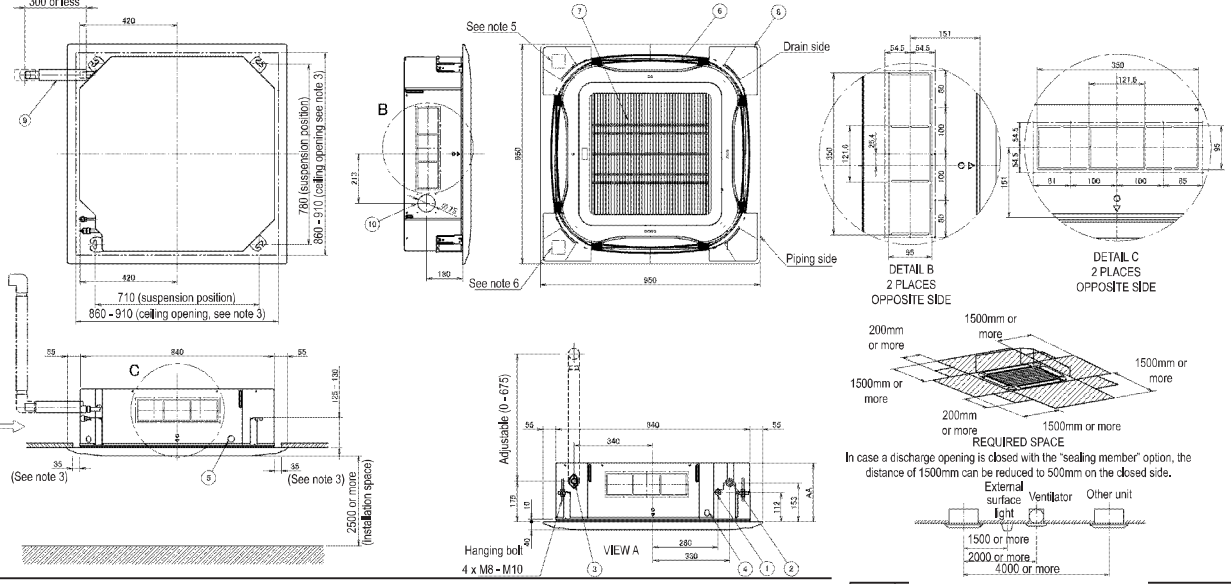

- NOTE**
1. Location of the nameplates
 - Unit body: on the control box cover
 - Decoration panel: on the panel frame at the piping side under the corner cover
 2. When installing an optional accessory, refer to the installation drawings.
 - For fresh air intake kit an inspection part is necessary
 3. Make sure the spacing between the ceiling and the cassette is no more than 35mm. Max ceiling opening: 910mm
 4. When the conditions exceed 30°C and RH 80% in the ceiling or fresh air is inducted into the ceiling, an additional insulation is required (polyethylene foam, thickness 10mm or more)
 5. In case of using a sensor kit, this position will be a sensor, refer to the drawing of the sensor kit for more detail
 6. In case of using an infrared control, this position will be a receiver, refer to the drawing of the infrared control for more detail

Item	Name
1	Liquid pipe connection
2	Gas pipe connection
3	Drain pipe connection
4	Power supply entry hole
5	Transmission wiring entry hole
6	Air discharge opening
7	Air suction grille
8	Corner decoration cover
9	Drain hose
10	Knock out hole

	Model
256	FCQG100-140FVEB, FXFQ80-100AVEB
298	FCQHGT-140FVEB, FXFQ125AVEB

3D077130E