


Service Manual

Air Conditioner

Indoor Unit
CS-E12QD3EAW

Outdoor Unit
CU-E12QD3EA

Destination
Europe

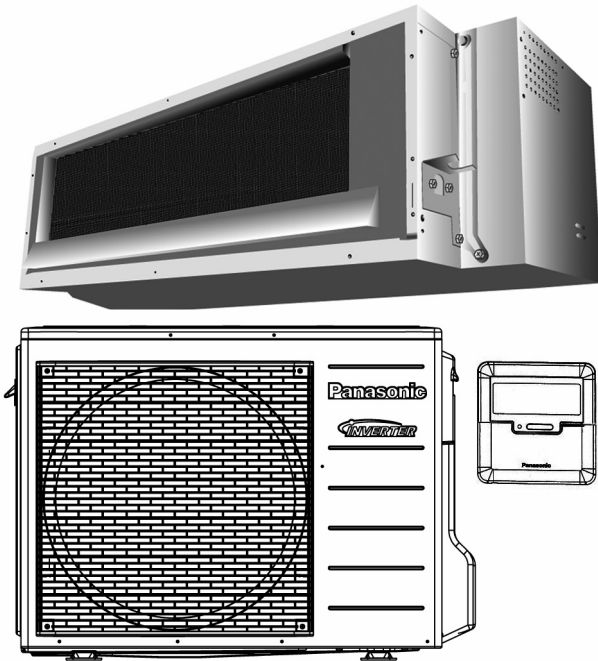


Please file and use this manual together with the service manual for Model No. CU-2E15PBE CU-2E18PBE CU-3E18PBE CU-4E23PBE, Order No. PAPAMY1301048CE and CU-4E27PBE CU-5E34PBE Order No. PAPAMY1303046CE

WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

IMPORTANT SAFETY NOTICE

There are special components used in this equipment which are important for safety. These parts are marked by  in the Schematic Diagrams, Circuit Board Diagrams, Exploded Views and Replacement Parts List. It is essential that these critical parts should be replaced with manufacturer's specified parts to prevent shock, fire or other hazards. Do not modify the original design without permission of manufacturer.



PRECAUTION OF LOW TEMPERATURE



In order to avoid frostbite, be assured of no refrigerant leakage during the installation or repairing of refrigerant circuit.

TABLE OF CONTENTS


1. Safety Precautions	3	15.5 Self-diagnosis Method	59
2. Specifications	5	16. Disassembly and Assembly Instructions	83
3. Features.....	20	16.1 Disassembly of Parts.....	83
4. Location of Controls and Components.....	21	17. Technical Data	86
4.1 Indoor Unit.....	21	17.1 Cool Mode Performance Data.....	86
4.2 Outdoor Unit	21	17.2 Heat Mode Performance Data.....	86
4.3 Remote Control	21	17.3 Fan Performance.....	87
5. Dimensions	22	18. Service Data	88
5.1 Indoor Unit.....	22	18.1 Cool Mode Outdoor Air Temperature Characteristic.....	88
5.2 Outdoor Unit	23	18.2 Heat Mode Outdoor Air Temperature Characteristic.....	89
6. Refrigeration Cycle Diagram	24	18.3 Piping Length Correction Factor.....	90
7. Block Diagram	25	19. Exploded View and Replacement Parts List	91
8. Wiring Connection Diagram	26	19.1 Indoor Unit.....	91
8.1 Indoor Unit.....	26	19.2 Outdoor Unit	94
8.2 Outdoor Unit	27		
9. Electronic Circuit Diagram	28		
9.1 Indoor Unit.....	28		
9.2 Outdoor Unit	29		
10. Printed Circuit Board	30		
10.1 Indoor Unit.....	30		
10.2 Outdoor Unit	31		
11. Installation Instruction	32		
11.1 Indoor Unit.....	33		
11.2 Outdoor Unit	40		
12. Operation and Control	44		
12.1 Basic Function	44		
12.2 Quiet Operation (Cooling Mode/Cooling area of Soft Dry Mode)	47		
12.3 Powerful Mode Operation.....	48		
12.4 Timer Control.....	48		
12.5 Auto Restart Control	48		
12.6 Indication Panel.....	48		
13. Protection Control.....	49		
13.1 Protection Control For All Operations.....	49		
13.2 Protection Control For Cooling & Soft Dry Operation.....	50		
13.3 Protection Control For Heating Operation.....	52		
14. Servicing Mode	53		
14.1 TEST RUN OPERATION (FOR PUMP DOWN/SERVICING PURPOSE).....	53		
15. Troubleshooting Guide	54		
15.1 Refrigeration Cycle System.....	54		
15.2 Relationship Between The Condition Of The Air Conditioner And Pressure And Electric Current.....	55		
15.3 Breakdown Self Diagnosis Function.....	56		
15.4 Error Codes Table	57		

1. Safety Precautions




- Read the following "SAFETY PRECAUTIONS" carefully before perform any servicing.
- Electrical work must be installed or serviced by a licensed electrician. Be sure to use the correct rating of the power plug and main circuit for the model installed.
- The caution items stated here must be followed because these important contents are related to safety. The meaning of each indication used is as below. Incorrect installation or servicing due to ignoring of the instruction will cause harm or damage, and the seriousness is classified by the following indications.

 WARNING	This indication shows the possibility of causing death or serious injury.
 CAUTION	This indication shows the possibility of causing injury or damage to properties.


- The items to be followed are classified by the symbols:

	This symbol denotes item that is PROHIBITED from doing.
---	---


 




- Carry out test run to confirm that no abnormality occurs after the servicing. Then, explain to user the operation, care and maintenance as stated in instructions. Please remind the customer to keep the operating instructions for future reference.

 WARNING	
1. Do not modify the machine, part, material during repairing service.	
2. If wiring unit is supplied as repairing part, do not repair or connect the wire even only partial wire break. Exchange the whole wiring unit.	
3. Do not wrench the fasten terminal. Pull it out or insert it straightly.	
4. Engage dealer or specialist for installation and servicing. If installation of servicing done by the user is defective, it will cause water leakage, electrical shock or fire.	
5. Install according to this installation instructions strictly. If installation is defective, it will cause water leakage, electric shock or fire.	
6. Use the attached accessories parts and specified parts for installation and servicing. Otherwise, it will cause the set to fall, water leakage, fire or electrical shock.	
7. Install at a strong and firm location which is able to withstand the set's weight. If the strength is not enough or installation is not properly done, the set will drop and cause injury.	
8. For electrical work, follow the local national wiring standard, regulation and the installation instruction. An independent circuit and single outlet must be used. If electrical circuit capacity is not enough or defect found in electrical work, it will cause electrical shock or fire.	
9. This equipment is strongly recommended to be installed with Earth Leakage Circuit Breaker (ELCB) or Residual Current Device (RCD). Otherwise, it may cause electrical shock and fire in case equipment breakdown or insulation breakdown.	
10. Do not use joint cable for indoor / outdoor connection cable. Use the specified Indoor/Outdoor connection cable, refer to installation instruction CONNECT THE CABLE TO THE INDOOR UNIT and connect tightly for indoor / outdoor connection. Clamp the cable so that no external force will be acted on the terminal. If connecting or fixing is not perfect, it will cause heat up or fire at the connection.	
11. Wire routing must be properly arranged so that control board cover is fixed properly. If control board cover is not fixed perfectly, it will cause heat-up or fire at the connection point of terminal, fire or electrical shock.	
12. When install or relocate air conditioner, do not let any substance other than the specified refrigerant, eg. air etc. mix into refrigeration cycle (piping). (Mixing of air etc. will cause abnormal high pressure in refrigeration cycle and result in explosion, injury etc.).	
13. Do not install outdoor unit near handrail of veranda. When installing air-conditioner unit at veranda of high rise building, child may climb up to outdoor unit and cross over the handrail and causing accident.	
14. This equipment must be properly earthed. Earth line must not be connected to gas pipe, water pipe, earth of lightning rod and telephone. Otherwise, it may cause electrical shock in case equipment breakdown or insulation breakdown.	
15. Keep away from small children, the thin film may cling to nose and mouth and prevent breathing.	
16. Do not use unspecified cord, modified cord, joint cord or extension cord for power supply cord. Do not share the single outlet with other electrical appliances. Poor contact, poor insulation or over current will cause electrical shock or fire.	
17. Tighten the flare nut with torque wrench according to specified method. If the flare nut is over-tightened, after a long period, the flare may break and cause refrigerant gas leakage.	
18. For R410A model, use piping, flare nut and tools which is specified for R410A refrigerant. Using of existing (R22) piping, flare nut and tools may cause abnormally high pressure in the refrigerant cycle (piping), and possibly result in explosion and injury. Thickness of copper pipes used with R410A must be more than 0.8 mm. Never use copper pipes thinner than 0.8 mm. It is desirable that the amount of residual oil less than 40 mg/10 m.	

**WARNING**

19. During installation, install the refrigerant piping properly before run the compressor. (Operation of compressor without fixing refrigeration piping and valves at opened condition will cause suck-in of air, abnormal high pressure in refrigeration cycle and result in explosion, injury etc).
20. During pump down operation, stop the compressor before remove the refrigeration piping. (Removal of refrigeration piping while compressor is operating and valves are opened condition will cause suck-in of air, abnormal high pressure in refrigeration cycle and result in explosion, injury etc.)
21. After completion of the installation servicing, confirm there is no leakage or refrigerant gas. It may generate toxic gas when the refrigerant contacts with fire.
22. Ventilate if there is refrigerant gas leakage during operation. It may cause toxic gas when the refrigerant contacts with fire.
23. Do not insert your fingers or other objects into the unit, high speed rotating fan may cause injury. 
24. Must not use other parts except original parts describe in catalog and manual.

**CAUTION**

1. Do not install the unit at place where leakage of flammable gas may occur. In case gas leaks and accumulates at surrounding of the unit, it may cause fire. 
2. Carry out drainage piping as mentioned in installation instructions. If drainage is not perfect, water may enter the room and damage the furniture.
3. Tighten the flare nut with torque wrench according to specified method. If the flare nut is over-tightened, after a long period, the flare may break and cause refrigerant gas leakage.
4. Do not touch outdoor unit air inlet and aluminium fin. It may cause injury. 
5. Select an installation location which is easy for maintenance.
6. Pb free solder has a higher melting point than standard solder; typically the melting point is 50°F – 70°F (30°C – 40°C) higher. Please use a high temperature solder iron. In case of the soldering iron with temperature control, please set it to 700 ± 20°F (370 ± 10°C). Pb free solder will tend to splash when heated too high (about 1100°F / 600°C).
7. Power supply connection to the room air conditioner.
Use power supply cord 3 x 1.5 mm² (1.0~1.75HP) type designation 60245 IEC 57 or heavier cord.
Connect the power supply cord of the air conditioner to the mains using one of the following method.
Power supply point should be in easily accessible place for power disconnection in case of emergency.
In some countries, permanent connection of this air conditioner to the power supply is prohibited.
 1. Power supply connection to the receptacle using power plug.
Use an approved 15/16A (1.0~1.75HP) power plug with earth pin for the connection to the socket.
 2. Power supply connection to a circuit breaker for the permanent connection.
Use an approved 16A circuit breaker for the permanent connection. It must be a double pole switch with a minimum 3.0 mm contact gap.
8. Do not release refrigerant during piping work for installation, servicing, reinstallation and during repairing a refrigerant parts. Take care of the liquid refrigerant, it may cause frostbite. 
9. Installation or servicing work: It may need two people to carry out the installation or servicing work.
10. Do not install this appliance in a laundry room or other location where water may drip from the ceiling, etc. 
11. Do not sit or step on the unit, you may fall down accidentally. 
12. Do not touch the sharp aluminium fin, sharp parts may cause injury.
If you are required to handle sharp parts during installation or servicing, please wear hand glove.
Sharp parts may cause injury. 

2. Specifications

MODEL			INDOOR	CS-E12QD3EAW					
			OUTDOOR	CU-E12QD3EA					
Performance Test Condition			EUROVENT						
Power Supply			Phase, Hz	Single, 50					
			V	220			230		
				Min.	Mid.	Max.	Min.	Mid.	Max.
Cooling	Capacity		kW	0.85	3.40	4.00	0.85	3.40	4.00
			BTU/h	2900	11600	13600	2900	11600	13600
			kcal/h	730	2920	3440	730	2920	3440
	Running Current		A	-	4.40	-	-	4.20	-
	Input Power		W	240	910	1.20k	240	910	1.20k
	Annual Consumption		kWh	-	455	-	-	455	-
	EER		W/W	3.54	3.74	3.33	3.54	3.74	3.33
			BTU/hW	12.08	12.75	11.33	12.08	12.75	11.33
			kcal/hW	3.04	3.21	2.87	3.04	3.21	2.87
	ErP	Pdesign	kW	3.4					
		SEER	W/W	5.6					
		Annual Consumption	kWh	213					
		Class		A+					
	Power Factor		%	-	94	-	-	94	-
	Indoor Noise (H / L / QLo)		dB-A (H/L/Q-Lo)	34 / 27 / 24			34 / 27 / 24		
			Power Level dB	50 / 43 / 40			50 / 43 / 40		
	Outdoor Noise (H / L)		dB-A (H/L/Q-Lo)	47 / - / -			47 / - / -		
			Power Level dB	62 / - / -			62 / - / -		
Heating	Capacity		kW	0.85	4.00	5.10	0.85	4.00	5.10
			BTU/h	2900	13600	17400	2900	13600	17400
			kcal/h	730	3440	4390	730	3440	4390
	Running Current		A	-	5.60	-	-	5.30	-
	Input Power		W	230	1.17k	1.60k	230	1.17k	1.60k
	COP		W/W	3.70	3.42	3.19	3.70	3.42	3.19
			BTU/hW	12.61	11.62	10.88	12.61	11.62	10.88
			kcal/hW	3.17	2.94	2.74	3.17	2.94	2.74
	ErP	Pdesign	kW	2.8					
		Tbivalent	°C	-10					
		SCOP	W/W	3.8					
		Annual Consumption	kWh	1032					
		Class		A					
	Power Factor		%	-	95	-	-	96	-
	Indoor Noise (H / L / QLo)		dB-A (H/L/Q-Lo)	36 / 28 / 25			36 / 28 / 25		
			Power Level dB	52 / 44 / 41			52 / 44 / 41		
	Outdoor Noise (H / L)		dB-A (H/L/Q-Lo)	48 / - / -			48 / - / -		
			Power Level dB	63 / - / -			63 / - / -		
※3 Low Temp. : Capacity (kW) / I. Power (W) / COP			3.70 / 1.42k / 2.61						
※4 Extr Low Temp. : Capacity (kW) / I. Power (W) / COP			3.00 / 1.32k / 2.27						
Max Current (A) / Max Input Power (W)			8.20 / 1.80k						
Starting Current (A)			5.60						

MODEL				INDOOR	CS-E12QD3EAW	
				OUTDOOR	CU-E12QD3EA	
Compressor		Type			Hermetic Motor / Rotary	
		Motor Type			Brushless (4-poles)	
		Output Power			900	
Indoor Fan	Type				Sirocco	
	Material				ABS	
	Motor Type				DC Motor (8-poles)	
	Output Power			W	30	
	Speed	QLo	Cool	rpm	1020	
			Heat	rpm	1040	
		Lo	Cool	rpm	1070	
			Heat	rpm	1120	
		Me	Cool	rpm	1230	
			Heat	rpm	1300	
		Hi	Cool	rpm	1400	
			Heat	rpm	1490	
		SHi	Cool	rpm	1480	
			Heat	rpm	1540	
Outdoor Fan	Type				Propeller Fan	
	Material				PP	
	Motor Type				DC (8-poles)	
	Output Power			W	40	
	Speed	Hi	Cool	rpm	620	
			Heat	rpm	600	
Moisture Removal				L/h (Pt/h)	2.0 (4.2)	
Indoor Airflow		QLo	Cool	m³/min (ft³/min)	4.9 (173)	
			Heat	m³/min (ft³/min)	5.1 (180)	
		Lo	Cool	m³/min (ft³/min)	5.5 (194)	
			Heat	m³/min (ft³/min)	6.1 (215)	
		Me	Cool	m³/min (ft³/min)	7.4 (261)	
			Heat	m³/min (ft³/min)	8.2 (289)	
		Hi	Cool	m³/min (ft³/min)	9.3 (330)	
			Heat	m³/min (ft³/min)	10.4 (365)	
		SHi	Cool	m³/min (ft³/min)	10.3 (363)	
			Heat	m³/min (ft³/min)	11.0 (388)	
Outdoor Airflow		Hi	Cool	m³/min (ft³/min)	36.0 (1270)	
			Heat	m³/min (ft³/min)	32.4 (1145)	
Refrigeration Cycle		Control Device			Expansion Valve	
		Refrigerant Oil		cm³	FV50S (450)	
		Refrigerant Type		g (oz)	R410A, 1.05k (37.1)	
Dimension		Height (I/D / O/D)		mm (inch)	235 (9-9/32) / 695 (27-3/8)	
		Width (I/D / O/D)		mm (inch)	750 (29-17/32) / 875 (34-15/32)	
		Depth (I/D / O/D)		mm (inch)	370 (14-19/32) / 320 (12-5/8)	
Weight		Net (I/D / O/D)		kg (lb)	17 (37) / 45 (99)	

MODEL		INDOOR	CS-E12QD3EAW	
		OUTDOOR	CU-E12QD3EA	
Piping	Pipe Diameter (Liquid / Gas)	mm (inch)	6.35 (1/4) / 9.52 (3/8)	
	Standard Length	m (ft)	5.0 (16.4)	
	Length Range (min - max)	m (ft)	3 (9.8) ~ 20 (65.6)	
	I/D & O/D Height Different	m (ft)	15 (49.2)	
	Additional Gas Amount	g/m (oz/ft)	20 (0.2)	
	Length for Additional Gas	m (ft)	7.5 (24.6)	
Drain Hose	Inner Diameter	mm	14	
	Length	mm	255	
Indoor Heat Exchanger	Fin Material		Aluminium (Pre Coat)	
	Fin Type		Louver Fin	
	Row x Stage x FPI		2 x 8 x 20	
	Size (W x H x L)	mm	620 x 230.2 x 44	
Outdoor Heat Exchanger	Fin Material		Aluminium (Pre Coat)	
	Fin Type		Corrugated Fin	
	Row x Stage x FPI		2 x 31 x 17	
	Size (W x H x L)	mm	36.4 x 651 x 640	
Power Supply			Outdoor Power Supply	
Power Supply Cord		A	Nil	
Thermostat			Electronic Control	
Protection Device			Electronic Control	
			Dry Bulb	Wet Bulb
Indoor Operation Range	Cooling	Maximum °C	32	23
		Minimum °C	16	11
	Heating	Maximum °C	30	-
		Minimum °C	16	-
Outdoor Operation Range	Cooling	Maximum °C	43	26
		Minimum °C	-10	-
	Heating	Maximum °C	24	18
		Minimum °C	-10	-

- Cooling capacities are based on indoor temperature of 27°C Dry Bulb (80.6°F Dry Bulb), 19.0°C Wet Bulb (66.2°F Wet Bulb) and outdoor air temperature of 35°C Dry Bulb (95°F Dry Bulb), 24°C Wet Bulb (75.2°F Wet Bulb)
- Heating capacities are based on indoor temperature of 20°C Dry Bulb (68°F Dry Bulb) and outdoor air temperature of 7°C Dry Bulb (44.6°F Dry Bulb), 6°C Wet Bulb (42.8°F Wet Bulb)
- ※3 Heating low temperature capacity, Input Power and COP measured at 230 V, indoor temperature 20°C, outdoor 2/1°C
- ※4 Heating extreme low temperature capacity, Input Power and COP measured at 230 V indoor temperature 20°C, outdoor -7/-8°C
- Standby power consumption ≤0.7W (when switched OFF by remote control, except under self protection control).
- Specifications are subjected to change without notice for further improvement.

- **Multi Split Combination Possibility:**

- A single outdoor unit enables air conditioning of up to two separate rooms for CU-2E15PBE, CU-2E18PBE.
- A single outdoor unit enables air conditioning of up to three separate rooms for CU-3E18PBE.
- A single outdoor unit enables air conditioning of up to four separate rooms for CU-4E23PBE.
- A single outdoor unit enables air conditioning of up to four separate rooms for CU-4E27PBE.
- A single outdoor unit enables air conditioning of up to five separate rooms for CU-5E34PBE.

CONNECTABLE INDOOR UNIT			OUTDOOR UNIT										
			CU-2E15PBE		CU-2E18PBE		CU-3E18PBE			CU-4E23PBE			
Type/ROOM			A	B	A	B	A	B	C	A	B	C	D
Wall	1.6kW	CS-ME5PKE	●	●	●	●	●	●	●	●	●	●	●
	2.0kW	CS-E7PKEW CS-XE7PKEW	●	●	●	●	●	●	●	●	●	●	●
	2.5kW	CS-E9PKEW CS-XE9PKEW CS-ME9PD3EA CS-ME9PB4EA CS-E9GFEW CS-E9GFEW-2 CS-E9PD3EA	●	●	●	●	●	●	●	●	●	●	●
	3.2kW	CS-E12PKEW CS-XE12PKEW CS-ME12PD3EA CS-ME12PB4EA CS-E12GFEW CS-E12GFEW-2 CS-E12PD3EA CS-E12QD3EAW	●	●	●	●	●	●	●	●	●	●	●
	4.0kW	CS-E15PKEW CS-XE15PKEW	—	—	—	—	●	●	●	●	●	●	●
	5.0kW	CS-E18PKEW CS-XE18PKEW CS-ME18PD3EA CS-ME18PB4EA CS-E18GFEW CS-E18GFEW-2	—	—	—	—	●	●	●	●	●	●	●
	6.0kW	CS-E21PKEW CS-XE21PKEW CS-ME21PB4EA	—	—	—	—	—	—	—	●	●	●	●
	Capacity range of connectable indoor units		From 3.2kW to 5.6kW		From 3.2kW to 6.4kW		From 4.5kW to 9.0kW			From 4.5kW to 11.0 kW			
Pipe length	1 room maximum pipe length (m)	20		20		25			25				
	Allowable elevation (m)	10		10		15			15				
	Total allowable pipe length (m)	30		30		50			60				
	Total pipe length for maximum chargeless length (m)	20		20		30			30				
	Additional gas amount over chargeless length (g/m)	15		15		20			20				
Note: “●” : Available													
Remarks for CU-2E15PBE / CU-2E18PBE 1. At least two indoor units must be connected. 2. The total nominal cooling capacity of indoor units that will be connected to outdoor unit must be within connectable capacity range of indoor unit. (as shown in the table above) Example: The indoor units' combination below is possible to connect to CU-2E15PBE. (Total nominal capacity of indoor units is between 3.2kW to 5.6kW) 1) Two CS-E7PKEW only (Total nominal cooling capacity is 4.0kW) 2) One CS-E7PKEW and one CS-E9PKEW. (Total nominal cooling capacity is 4.5kW)													
Remarks for CU-3E18PBE / CU-4E23PBE 1. At least two indoor units must be connected. 2. The total nominal cooling capacity of indoor units that will be connected to outdoor unit must be within connectable capacity range of indoor unit. (as shown in the table above) Example: The indoor units' combination below is possible to connect to CU-3E18PBE. (Total nominal capacity of indoor units is between 4.5kW to 9.0kW) 1) Two CS-E9PKEW only (Total nominal cooling capacity is 5.0kW) 2) Three CS-E12PKEW. (Total nominal cooling capacity is 9.6kW)													

CONNECTABLE INDOOR UNIT			OUTDOOR UNIT											
			CU-4E27PBE				CU-5E34PBE							
Type/ROOM			A	B	C	D	A	B	C	D	E			
Wall	2.0kW	CS-E7PKEW CS-XE7PKEW	●	●	●	●	●	●	●	●	●			
	2.5kW	CS-E9PKEW CS-XE9PKEW CS-ME9PD3EA CS-ME9PB4EA CS-E9GFEW CS-E9GFEW-2 CS-E9PD3EA	●	●	●	●	●	●	●	●	●			
		3.2kW	CS-E12PKEW CS-XE12PKEW CS-ME12PD3EA CS-ME12PB4EA CS-E12GFEW CS-E12GFEW-2 CS-E12PD3EA CS-E12QD3EAW	●	●	●	●	●	●	●	●	●		
			4.0kW	CS-E15PKEW CS-XE15PKEW	●	●	●	●	●	●	●	●	●	
			5.0kW	CS-E18PKEW CS-XE18PKEW CS-ME18PD3EA CS-ME18PB4EA CS-E18GFEW CS-E18GFEW-2	●	●	●	●	●	●	●	●	●	
				6.0kW	CS-E21PKEW CS-XE21PKEW CS-ME21PB4EA	●	●	●	●	●	●	●	●	●
					7.0kW	CS-E24PKEW	●	●	●	●	●	●	●	●
	Capacity range of connectable indoor units			From 4.5kW to 13.6kW				From 4.5kW to 17.5 kW						
Pipe length	1 room maximum pipe length (m)		25				25							
	Allowable elevation (m)		15				15							
	Total allowable pipe length (m)		70				80							
	Total pipe length for maximum chargeless length (m)		45				45							
	Additional gas amount over chargeless length (g/m)		20				20							
	Note: “●” : Available													
Remarks for CU-4E27PBE / CU-5E34PBE 1. At least two indoor units must be connected. 2. The total nominal cooling capacity of indoor units that will be connected to outdoor unit must be within connectable capacity range of indoor unit. (as shown in the table above) Example: The indoor units' combination below is possible to connect to CU-4E27PBE. (Total nominal capacity of indoor units is between 4.5kW to 13.6kW) 1) Two CS-E9PKEW only (Total nominal cooling capacity is 5.0kW) 2) Three CS-E12PKEW. (Total nominal cooling capacity is 9.6kW)														

- Indoor Unit : CS-ME5PKE, CS-E7/9/12PKEW, CS-E9/12GFEW, CS-ME9/12PB4EA, CS-ME9/12PD3EA, CS-E9/12PD3EA, CS-E12QD3EAW
- Outdoor Unit : CU-2E15PBE

2 Room		1 Room	
Indoor Unit Capacity (kW)	Total Indoor Capacity (kW)	Indoor Unit Capacity (kW)	Total Indoor Capacity (kW)
1.6 + 1.6	3.2	1.6	1.6
1.6 + 2.0	3.6	2.0	2.0
1.6 + 2.5	4.1	2.5	2.5
1.6 + 2.8	4.4	2.8	2.8
1.6 + 3.2	4.8	3.2	3.2
2.0 + 2.0	4.0		
2.0 + 2.5	4.5		
2.0 + 2.8	4.8		
2.0 + 3.2	5.2		
2.5 + 2.5	5.0		
2.5 + 2.8	5.3		
2.8 + 2.8	5.6		

- Indoor Unit : CS-ME5PKE, CS-E7/9/12PKEW, CS-E9/12GFEW, CS-ME9/12PB4EA, CS-ME9/12PD3EA, CS-E9/12PD3EA, CS-E12QD3EAW
- Outdoor Unit : CU-2E18PBE

2 Room		1 Room	
Indoor Unit Capacity (kW)	Total Indoor Capacity (kW)	Indoor Unit Capacity (kW)	Total Indoor Capacity (kW)
1.6 + 1.6	3.2	1.6	1.6
1.6 + 2.0	3.6	2.0	2.0
1.6 + 2.5	4.1	2.5	2.5
1.6 + 2.8	4.4	2.8	2.8
1.6 + 3.2	4.8	3.2	3.2
2.0 + 2.0	4.0		
2.0 + 2.5	4.5		
2.0 + 2.8	4.8		
2.0 + 3.2	5.2		
2.5 + 2.5	5.0		
2.5 + 2.8	5.3		
2.5 + 3.2	5.7		
2.8 + 2.8	5.6		
2.8 + 3.2	6.0		
3.2 + 3.2	6.4		

- Indoor Unit : CS-ME5PKE, CS-E7/9/12/15/18PKEW, CS-E9/12/18GFEW, CS-ME9/12/18PB4EA, CS-ME9/12/18PD3EA, CS-E9/12PD3EA, CS-E12QD3EAW
- Outdoor Unit : CU-3E18PBE

3 Room		2 Room		1 Room	
Indoor Unit Capacity (kW)	Total Indoor Capacity (kW)	Indoor Unit Capacity (kW)	Total Indoor Capacity (kW)	Indoor Unit Capacity (kW)	Total Indoor Capacity (kW)
1.6 + 1.6 + 1.6	4.8	1.6 + 3.2	4.8	1.6	1.6
1.6 + 1.6 + 2.0	5.2	1.6 + 4.0	5.6	2.0	2.0
1.6 + 1.6 + 2.5	5.7	1.6 + 5.0	6.6	2.5	2.5
1.6 + 1.6 + 2.8	6.0	2.0 + 2.5	4.5	2.8	2.8
1.6 + 1.6 + 3.2	6.4	2.0 + 2.8	4.8	3.2	3.2
1.6 + 1.6 + 4.0	7.2	2.0 + 3.2	5.2	4.0	4.0
1.6 + 1.6 + 5.0	8.2	2.0 + 4.0	6.0	5.0	5.0
1.6 + 2.0 + 2.0	5.6	2.0 + 5.0	7.0		
1.6 + 2.0 + 2.5	6.1	2.5 + 2.5	5.0		
1.6 + 2.0 + 2.8	6.4	2.5 + 2.8	5.3		
1.6 + 2.0 + 3.2	6.8	2.5 + 3.2	5.7		
1.6 + 2.0 + 4.0	7.6	2.5 + 4.0	6.5		
1.6 + 2.0 + 5.0	8.6	2.5 + 5.0	7.5		
1.6 + 2.5 + 2.5	6.6	2.8 + 2.8	5.6		
1.6 + 2.5 + 2.8	6.9	2.8 + 3.2	6.0		
1.6 + 2.5 + 3.2	7.3	2.8 + 4.0	6.8		
1.6 + 2.5 + 4.0	8.1	2.8 + 5.0	7.8		
1.6 + 2.8 + 2.8	7.2	3.2 + 3.2	6.4		
1.6 + 2.8 + 3.2	7.6	3.2 + 4.0	7.2		
1.6 + 2.8 + 4.0	8.4	3.2 + 5.0	8.2		
1.6 + 3.2 + 3.2	8.0	4.0 + 4.0	8.0		
1.6 + 3.2 + 4.0	8.8	4.0 + 5.0	9.0		
2.0 + 2.0 + 2.0	6.0				
2.0 + 2.0 + 2.5	6.5				
2.0 + 2.0 + 2.8	6.8				
2.0 + 2.0 + 3.2	7.2				
2.0 + 2.0 + 4.0	8.0				
2.0 + 2.0 + 5.0	9.0				
2.0 + 2.5 + 2.5	7.0				
2.0 + 2.5 + 2.8	7.3				
2.0 + 2.5 + 3.2	7.7				
2.0 + 2.5 + 4.0	8.5				
2.0 + 2.8 + 2.8	7.6				
2.0 + 2.8 + 3.2	8.0				
2.0 + 2.8 + 4.0	8.8				
2.0 + 3.2 + 3.2	8.4				
2.5 + 2.5 + 2.5	7.5				
2.5 + 2.5 + 2.8	7.8				
2.5 + 2.5 + 3.2	8.2				
2.5 + 2.5 + 4.0	9.0				
2.5 + 2.8 + 2.8	8.1				
2.5 + 2.8 + 3.2	8.5				
2.5 + 3.2 + 3.2	8.9				
2.8 + 2.8 + 2.8	8.4				
2.8 + 2.8 + 3.2	8.8				

- Indoor Unit : CS-ME5PKE, CS-E7/9/12/15/18/21PKEW, CS-E9/12/18GFEW, CS-ME9/12/18/21PB4EA, CS-ME9/12/18PD3EA, CS-E9/12PD3EA, CS-E12QD3EAW
- Outdoor Unit : CU-4E23PBE

4 Room		3 Room		2 Room		1 Room	
Indoor Unit Capacity (kW)	Total Indoor Capacity (kW)	Indoor Unit Capacity (kW)	Total Indoor Capacity (kW)	Indoor Unit Capacity (kW)	Total Indoor Capacity (kW)	Indoor Unit Capacity (kW)	Total Indoor Capacity (kW)
1.6 + 1.6 + 1.6 + 1.6	6.4	1.6 + 1.6 + 1.6	4.8	1.6 + 3.2	4.8	1.6	1.6
1.6 + 1.6 + 1.6 + 2.0	6.8	1.6 + 1.6 + 2.0	5.2	1.6 + 4.0	5.6	2.0	2.0
1.6 + 1.6 + 1.6 + 2.5	7.3	1.6 + 1.6 + 2.5	5.7	1.6 + 5.0	6.6	2.5	2.5
1.6 + 1.6 + 1.6 + 2.8	7.6	1.6 + 1.6 + 2.8	6.0	1.6 + 6.0	7.6	2.8	2.8
1.6 + 1.6 + 1.6 + 3.2	8.0	1.6 + 1.6 + 3.2	6.4	2.0 + 2.5	4.5	3.2	3.2
1.6 + 1.6 + 1.6 + 4.0	8.8	1.6 + 1.6 + 4.0	7.2	2.0 + 2.8	4.8	4.0	4.0
1.6 + 1.6 + 1.6 + 5.0	9.8	1.6 + 1.6 + 5.0	8.2	2.0 + 3.2	5.2	5.0	5.0
1.6 + 1.6 + 1.6 + 6.0	10.8	1.6 + 1.6 + 6.0	9.2	2.0 + 4.0	6.0	6.0	6.0
1.6 + 1.6 + 2.0 + 2.0	7.2	1.6 + 2.0 + 2.0	5.6	2.0 + 5.0	7.0		
1.6 + 1.6 + 2.0 + 2.5	7.7	1.6 + 2.0 + 2.5	6.1	2.0 + 6.0	8.0		
1.6 + 1.6 + 2.0 + 2.8	8.0	1.6 + 2.0 + 2.8	6.4	2.5 + 2.5	5.0		
1.6 + 1.6 + 2.0 + 3.2	8.4	1.6 + 2.0 + 3.2	6.8	2.5 + 2.8	5.3		
1.6 + 1.6 + 2.0 + 4.0	9.2	1.6 + 2.0 + 4.0	7.6	2.5 + 3.2	5.7		
1.6 + 1.6 + 2.0 + 5.0	10.2	1.6 + 2.0 + 5.0	8.6	2.5 + 4.0	6.5		
1.6 + 1.6 + 2.5 + 2.5	8.2	1.6 + 2.0 + 6.0	9.6	2.5 + 5.0	7.5		
1.6 + 1.6 + 2.5 + 2.8	8.5	1.6 + 2.5 + 2.5	6.6	2.5 + 6.0	8.5		
1.6 + 1.6 + 2.5 + 3.2	8.9	1.6 + 2.5 + 2.8	6.9	2.8 + 2.8	5.6		
1.6 + 1.6 + 2.5 + 4.0	9.7	1.6 + 2.5 + 3.2	7.3	2.8 + 3.2	6.0		
1.6 + 1.6 + 2.5 + 5.0	10.7	1.6 + 2.5 + 4.0	8.1	2.8 + 4.0	6.8		
1.6 + 1.6 + 2.8 + 2.8	8.8	1.6 + 2.5 + 5.0	9.1	2.8 + 5.0	7.8		
1.6 + 1.6 + 2.8 + 3.2	9.2	1.6 + 2.5 + 6.0	10.1	2.8 + 6.0	8.8		
1.6 + 1.6 + 2.8 + 4.0	10.0	1.6 + 2.8 + 2.8	7.2	3.2 + 3.2	6.4		
1.6 + 1.6 + 2.8 + 5.0	11.0	1.6 + 2.8 + 3.2	7.6	3.2 + 4.0	7.2		
1.6 + 1.6 + 3.2 + 3.2	9.6	1.6 + 2.8 + 4.0	8.4	3.2 + 5.0	8.2		
1.6 + 1.6 + 3.2 + 4.0	10.4	1.6 + 2.8 + 5.0	9.4	3.2 + 6.0	9.2		
1.6 + 2.0 + 2.0 + 2.0	7.6	1.6 + 2.8 + 6.0	10.4	4.0 + 4.0	8.0		
1.6 + 2.0 + 2.0 + 2.5	8.1	1.6 + 3.2 + 3.2	8.0	4.0 + 5.0	9.0		
1.6 + 2.0 + 2.0 + 2.8	8.4	1.6 + 3.2 + 4.0	8.8	4.0 + 6.0	10.0		
1.6 + 2.0 + 2.0 + 3.2	8.8	1.6 + 3.2 + 5.0	9.8	5.0 + 5.0	10.0		
1.6 + 2.0 + 2.0 + 4.0	9.6	1.6 + 3.2 + 6.0	10.8	5.0 + 6.0	11.0		
1.6 + 2.0 + 2.0 + 5.0	10.6	1.6 + 4.0 + 4.0	9.6				
1.6 + 2.0 + 2.5 + 2.5	8.6	1.6 + 4.0 + 5.0	10.6				
1.6 + 2.0 + 2.5 + 2.8	8.9	2.0 + 2.0 + 2.0	6.0				
1.6 + 2.0 + 2.5 + 3.2	9.3	2.0 + 2.0 + 2.5	6.5				
1.6 + 2.0 + 2.5 + 4.0	10.1	2.0 + 2.0 + 2.8	6.8				
1.6 + 2.0 + 2.8 + 2.8	9.2	2.0 + 2.0 + 3.2	7.2				
1.6 + 2.0 + 2.8 + 3.2	9.6	2.0 + 2.0 + 4.0	8.0				
1.6 + 2.0 + 2.8 + 4.0	10.4	2.0 + 2.0 + 5.0	9.0				
1.6 + 2.0 + 3.2 + 3.2	10.0	2.0 + 2.0 + 6.0	10.0				
1.6 + 2.0 + 3.2 + 4.0	10.8	2.0 + 2.5 + 2.5	7.0				
1.6 + 2.5 + 2.5 + 2.5	9.1	2.0 + 2.5 + 2.8	7.3				
1.6 + 2.5 + 2.5 + 2.8	9.4	2.0 + 2.5 + 3.2	7.7				
1.6 + 2.5 + 2.5 + 3.2	9.8	2.0 + 2.5 + 4.0	8.5				
1.6 + 2.5 + 2.5 + 4.0	10.6	2.0 + 2.5 + 5.0	9.5				
1.6 + 2.5 + 2.8 + 2.8	9.7	2.0 + 2.5 + 6.0	10.5				
1.6 + 2.5 + 2.8 + 3.2	10.1	2.0 + 2.8 + 2.8	7.6				
1.6 + 2.5 + 2.8 + 4.0	10.9	2.0 + 2.8 + 3.2	8.0				
1.6 + 2.5 + 3.2 + 3.2	10.5	2.0 + 2.8 + 4.0	8.8				
1.6 + 2.8 + 2.8 + 2.8	10.0	2.0 + 2.8 + 5.0	9.8				
1.6 + 2.8 + 2.8 + 3.2	10.4	2.0 + 2.8 + 6.0	10.8				
1.6 + 2.8 + 3.2 + 3.2	10.8	2.0 + 3.2 + 3.2	8.4				
2.0 + 2.0 + 2.0 + 2.0	8.0	2.0 + 3.2 + 4.0	9.2				
2.0 + 2.0 + 2.0 + 2.5	8.5	2.0 + 3.2 + 5.0	10.2				
2.0 + 2.0 + 2.0 + 2.8	8.8	2.0 + 4.0 + 4.0	10.0				
2.0 + 2.0 + 2.0 + 3.2	9.2	2.0 + 4.0 + 5.0	11.0				
2.0 + 2.0 + 2.0 + 4.0	10.0	2.5 + 2.5 + 2.5	7.5				
2.0 + 2.0 + 2.0 + 5.0	11.0	2.5 + 2.5 + 2.8	7.8				
2.0 + 2.0 + 2.5 + 2.5	9.0	2.5 + 2.5 + 3.2	8.2				

4 Room		3 Room		2 Room		1 Room	
Indoor Unit Capacity (kW)	Total Indoor Capacity (kW)	Indoor Unit Capacity (kW)	Total Indoor Capacity (kW)	Indoor Unit Capacity (kW)	Total Indoor Capacity (kW)	Indoor Unit Capacity (kW)	Total Indoor Capacity (kW)
2.0 + 2.0 + 2.5 + 2.8	9.3	2.5 + 2.5 + 4.0	9.0				
2.0 + 2.0 + 2.5 + 3.2	9.7	2.5 + 2.5 + 5.0	10.0				
2.0 + 2.0 + 2.5 + 4.0	10.5	2.5 + 2.5 + 6.0	11.0				
2.0 + 2.0 + 2.8 + 2.8	9.6	2.5 + 2.8 + 2.8	8.1				
2.0 + 2.0 + 2.8 + 3.2	10.0	2.5 + 2.8 + 3.2	8.5				
2.0 + 2.0 + 2.8 + 4.0	10.8	2.5 + 2.8 + 4.0	9.3				
2.0 + 2.0 + 3.2 + 3.2	10.4	2.5 + 2.8 + 5.0	10.3				
2.0 + 2.5 + 2.5 + 2.5	9.5	2.5 + 3.2 + 3.2	8.9				
2.0 + 2.5 + 2.5 + 2.8	9.8	2.5 + 3.2 + 4.0	9.7				
2.0 + 2.5 + 2.5 + 3.2	10.2	2.5 + 3.2 + 5.0	10.7				
2.0 + 2.5 + 2.5 + 4.0	11.0	2.5 + 4.0 + 4.0	10.5				
2.0 + 2.5 + 2.8 + 2.8	10.1	2.8 + 2.8 + 2.8	8.4				
2.0 + 2.5 + 2.8 + 3.2	10.5	2.8 + 2.8 + 3.2	8.8				
2.0 + 2.5 + 3.2 + 3.2	10.9	2.8 + 2.8 + 4.0	9.6				
2.0 + 2.8 + 2.8 + 2.8	10.4	2.8 + 2.8 + 5.0	10.6				
2.0 + 2.8 + 2.8 + 3.2	10.8	2.8 + 3.2 + 3.2	9.2				
2.5 + 2.5 + 2.5 + 2.5	10.0	2.8 + 3.2 + 4.0	10.0				
2.5 + 2.5 + 2.5 + 2.8	10.3	2.8 + 3.2 + 5.0	11.0				
2.5 + 2.5 + 2.5 + 3.2	10.7	2.8 + 4.0 + 4.0	10.8				
2.5 + 2.5 + 2.8 + 2.8	10.6	3.2 + 3.2 + 3.2	9.6				
2.5 + 2.5 + 2.8 + 3.2	11.0	3.2 + 3.2 + 4.0	10.4				
2.5 + 2.8 + 2.8 + 2.8	10.9						

- Indoor Unit : CS-E7/9/12/15/18/21/24PKEW, CS-E9/12/18GFEW, CS-ME9/12/18/21PB4EA, CS-ME9/12/18PD3EA, CS-E9/12PD3EA, CS-E12QD3EAW
- Outdoor Unit : CU-4E27PBE

4 Room		3 Room		2 Room		1 Room	
Indoor Unit Capacity (kW)	Total Indoor Capacity (kW)	Indoor Unit Capacity (kW)	Total Indoor Capacity (kW)	Indoor Unit Capacity (kW)	Total Indoor Capacity (kW)	Indoor Unit Capacity (kW)	Total Indoor Capacity (kW)
2.0+2.0+2.0+2.0	8.0	2.0+2.0+2.0	6.0	2.0+2.5	4.5	2.0	2.0
2.0+2.0+2.0+2.5	8.5	2.0+2.0+2.5	6.5	2.0+2.8	4.8	2.5	2.5
2.0+2.0+2.0+2.8	8.8	2.0+2.0+2.8	6.8	2.0+3.2	5.2	2.8	2.8
2.0+2.0+2.0+3.2	9.2	2.0+2.0+3.2	7.2	2.0+4.0	6.0	3.2	3.2
2.0+2.0+2.0+4.0	10.0	2.0+2.0+4.0	8.0	2.0+5.0	7.0	4.0	4.0
2.0+2.0+2.0+5.0	11.0	2.0+2.0+5.0	9.0	2.0+6.0	8.0	5.0	5.0
2.0+2.0+2.0+6.0	12.0	2.0+2.0+6.0	10.0	2.0+7.0	9.0	6.0	6.0
2.0+2.0+2.0+7.0	13.0	2.0+2.0+7.0	11.0	2.5+2.5	5.0	7.0	7.0
2.0+2.0+2.5+2.5	9.0	2.0+2.5+2.5	7.0	2.5+2.8	5.3		
2.0+2.0+2.5+2.8	9.3	2.0+2.5+2.8	7.3	2.5+3.2	5.7		
2.0+2.0+2.5+3.2	9.7	2.0+2.5+3.2	7.7	2.5+4.0	6.5		
2.0+2.0+2.5+4.0	10.5	2.0+2.5+4.0	8.5	2.5+5.0	7.5		
2.0+2.0+2.5+5.0	11.5	2.0+2.5+5.0	9.5	2.5+6.0	8.5		
2.0+2.0+2.5+6.0	12.5	2.0+2.5+6.0	10.5	2.5+7.0	9.5		
2.0+2.0+2.5+7.0	13.5	2.0+2.5+7.0	11.5	2.8+2.8	5.6		
2.0+2.0+2.8+2.8	9.6	2.0+2.8+2.8	7.6	2.8+3.2	6.0		
2.0+2.0+2.8+3.2	10.0	2.0+2.8+3.2	8.0	2.8+4.0	6.8		
2.0+2.0+2.8+4.0	10.8	2.0+2.8+4.0	8.8	2.8+5.0	7.8		
2.0+2.0+2.8+5.0	11.8	2.0+2.8+5.0	9.8	2.8+6.0	8.8		
2.0+2.0+2.8+6.0	12.8	2.0+2.8+6.0	10.8	2.8+7.0	9.8		
2.0+2.0+3.2+3.2	10.4	2.0+2.8+7.0	11.8	3.2+3.2	6.4		
2.0+2.0+3.2+4.0	11.2	2.0+3.2+3.2	8.4	3.2+4.0	7.2		
2.0+2.0+3.2+5.0	12.2	2.0+3.2+4.0	9.2	3.2+5.0	8.2		
2.0+2.0+3.2+6.0	13.2	2.0+3.2+5.0	10.2	3.2+6.0	9.2		
2.0+2.0+4.0+4.0	12.0	2.0+3.2+6.0	11.2	3.2+7.0	10.2		
2.0+2.0+4.0+5.0	13.0	2.0+3.2+7.0	12.2	4.0+4.0	8.0		
2.0+2.5+2.5+2.5	9.5	2.0+4.0+4.0	10.0	4.0+5.0	9.0		
2.0+2.5+2.5+2.8	9.8	2.0+4.0+5.0	11.0	4.0+6.0	10.0		
2.0+2.5+2.5+3.2	10.2	2.0+4.0+6.0	12.0	4.0+7.0	11.0		
2.0+2.5+2.5+4.0	11.0	2.0+4.0+7.0	13.0	5.0+5.0	10.0		
2.0+2.5+2.5+5.0	12.0	2.0+5.0+5.0	12.0	5.0+6.0	11.0		
2.0+2.5+2.5+6.0	13.0	2.0+5.0+6.0	13.0	5.0+7.0	12.0		
2.0+2.5+2.8+2.8	10.1	2.5+2.5+2.5	7.5	6.0+6.0	12.0		
2.0+2.5+2.8+3.2	10.5	2.5+2.5+2.8	7.8	6.0+7.0	13.0		
2.0+2.5+2.8+4.0	11.3	2.5+2.5+3.2	8.2				
2.0+2.5+2.8+5.0	12.3	2.5+2.5+4.0	9.0				
2.0+2.5+2.8+6.0	13.3	2.5+2.5+5.0	10.0				
2.0+2.5+3.2+3.2	10.9	2.5+2.5+6.0	11.0				
2.0+2.5+3.2+4.0	11.7	2.5+2.5+7.0	12.0				
2.0+2.5+3.2+5.0	12.7	2.5+2.8+2.8	8.1				
2.0+2.5+4.0+4.0	12.5	2.5+2.8+3.2	8.5				
2.0+2.5+4.0+5.0	13.5	2.5+2.8+4.0	9.3				
2.0+2.8+2.8+2.8	10.4	2.5+2.8+5.0	10.3				
2.0+2.8+2.8+3.2	10.8	2.5+2.8+6.0	11.3				
2.0+2.8+2.8+4.0	11.6	2.5+2.8+7.0	12.3				
2.0+2.8+2.8+5.0	12.6	2.5+3.2+3.2	8.9				
2.0+2.8+2.8+6.0	13.6	2.5+3.2+4.0	9.7				
2.0+2.8+3.2+3.2	11.2	2.5+3.2+5.0	10.7				
2.0+2.8+3.2+4.0	12.0	2.5+3.2+6.0	11.7				
2.0+2.8+3.2+5.0	13.0	2.5+3.2+7.0	12.7				
2.0+2.8+4.0+4.0	12.8	2.5+4.0+4.0	10.5				
2.0+3.2+3.2+3.2	11.6	2.5+4.0+5.0	11.5				
2.0+3.2+3.2+4.0	12.4	2.5+4.0+6.0	12.5				
2.0+3.2+3.2+5.0	13.4	2.5+4.0+7.0	13.5				
2.0+3.2+4.0+4.0	13.2	2.5+5.0+5.0	12.5				
2.5+2.5+2.5+2.5	10.0	2.5+5.0+6.0	13.5				
2.5+2.5+2.5+2.8	10.3	2.8+2.8+2.8	8.4				
2.5+2.5+2.5+3.2	10.7	2.8+2.8+3.2	8.8				

4 Room		3 Room		2 Room		1 Room	
Indoor Unit Capacity (kW)	Total Indoor Capacity (kW)	Indoor Unit Capacity (kW)	Total Indoor Capacity (kW)	Indoor Unit Capacity (kW)	Total Indoor Capacity (kW)	Indoor Unit Capacity (kW)	Total Indoor Capacity (kW)
2.5+2.5+2.5+4.0	11.5	2.8+2.8+4.0	9.6				
2.5+2.5+2.5+5.0	12.5	2.8+2.8+5.0	10.6				
2.5+2.5+2.5+6.0	13.5	2.8+2.8+6.0	11.6				
2.5+2.5+2.8+2.8	10.6	2.8+2.8+7.0	12.6				
2.5+2.5+2.8+3.2	11.0	2.8+3.2+3.2	9.2				
2.5+2.5+2.8+4.0	11.8	2.8+3.2+4.0	10.0				
2.5+2.5+2.8+5.0	12.8	2.8+3.2+5.0	11.0				
2.5+2.5+3.2+3.2	11.4	2.8+3.2+6.0	12.0				
2.5+2.5+3.2+4.0	12.2	2.8+3.2+7.0	13.0				
2.5+2.5+3.2+5.0	13.2	2.8+4.0+4.0	10.8				
2.5+2.5+4.0+4.0	13.0	2.8+4.0+5.0	11.8				
2.5+2.8+2.8+2.8	10.9	2.8+4.0+6.0	12.8				
2.5+2.8+2.8+3.2	11.3	2.8+5.0+5.0	12.8				
2.5+2.8+2.8+4.0	12.1	3.2+3.2+3.2	9.6				
2.5+2.8+2.8+5.0	13.1	3.2+3.2+4.0	10.4				
2.5+2.8+3.2+3.2	11.7	3.2+3.2+5.0	11.4				
2.5+2.8+3.2+4.0	12.5	3.2+3.2+6.0	12.4				
2.5+2.8+3.2+5.0	13.5	3.2+3.2+7.0	13.4				
2.5+2.8+4.0+4.0	13.3	3.2+4.0+4.0	11.2				
2.5+3.2+3.2+3.2	12.1	3.2+4.0+5.0	12.2				
2.5+3.2+3.2+4.0	12.9	3.2+4.0+6.0	13.2				
2.8+2.8+2.8+2.8	11.2	3.2+5.0+5.0	13.2				
2.8+2.8+2.8+3.2	11.6	4.0+4.0+4.0	12.0				
2.8+2.8+2.8+4.0	12.4	4.0+4.0+5.0	13.0				
2.8+2.8+2.8+5.0	13.4						
2.8+2.8+3.2+3.2	12.0						
2.8+2.8+3.2+4.0	12.8						
2.8+2.8+4.0+4.0	13.6						
2.8+3.2+3.2+3.2	12.4						
2.8+3.2+3.2+4.0	13.2						
3.2+3.2+3.2+3.2	12.8						
3.2+3.2+3.2+4.0	13.6						

- Indoor Unit : CS-E7/9/12/15/18/21/24PKEW, CS-E9/12/18GFEW, CS-ME9/12/18/21PB4EA, CS-ME9/12/18PD3EA, CS-E9/12PD3EA, CS-E12QD3EAW
- Outdoor Unit : CU-5E34PBE

5 Room		4 Room		3 Room		2 Room		1 Room	
Indoor Unit Capacity (kW)	Total Indoor Capacity (kW)	Indoor Unit Capacity (kW)	Total Indoor Capacity (kW)	Indoor Unit Capacity (kW)	Total Indoor Capacity (kW)	Indoor Unit Capacity (kW)	Total Indoor Capacity (kW)	Indoor Unit Capacity (kW)	Total Indoor Capacity (kW)
2.0+2.0+2.0+2.0+2.0	10.0	2.0+2.0+2.0+2.0	8.0	2.0+2.0+2.0	6.0	2.0+2.5	4.5	2.0	2.0
2.0+2.0+2.0+2.0+2.5	10.5	2.0+2.0+2.0+2.5	8.5	2.0+2.0+2.5	6.5	2.0+2.8	4.8	2.5	2.5
2.0+2.0+2.0+2.0+2.8	10.8	2.0+2.0+2.0+2.8	8.8	2.0+2.0+2.8	6.8	2.0+3.2	5.2	2.8	2.8
2.0+2.0+2.0+2.0+3.2	11.2	2.0+2.0+2.0+3.2	9.2	2.0+2.0+3.2	7.2	2.0+4.0	6.0	3.2	3.2
2.0+2.0+2.0+2.0+4.0	12.0	2.0+2.0+2.0+4.0	10.0	2.0+2.0+4.0	8.0	2.0+5.0	7.0	4.0	4.0
2.0+2.0+2.0+2.0+5.0	13.0	2.0+2.0+2.0+5.0	11.0	2.0+2.0+5.0	9.0	2.0+6.0	8.0	5.0	5.0
2.0+2.0+2.0+2.0+6.0	14.0	2.0+2.0+2.0+6.0	12.0	2.0+2.0+6.0	10.0	2.0+7.0	9.0	6.0	6.0
2.0+2.0+2.0+2.0+7.0	15.0	2.0+2.0+2.0+7.0	13.0	2.0+2.0+7.0	11.0	2.5+2.5	5.0	7.0	7.0
2.0+2.0+2.0+2.5+2.5	11.0	2.0+2.0+2.5+2.5	9.0	2.0+2.5+2.5	7.0	2.5+2.8	5.3		
2.0+2.0+2.0+2.5+2.8	11.3	2.0+2.0+2.5+2.8	9.3	2.0+2.5+2.8	7.3	2.5+3.2	5.7		
2.0+2.0+2.0+2.5+3.2	11.7	2.0+2.0+2.5+3.2	9.7	2.0+2.5+3.2	7.7	2.5+4.0	6.5		
2.0+2.0+2.0+2.5+4.0	12.5	2.0+2.0+2.5+4.0	10.5	2.0+2.5+4.0	8.5	2.5+5.0	7.5		
2.0+2.0+2.0+2.5+5.0	13.5	2.0+2.0+2.5+5.0	11.5	2.0+2.5+5.0	9.5	2.5+6.0	8.5		
2.0+2.0+2.0+2.5+6.0	14.5	2.0+2.0+2.5+6.0	12.5	2.0+2.5+6.0	10.5	2.5+7.0	9.5		
2.0+2.0+2.0+2.5+7.0	15.5	2.0+2.0+2.5+7.0	13.5	2.0+2.5+7.0	11.5	2.8+2.8	5.6		
2.0+2.0+2.0+2.8+2.8	11.6	2.0+2.0+2.8+2.8	9.6	2.0+2.8+2.8	7.6	2.8+3.2	6.0		
2.0+2.0+2.0+2.8+3.2	12.0	2.0+2.0+2.8+3.2	10.0	2.0+2.8+3.2	8.0	2.8+4.0	6.8		
2.0+2.0+2.0+2.8+4.0	12.8	2.0+2.0+2.8+4.0	10.8	2.0+2.8+4.0	8.8	2.8+5.0	7.8		
2.0+2.0+2.0+2.8+5.0	13.8	2.0+2.0+2.8+5.0	11.8	2.0+2.8+5.0	9.8	2.8+6.0	8.8		
2.0+2.0+2.0+2.8+6.0	14.8	2.0+2.0+2.8+6.0	12.8	2.0+2.8+6.0	10.8	2.8+7.0	9.8		
2.0+2.0+2.0+2.8+7.0	15.8	2.0+2.0+2.8+7.0	13.8	2.0+2.8+7.0	11.8	3.2+3.2	6.4		
2.0+2.0+2.0+3.2+3.2	12.4	2.0+2.0+3.2+3.2	10.4	2.0+3.2+3.2	8.4	3.2+4.0	7.2		
2.0+2.0+2.0+3.2+4.0	13.2	2.0+2.0+3.2+4.0	11.2	2.0+3.2+4.0	9.2	3.2+5.0	8.2		
2.0+2.0+2.0+3.2+5.0	14.2	2.0+2.0+3.2+5.0	12.2	2.0+3.2+5.0	10.2	3.2+6.0	9.2		
2.0+2.0+2.0+3.2+6.0	15.2	2.0+2.0+3.2+6.0	13.2	2.0+3.2+6.0	11.2	3.2+7.0	10.2		
2.0+2.0+2.0+3.2+7.0	16.2	2.0+2.0+3.2+7.0	14.2	2.0+3.2+7.0	12.2	4.0+4.0	8.0		
2.0+2.0+2.0+4.0+4.0	14.0	2.0+2.0+4.0+4.0	12.0	2.0+4.0+4.0	10.0	4.0+5.0	9.0		
2.0+2.0+2.0+4.0+5.0	15.0	2.0+2.0+4.0+5.0	13.0	2.0+4.0+5.0	11.0	4.0+6.0	10.0		
2.0+2.0+2.0+4.0+6.0	16.0	2.0+2.0+4.0+6.0	14.0	2.0+4.0+6.0	12.0	4.0+7.0	11.0		
2.0+2.0+2.0+4.0+7.0	17.0	2.0+2.0+4.0+7.0	15.0	2.0+4.0+7.0	13.0	5.0+5.0	10.0		
2.0+2.0+2.0+5.0+5.0	16.0	2.0+2.0+5.0+5.0	14.0	2.0+5.0+5.0	12.0	5.0+6.0	11.0		
2.0+2.0+2.0+5.0+6.0	17.0	2.0+2.0+5.0+6.0	15.0	2.0+5.0+6.0	13.0	5.0+7.0	12.0		
2.0+2.0+2.5+2.5+2.5	11.5	2.0+2.0+5.0+7.0	16.0	2.0+5.0+7.0	14.0	6.0+6.0	12.0		
2.0+2.0+2.5+2.5+2.8	11.8	2.0+2.0+6.0+6.0	16.0	2.0+6.0+6.0	14.0	6.0+7.0	13.0		
2.0+2.0+2.5+2.5+3.2	12.2	2.0+2.0+6.0+7.0	17.0	2.0+6.0+7.0	15.0	7.0+7.0	14.0		
2.0+2.0+2.5+2.5+4.0	13.0	2.0+2.5+2.5+2.5	9.5	2.0+7.0+7.0	16.0				
2.0+2.0+2.5+2.5+5.0	14.0	2.0+2.5+2.5+2.8	9.8	2.5+2.5+2.5	7.5				
2.0+2.0+2.5+2.5+6.0	15.0	2.0+2.5+2.5+3.2	10.2	2.5+2.5+2.8	7.8				
2.0+2.0+2.5+2.5+7.0	16.0	2.0+2.5+2.5+4.0	11.0	2.5+2.5+3.2	8.2				
2.0+2.0+2.5+2.8+2.8	12.1	2.0+2.5+2.5+5.0	12.0	2.5+2.5+4.0	9.0				
2.0+2.0+2.5+2.8+3.2	12.5	2.0+2.5+2.5+6.0	13.0	2.5+2.5+5.0	10.0				
2.0+2.0+2.5+2.8+4.0	13.3	2.0+2.5+2.5+7.0	14.0	2.5+2.5+6.0	11.0				
2.0+2.0+2.5+2.8+5.0	14.3	2.0+2.5+2.8+2.8	10.1	2.5+2.5+7.0	12.0				
2.0+2.0+2.5+2.8+6.0	15.3	2.0+2.5+2.8+3.2	10.5	2.5+2.8+2.8	8.1				
2.0+2.0+2.5+2.8+7.0	16.3	2.0+2.5+2.8+4.0	11.3	2.5+2.8+3.2	8.5				
2.0+2.0+2.5+3.2+3.2	12.9	2.0+2.5+2.8+5.0	12.3	2.5+2.8+4.0	9.3				
2.0+2.0+2.5+3.2+4.0	13.7	2.0+2.5+2.8+6.0	13.3	2.5+2.8+5.0	10.3				
2.0+2.0+2.5+3.2+5.0	14.7	2.0+2.5+2.8+7.0	14.3	2.5+2.8+6.0	11.3				
2.0+2.0+2.5+3.2+6.0	15.7	2.0+2.5+3.2+3.2	10.9	2.5+2.8+7.0	12.3				
2.0+2.0+2.5+3.2+7.0	16.7	2.0+2.5+3.2+4.0	11.7	2.5+3.2+3.2	8.9				
2.0+2.0+2.5+4.0+4.0	14.5	2.0+2.5+3.2+5.0	12.7	2.5+3.2+4.0	9.7				
2.0+2.0+2.5+4.0+5.0	15.5	2.0+2.5+3.2+6.0	13.7	2.5+3.2+5.0	10.7				
2.0+2.0+2.5+4.0+6.0	16.5	2.0+2.5+3.2+7.0	14.7	2.5+3.2+6.0	11.7				
2.0+2.0+2.5+4.0+7.0	17.5	2.0+2.5+4.0+4.0	12.5	2.5+3.2+7.0	12.7				
2.0+2.0+2.5+5.0+5.0	16.5	2.0+2.5+4.0+5.0	13.5	2.5+4.0+4.0	10.5				
2.0+2.0+2.5+5.0+6.0	17.5	2.0+2.5+4.0+6.0	14.5	2.5+4.0+5.0	11.5				
2.0+2.0+2.8+2.8+2.8	12.4	2.0+2.5+4.0+7.0	15.5	2.5+4.0+6.0	12.5				

5 Room		4 Room		3 Room		2 Room		1 Room	
Indoor Unit Capacity (kW)	Total Indoor Capacity (kW)	Indoor Unit Capacity (kW)	Total Indoor Capacity (kW)	Indoor Unit Capacity (kW)	Total Indoor Capacity (kW)	Indoor Unit Capacity (kW)	Total Indoor Capacity (kW)	Indoor Unit Capacity (kW)	Total Indoor Capacity (kW)
2.0+2.0+2.8+2.8+3.2	12.8	2.0+2.5+5.0+5.0	14.5	2.5+4.0+7.0	13.5				
2.0+2.0+2.8+2.8+4.0	13.6	2.0+2.5+5.0+6.0	15.5	2.5+5.0+5.0	12.5				
2.0+2.0+2.8+2.8+5.0	14.6	2.0+2.5+5.0+7.0	16.5	2.5+5.0+6.0	13.5				
2.0+2.0+2.8+2.8+6.0	15.6	2.0+2.5+6.0+6.0	16.5	2.5+5.0+7.0	14.5				
2.0+2.0+2.8+2.8+7.0	16.6	2.0+2.5+6.0+7.0	17.5	2.5+6.0+6.0	14.5				
2.0+2.0+2.8+3.2+3.2	13.2	2.0+2.8+2.8+2.8	10.4	2.5+6.0+7.0	15.5				
2.0+2.0+2.8+3.2+4.0	14.0	2.0+2.8+2.8+3.2	10.8	2.5+7.0+7.0	16.5				
2.0+2.0+2.8+3.2+5.0	15.0	2.0+2.8+2.8+4.0	11.6	2.8+2.8+2.8	8.4				
2.0+2.0+2.8+3.2+6.0	16.0	2.0+2.8+2.8+5.0	12.6	2.8+2.8+3.2	8.8				
2.0+2.0+2.8+3.2+7.0	17.0	2.0+2.8+2.8+6.0	13.6	2.8+2.8+4.0	9.6				
2.0+2.0+2.8+4.0+4.0	14.8	2.0+2.8+2.8+7.0	14.6	2.8+2.8+5.0	10.6				
2.0+2.0+2.8+4.0+5.0	15.8	2.0+2.8+3.2+3.2	11.2	2.8+2.8+6.0	11.6				
2.0+2.0+2.8+4.0+6.0	16.8	2.0+2.8+3.2+4.0	12.0	2.8+2.8+7.0	12.6				
2.0+2.0+2.8+5.0+5.0	16.8	2.0+2.8+3.2+5.0	13.0	2.8+3.2+3.2	9.2				
2.0+2.0+3.2+3.2+3.2	13.6	2.0+2.8+3.2+6.0	14.0	2.8+3.2+4.0	10.0				
2.0+2.0+3.2+3.2+4.0	14.4	2.0+2.8+3.2+7.0	15.0	2.8+3.2+5.0	11.0				
2.0+2.0+3.2+3.2+5.0	15.4	2.0+2.8+4.0+4.0	12.8	2.8+3.2+6.0	12.0				
2.0+2.0+3.2+3.2+6.0	16.4	2.0+2.8+4.0+5.0	13.8	2.8+3.2+7.0	13.0				
2.0+2.0+3.2+3.2+7.0	17.4	2.0+2.8+4.0+6.0	14.8	2.8+4.0+4.0	10.8				
2.0+2.0+3.2+4.0+4.0	15.2	2.0+2.8+4.0+7.0	15.8	2.8+4.0+5.0	11.8				
2.0+2.0+3.2+4.0+5.0	16.2	2.0+2.8+5.0+5.0	14.8	2.8+4.0+6.0	12.8				
2.0+2.0+3.2+4.0+6.0	17.2	2.0+2.8+5.0+6.0	15.8	2.8+4.0+7.0	13.8				
2.0+2.0+3.2+5.0+5.0	17.2	2.0+2.8+5.0+7.0	16.8	2.8+5.0+5.0	12.8				
2.0+2.0+4.0+4.0+4.0	16.0	2.0+2.8+6.0+6.0	16.8	2.8+5.0+6.0	13.8				
2.0+2.0+4.0+4.0+5.0	17.0	2.0+3.2+3.2+3.2	11.6	2.8+5.0+7.0	14.8				
2.0+2.5+2.5+2.5+2.5	12.0	2.0+3.2+3.2+4.0	12.4	2.8+6.0+6.0	14.8				
2.0+2.5+2.5+2.5+2.8	12.3	2.0+3.2+3.2+5.0	13.4	2.8+6.0+7.0	15.8				
2.0+2.5+2.5+2.5+3.2	12.7	2.0+3.2+3.2+6.0	14.4	2.8+7.0+7.0	16.8				
2.0+2.5+2.5+2.5+4.0	13.5	2.0+3.2+3.2+7.0	15.4	3.2+3.2+3.2	9.6				
2.0+2.5+2.5+2.5+5.0	14.5	2.0+3.2+4.0+4.0	13.2	3.2+3.2+4.0	10.4				
2.0+2.5+2.5+2.5+6.0	15.5	2.0+3.2+4.0+5.0	14.2	3.2+3.2+5.0	11.4				
2.0+2.5+2.5+2.5+7.0	16.5	2.0+3.2+4.0+6.0	15.2	3.2+3.2+6.0	12.4				
2.0+2.5+2.5+2.8+2.8	12.6	2.0+3.2+4.0+7.0	16.2	3.2+3.2+7.0	13.4				
2.0+2.5+2.5+2.8+3.2	13.0	2.0+3.2+5.0+5.0	15.2	3.2+4.0+4.0	11.2				
2.0+2.5+2.5+2.8+4.0	13.8	2.0+3.2+5.0+6.0	16.2	3.2+4.0+5.0	12.2				
2.0+2.5+2.5+2.8+5.0	14.8	2.0+3.2+5.0+7.0	17.2	3.2+4.0+6.0	13.2				
2.0+2.5+2.5+2.8+6.0	15.8	2.0+3.2+6.0+6.0	17.2	3.2+4.0+7.0	14.2				
2.0+2.5+2.5+2.8+7.0	16.8	2.0+4.0+4.0+4.0	14.0	3.2+5.0+5.0	13.2				
2.0+2.5+2.5+3.2+3.2	13.4	2.0+4.0+4.0+5.0	15.0	3.2+5.0+6.0	14.2				
2.0+2.5+2.5+3.2+4.0	14.2	2.0+4.0+4.0+6.0	16.0	3.2+5.0+7.0	15.2				
2.0+2.5+2.5+3.2+5.0	15.2	2.0+4.0+4.0+7.0	17.0	3.2+6.0+6.0	15.2				
2.0+2.5+2.5+3.2+6.0	16.2	2.0+4.0+5.0+5.0	16.0	3.2+6.0+7.0	16.2				
2.0+2.5+2.5+3.2+7.0	17.2	2.0+4.0+5.0+6.0	17.0	3.2+7.0+7.0	17.2				
2.0+2.5+2.5+4.0+4.0	15.0	2.0+5.0+5.0+5.0	17.0	4.0+4.0+4.0	12.0				
2.0+2.5+2.5+4.0+5.0	16.0	2.5+2.5+2.5+2.5	10.0	4.0+4.0+5.0	13.0				
2.0+2.5+2.5+4.0+6.0	17.0	2.5+2.5+2.5+2.8	10.3	4.0+4.0+6.0	14.0				
2.0+2.5+2.5+5.0+5.0	17.0	2.5+2.5+2.5+3.2	10.7	4.0+4.0+7.0	15.0				
2.0+2.5+2.8+2.8+2.8	12.9	2.5+2.5+2.5+4.0	11.5	4.0+5.0+5.0	14.0				
2.0+2.5+2.8+2.8+3.2	13.3	2.5+2.5+2.5+5.0	12.5	4.0+5.0+6.0	15.0				
2.0+2.5+2.8+2.8+4.0	14.1	2.5+2.5+2.5+6.0	13.5	4.0+5.0+7.0	16.0				
2.0+2.5+2.8+2.8+5.0	15.1	2.5+2.5+2.5+7.0	14.5	4.0+6.0+6.0	16.0				
2.0+2.5+2.8+2.8+6.0	16.1	2.5+2.5+2.8+2.8	10.6	4.0+6.0+7.0	17.0				
2.0+2.5+2.8+2.8+7.0	17.1	2.5+2.5+2.8+3.2	11.0	5.0+5.0+5.0	15.0				
2.0+2.5+2.8+3.2+3.2	13.7	2.5+2.5+2.8+4.0	11.8	5.0+5.0+6.0	16.0				
2.0+2.5+2.8+3.2+4.0	14.5	2.5+2.5+2.8+5.0	12.8	5.0+5.0+7.0	17.0				
2.0+2.5+2.8+3.2+5.0	15.5	2.5+2.5+2.8+6.0	13.8	5.0+6.0+6.0	17.0				
2.0+2.5+2.8+3.2+6.0	16.5	2.5+2.5+2.8+7.0	14.8						
2.0+2.5+2.8+3.2+7.0	17.5	2.5+2.5+3.2+3.2	11.4						
2.0+2.5+2.8+4.0+4.0	15.3	2.5+2.5+3.2+4.0	12.2						
2.0+2.5+2.8+4.0+5.0	16.3	2.5+2.5+3.2+5.0	13.2						
2.0+2.5+2.8+4.0+6.0	17.3	2.5+2.5+3.2+6.0	14.2						

5 Room		4 Room		3 Room		2 Room		1 Room	
Indoor Unit Capacity (kW)	Total Indoor Capacity (kW)	Indoor Unit Capacity (kW)	Total Indoor Capacity (kW)	Indoor Unit Capacity (kW)	Total Indoor Capacity (kW)	Indoor Unit Capacity (kW)	Total Indoor Capacity (kW)	Indoor Unit Capacity (kW)	Total Indoor Capacity (kW)
2.0+2.5+2.8+5.0+5.0	17.3	2.5+2.5+3.2+7.0	15.2						
2.0+2.5+3.2+3.2+3.2	14.1	2.5+2.5+4.0+4.0	13.0						
2.0+2.5+3.2+3.2+4.0	14.9	2.5+2.5+4.0+5.0	14.0						
2.0+2.5+3.2+3.2+5.0	15.9	2.5+2.5+4.0+6.0	15.0						
2.0+2.5+3.2+3.2+6.0	16.9	2.5+2.5+4.0+7.0	16.0						
2.0+2.5+3.2+4.0+4.0	15.7	2.5+2.5+5.0+5.0	15.0						
2.0+2.5+3.2+4.0+5.0	16.7	2.5+2.5+5.0+6.0	16.0						
2.0+2.5+4.0+4.0+4.0	16.5	2.5+2.5+5.0+7.0	17.0						
2.0+2.5+4.0+4.0+5.0	17.5	2.5+2.5+6.0+6.0	17.0						
2.0+2.8+2.8+2.8+2.8	13.2	2.5+2.8+2.8+2.8	10.9						
2.0+2.8+2.8+2.8+3.2	13.6	2.5+2.8+2.8+3.2	11.3						
2.0+2.8+2.8+2.8+4.0	14.4	2.5+2.8+2.8+4.0	12.1						
2.0+2.8+2.8+2.8+5.0	15.4	2.5+2.8+2.8+5.0	13.1						
2.0+2.8+2.8+2.8+6.0	16.4	2.5+2.8+2.8+6.0	14.1						
2.0+2.8+2.8+2.8+7.0	17.4	2.5+2.8+2.8+7.0	15.1						
2.0+2.8+2.8+3.2+3.2	14.0	2.5+2.8+3.2+3.2	11.7						
2.0+2.8+2.8+3.2+4.0	14.8	2.5+2.8+3.2+4.0	12.5						
2.0+2.8+2.8+3.2+5.0	15.8	2.5+2.8+3.2+5.0	13.5						
2.0+2.8+2.8+3.2+6.0	16.8	2.5+2.8+3.2+6.0	14.5						
2.0+2.8+2.8+4.0+4.0	15.6	2.5+2.8+3.2+7.0	15.5						
2.0+2.8+2.8+4.0+5.0	16.6	2.5+2.8+4.0+4.0	13.3						
2.0+2.8+3.2+3.2+3.2	14.4	2.5+2.8+4.0+5.0	14.3						
2.0+2.8+3.2+3.2+4.0	15.2	2.5+2.8+4.0+6.0	15.3						
2.0+2.8+3.2+3.2+5.0	16.2	2.5+2.8+4.0+7.0	16.3						
2.0+2.8+3.2+3.2+6.0	17.2	2.5+2.8+5.0+5.0	15.3						
2.0+2.8+3.2+4.0+4.0	16.0	2.5+2.8+5.0+6.0	16.3						
2.0+2.8+3.2+4.0+5.0	17.0	2.5+2.8+5.0+7.0	17.3						
2.0+2.8+4.0+4.0+4.0	16.8	2.5+2.8+6.0+6.0	17.3						
2.0+3.2+3.2+3.2+3.2	14.8	2.5+3.2+3.2+3.2	12.1						
2.0+3.2+3.2+3.2+4.0	15.6	2.5+3.2+3.2+4.0	12.9						
2.0+3.2+3.2+3.2+5.0	16.6	2.5+3.2+3.2+5.0	13.9						
2.0+3.2+3.2+4.0+4.0	16.4	2.5+3.2+3.2+6.0	14.9						
2.0+3.2+3.2+4.0+5.0	17.4	2.5+3.2+3.2+7.0	15.9						
2.0+3.2+4.0+4.0+4.0	17.2	2.5+3.2+4.0+4.0	13.7						
2.5+2.5+2.5+2.5+2.5	12.5	2.5+3.2+4.0+5.0	14.7						
2.5+2.5+2.5+2.5+2.8	12.8	2.5+3.2+4.0+6.0	15.7						
2.5+2.5+2.5+2.5+3.2	13.2	2.5+3.2+4.0+7.0	16.7						
2.5+2.5+2.5+2.5+4.0	14.0	2.5+3.2+5.0+5.0	15.7						
2.5+2.5+2.5+2.5+5.0	15.0	2.5+3.2+5.0+6.0	16.7						
2.5+2.5+2.5+2.5+6.0	16.0	2.5+4.0+4.0+4.0	14.5						
2.5+2.5+2.5+2.5+7.0	17.0	2.5+4.0+4.0+5.0	15.5						
2.5+2.5+2.5+2.8+2.8	13.1	2.5+4.0+4.0+6.0	16.5						
2.5+2.5+2.5+2.8+3.2	13.5	2.5+4.0+4.0+7.0	17.5						
2.5+2.5+2.5+2.8+4.0	14.3	2.5+4.0+5.0+5.0	16.5						
2.5+2.5+2.5+2.8+5.0	15.3	2.5+4.0+5.0+6.0	17.5						
2.5+2.5+2.5+2.8+6.0	16.3	2.5+5.0+5.0+5.0	17.5						
2.5+2.5+2.5+2.8+7.0	17.3	2.8+2.8+2.8+2.8	11.2						
2.5+2.5+2.5+3.2+3.2	13.9	2.8+2.8+2.8+3.2	11.6						
2.5+2.5+2.5+3.2+4.0	14.7	2.8+2.8+2.8+4.0	12.4						
2.5+2.5+2.5+3.2+5.0	15.7	2.8+2.8+2.8+5.0	13.4						
2.5+2.5+2.5+3.2+6.0	16.7	2.8+2.8+2.8+6.0	14.4						
2.5+2.5+2.5+4.0+4.0	15.5	2.8+2.8+2.8+7.0	15.4						
2.5+2.5+2.5+4.0+5.0	16.5	2.8+2.8+3.2+3.2	12.0						
2.5+2.5+2.5+4.0+6.0	17.5	2.8+2.8+3.2+4.0	12.8						
2.5+2.5+2.5+5.0+5.0	17.5	2.8+2.8+3.2+5.0	13.8						
2.5+2.5+2.8+2.8+2.8	13.4	2.8+2.8+3.2+6.0	14.8						
2.5+2.5+2.8+2.8+3.2	13.8	2.8+2.8+3.2+7.0	15.8						
2.5+2.5+2.8+2.8+4.0	14.6	2.8+2.8+4.0+4.0	13.6						
2.5+2.5+2.8+2.8+5.0	15.6	2.8+2.8+4.0+5.0	14.6						
2.5+2.5+2.8+2.8+6.0	16.6	2.8+2.8+4.0+6.0	15.6						
2.5+2.5+2.8+3.2+3.2	14.2	2.8+2.8+4.0+7.0	16.6						


5 Room		4 Room		3 Room		2 Room		1 Room	
Indoor Unit Capacity (kW)	Total Indoor Capacity (kW)	Indoor Unit Capacity (kW)	Total Indoor Capacity (kW)	Indoor Unit Capacity (kW)	Total Indoor Capacity (kW)	Indoor Unit Capacity (kW)	Total Indoor Capacity (kW)	Indoor Unit Capacity (kW)	Total Indoor Capacity (kW)
2.5+2.5+2.8+3.2+4.0	15.0	2.8+2.8+5.0+5.0	15.6						
2.5+2.5+2.8+3.2+5.0	16.0	2.8+2.8+5.0+6.0	16.6						
2.5+2.5+2.8+3.2+6.0	17.0	2.8+3.2+3.2+3.2	12.4						
2.5+2.5+2.8+4.0+4.0	15.8	2.8+3.2+3.2+4.0	13.2						
2.5+2.5+2.8+4.0+5.0	16.8	2.8+3.2+3.2+5.0	14.2						
2.5+2.5+3.2+3.2+3.2	14.6	2.8+3.2+3.2+6.0	15.2						
2.5+2.5+3.2+3.2+4.0	15.4	2.8+3.2+3.2+7.0	16.2						
2.5+2.5+3.2+3.2+5.0	16.4	2.8+3.2+4.0+4.0	14.0						
2.5+2.5+3.2+3.2+6.0	17.4	2.8+3.2+4.0+5.0	15.0						
2.5+2.5+3.2+4.0+4.0	16.2	2.8+3.2+4.0+6.0	16.0						
2.5+2.5+3.2+4.0+5.0	17.2	2.8+3.2+4.0+7.0	17.0						
2.5+2.5+4.0+4.0+4.0	17.0	2.8+3.2+5.0+5.0	16.0						
2.5+2.8+2.8+2.8+2.8	13.7	2.8+3.2+5.0+6.0	17.0						
2.5+2.8+2.8+2.8+3.2	14.1	2.8+4.0+4.0+4.0	14.8						
2.5+2.8+2.8+2.8+4.0	14.9	2.8+4.0+4.0+5.0	15.8						
2.5+2.8+2.8+2.8+5.0	15.9	2.8+4.0+4.0+6.0	16.8						
2.5+2.8+2.8+2.8+6.0	16.9	2.8+4.0+5.0+5.0	16.8						
2.5+2.8+2.8+3.2+3.2	14.5	3.2+3.2+3.2+3.2	12.8						
2.5+2.8+2.8+3.2+4.0	15.3	3.2+3.2+3.2+4.0	13.6						
2.5+2.8+2.8+3.2+5.0	16.3	3.2+3.2+3.2+5.0	14.6						
2.5+2.8+2.8+3.2+6.0	17.3	3.2+3.2+3.2+6.0	15.6						
2.5+2.8+2.8+4.0+4.0	16.1	3.2+3.2+3.2+7.0	16.6						
2.5+2.8+2.8+4.0+5.0	17.1	3.2+3.2+4.0+4.0	14.4						
2.5+2.8+3.2+3.2+3.2	14.9	3.2+3.2+4.0+5.0	15.4						
2.5+2.8+3.2+3.2+4.0	15.7	3.2+3.2+4.0+6.0	16.4						
2.5+2.8+3.2+3.2+5.0	16.7	3.2+3.2+4.0+7.0	17.4						
2.5+2.8+3.2+4.0+4.0	16.5	3.2+3.2+5.0+5.0	16.4						
2.5+2.8+3.2+4.0+5.0	17.5	3.2+3.2+5.0+6.0	17.4						
2.5+2.8+4.0+4.0+4.0	17.3	3.2+4.0+4.0+4.0	15.2						
2.5+3.2+3.2+3.2+3.2	15.3	3.2+4.0+4.0+5.0	16.2						
2.5+3.2+3.2+3.2+4.0	16.1	3.2+4.0+4.0+6.0	17.2						
2.5+3.2+3.2+3.2+5.0	17.1	3.2+4.0+5.0+5.0	17.2						
2.5+3.2+3.2+4.0+4.0	16.9	4.0+4.0+4.0+4.0	16.0						
2.8+2.8+2.8+2.8+2.8	14.0	4.0+4.0+4.0+5.0	17.0						
2.8+2.8+2.8+2.8+3.2	14.4								
2.8+2.8+2.8+2.8+4.0	15.2								
2.8+2.8+2.8+2.8+5.0	16.2								
2.8+2.8+2.8+2.8+6.0	17.2								
2.8+2.8+2.8+3.2+3.2	14.8								
2.8+2.8+2.8+3.2+4.0	15.6								
2.8+2.8+2.8+3.2+5.0	16.6								
2.8+2.8+2.8+4.0+4.0	16.4								
2.8+2.8+2.8+4.0+5.0	17.4								
2.8+2.8+3.2+3.2+3.2	15.2								
2.8+2.8+3.2+3.2+4.0	16.0								
2.8+2.8+3.2+3.2+5.0	17.0								
2.8+2.8+3.2+4.0+4.0	16.8								
2.8+3.2+3.2+3.2+3.2	15.6								
2.8+3.2+3.2+3.2+4.0	16.4								
2.8+3.2+3.2+3.2+5.0	17.4								
2.8+3.2+3.2+4.0+4.0	17.2								
3.2+3.2+3.2+3.2+3.2	16.0								
3.2+3.2+3.2+3.2+4.0	16.8								

3. Features


- **Inverter Technology**
 - Wider output power range
 - Energy saving
 - Quick Cooling
 - Quick Heating
 - More precise temperature control
- **Environment Protection**
 - Non-ozone depletion substances refrigerant (R410A)
- **Long Installation Piping**
 - Long piping up to 20 meter
- **Easy to use remote control**
- **Quality Improvement**
 - Random auto restart after power failure for safety restart operation
 - Gas leakage protection
 - Prevent compressor reverse cycle
 - Inner protector to protect compressor
 - Noise prevention during soft dry operation
- **Operation Improvement**
 - Quiet mode to reduce the indoor unit operating sound
 - Powerful mode to reach the desired room temperature quickly
 - 24-hour timer setting
- **Serviceability Improvement**
 - Breakdown Self Diagnosis function

4. Location of Controls and Components


4.1 Indoor Unit

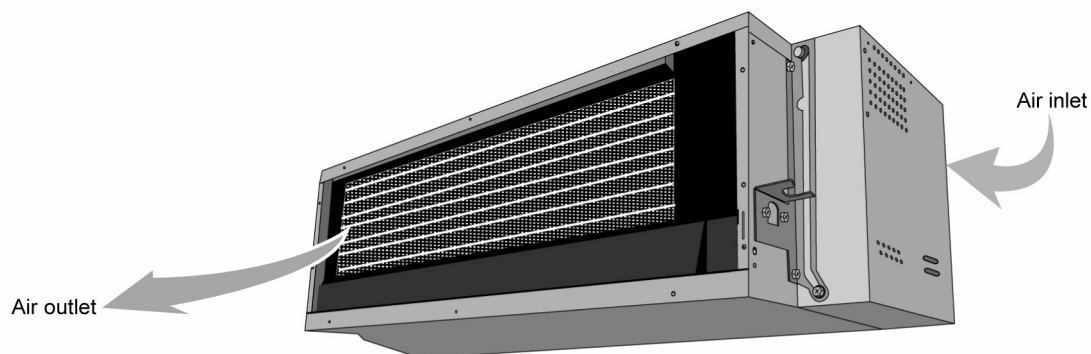

4.2 Outdoor Unit

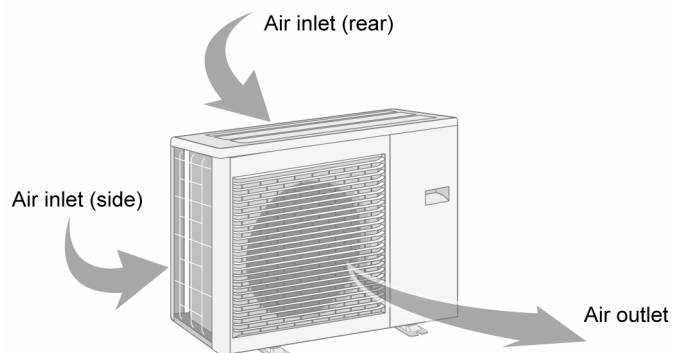


4.3 Remote Control

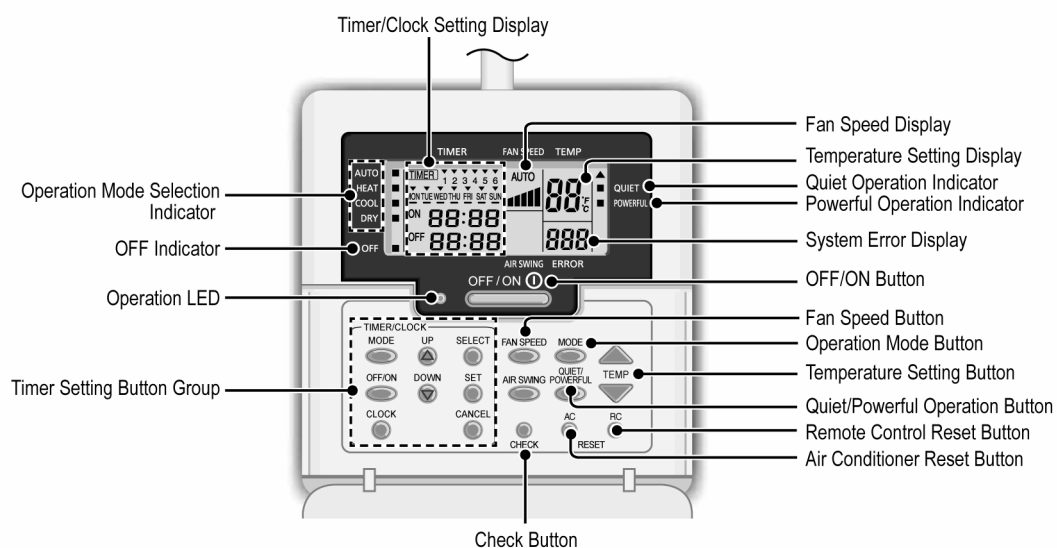


5. Dimensions

5.1 Indoor Unit

<Top View>

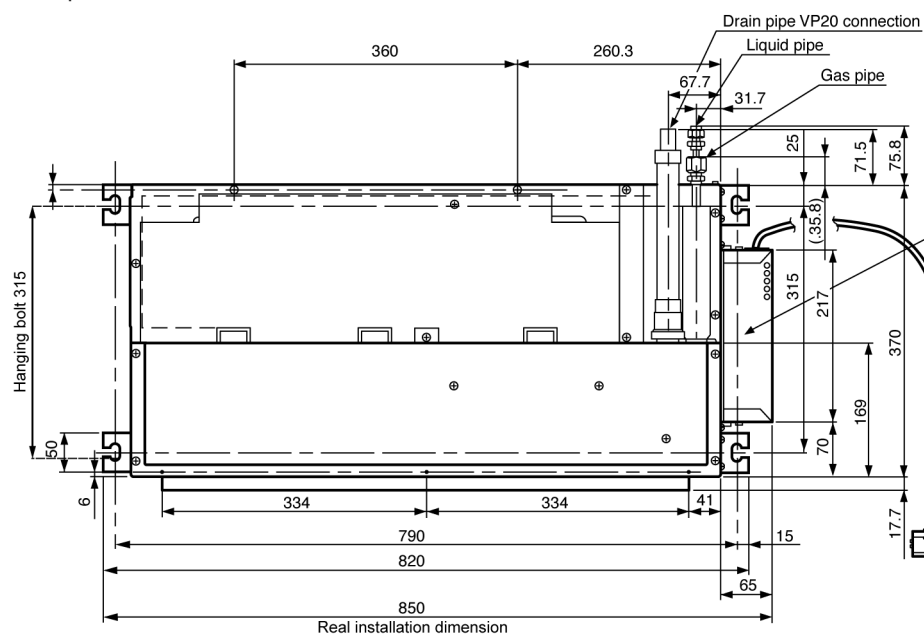


<Side View>

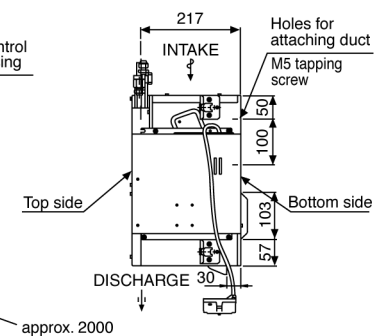


<Remote Control>


Remote control transmitter

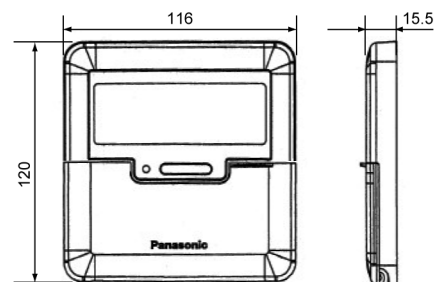

<Back View>

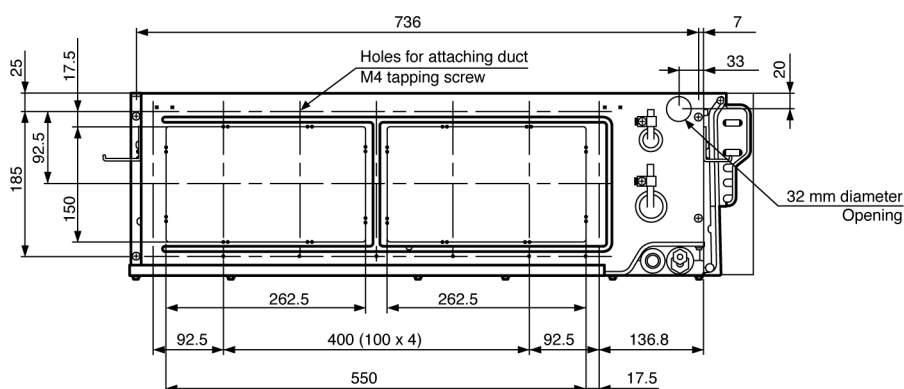


<Front View>

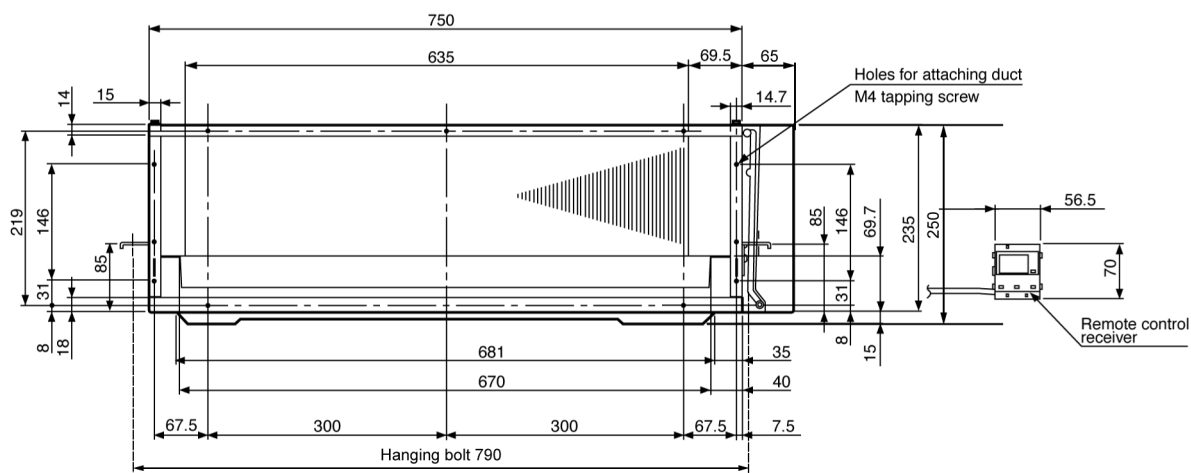


Unit : mm


5.2 Outdoor Unit

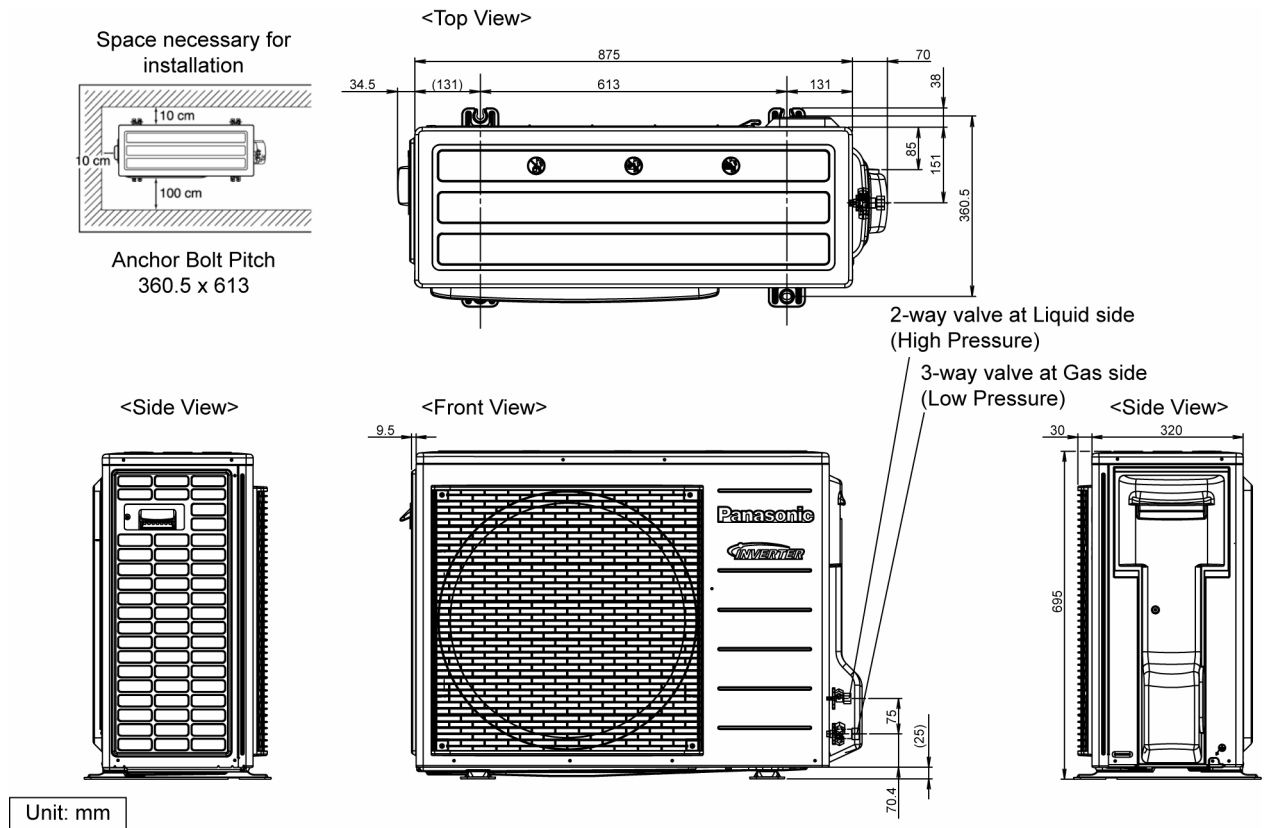

6. Refrigeration Cycle Diagram

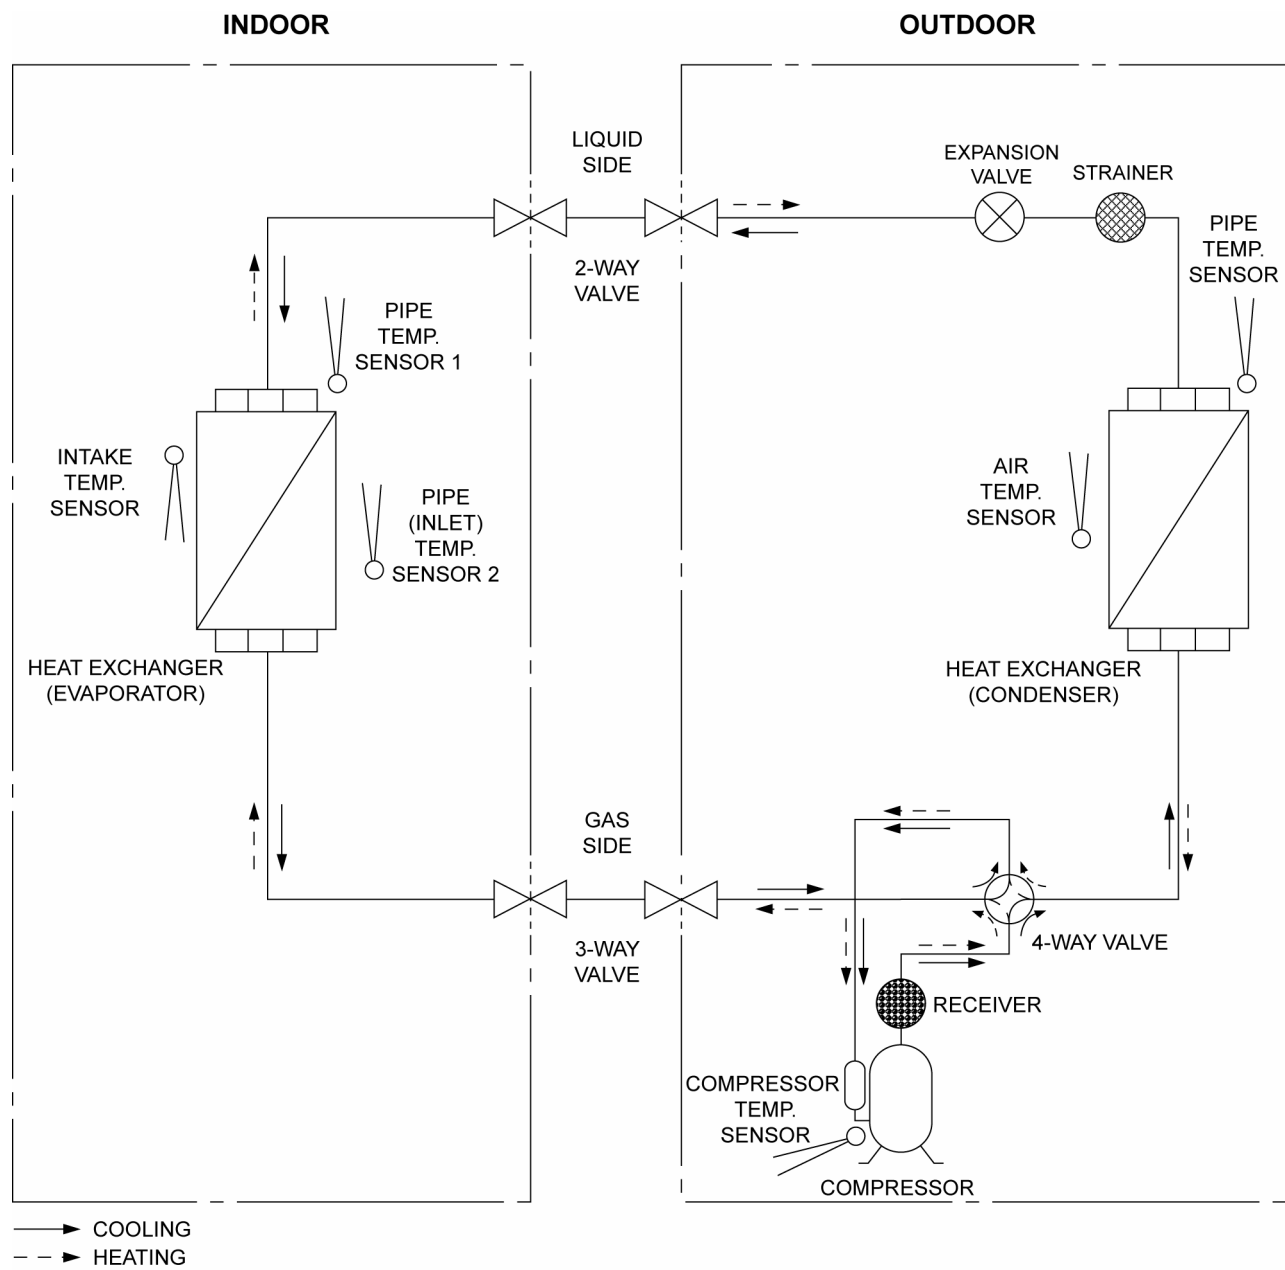


7. Block Diagram

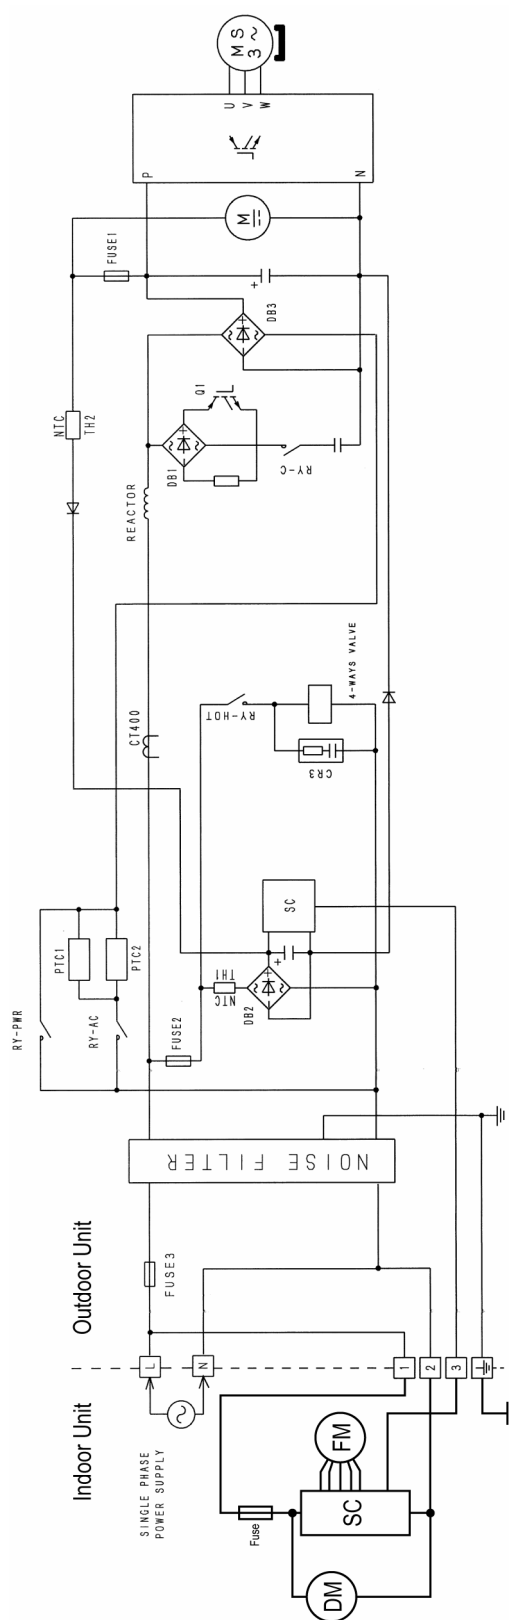


8. Wiring Connection Diagram

8.1 Indoor Unit

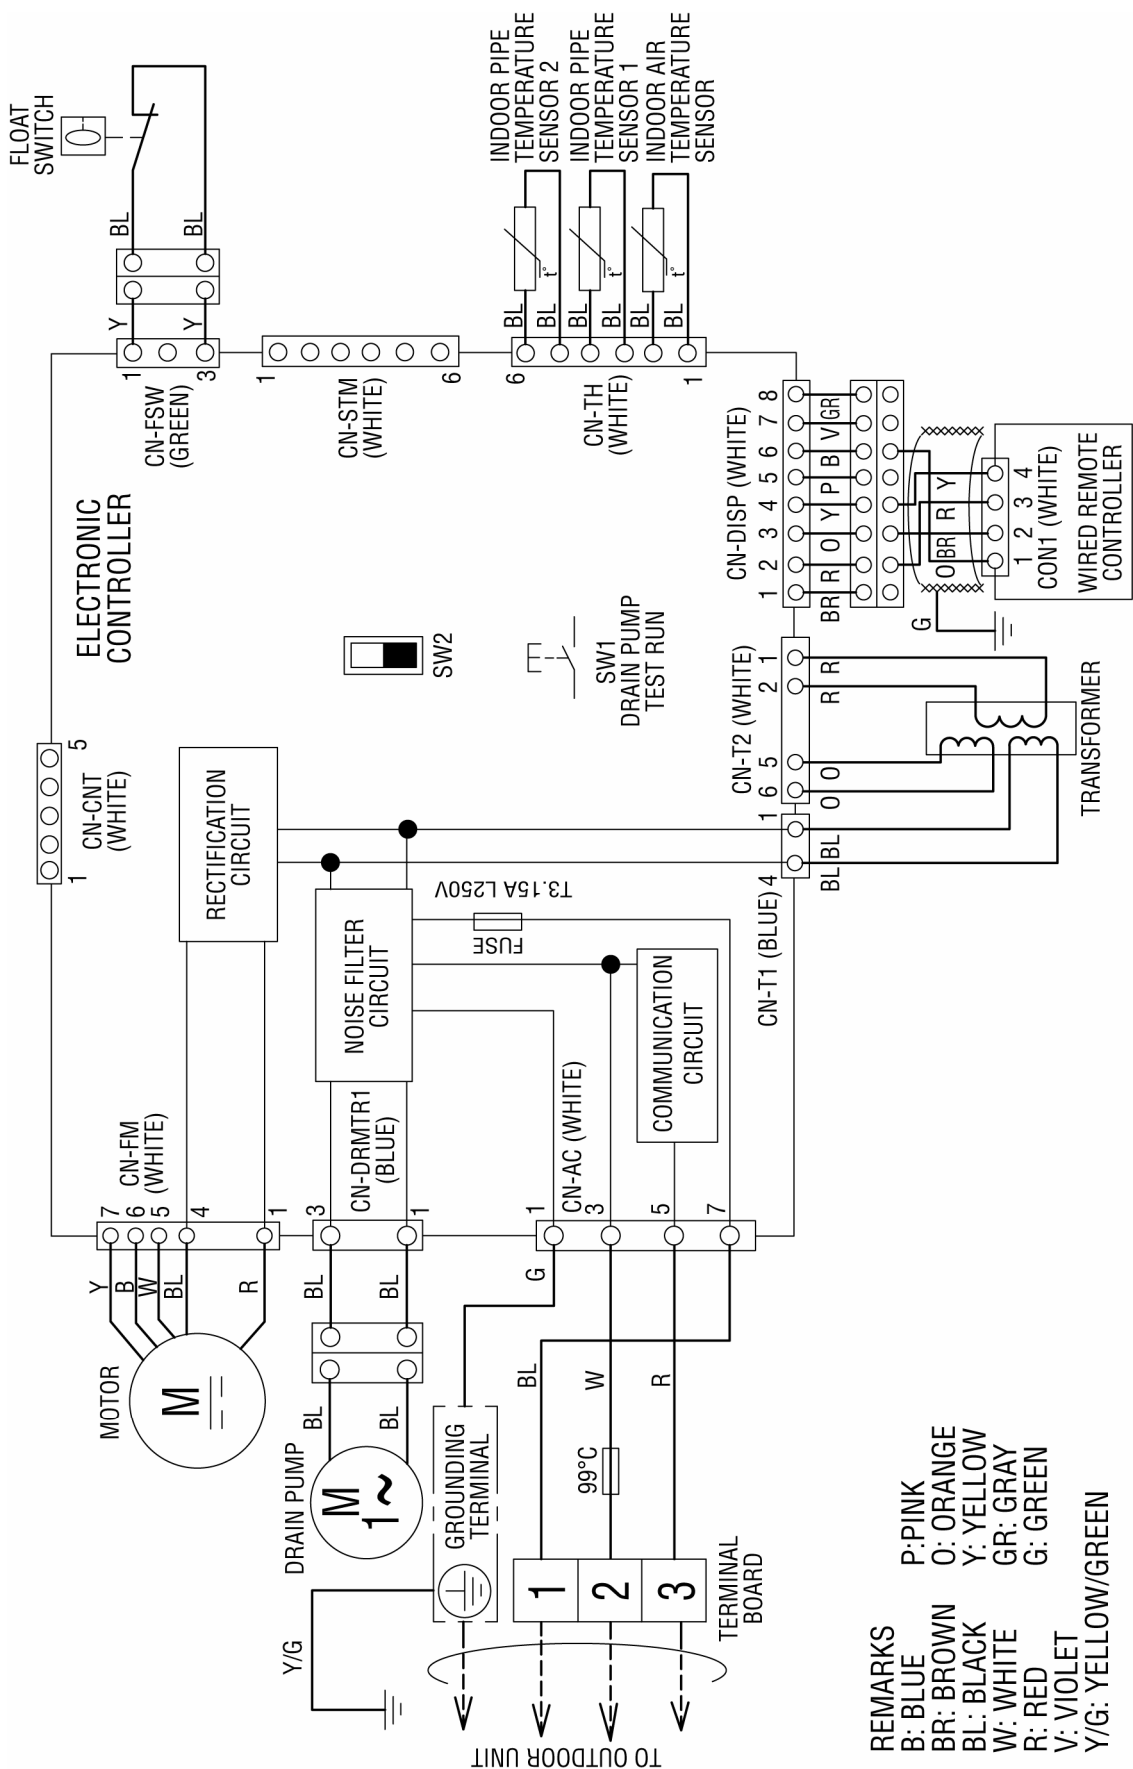

8.2 Outdoor Unit

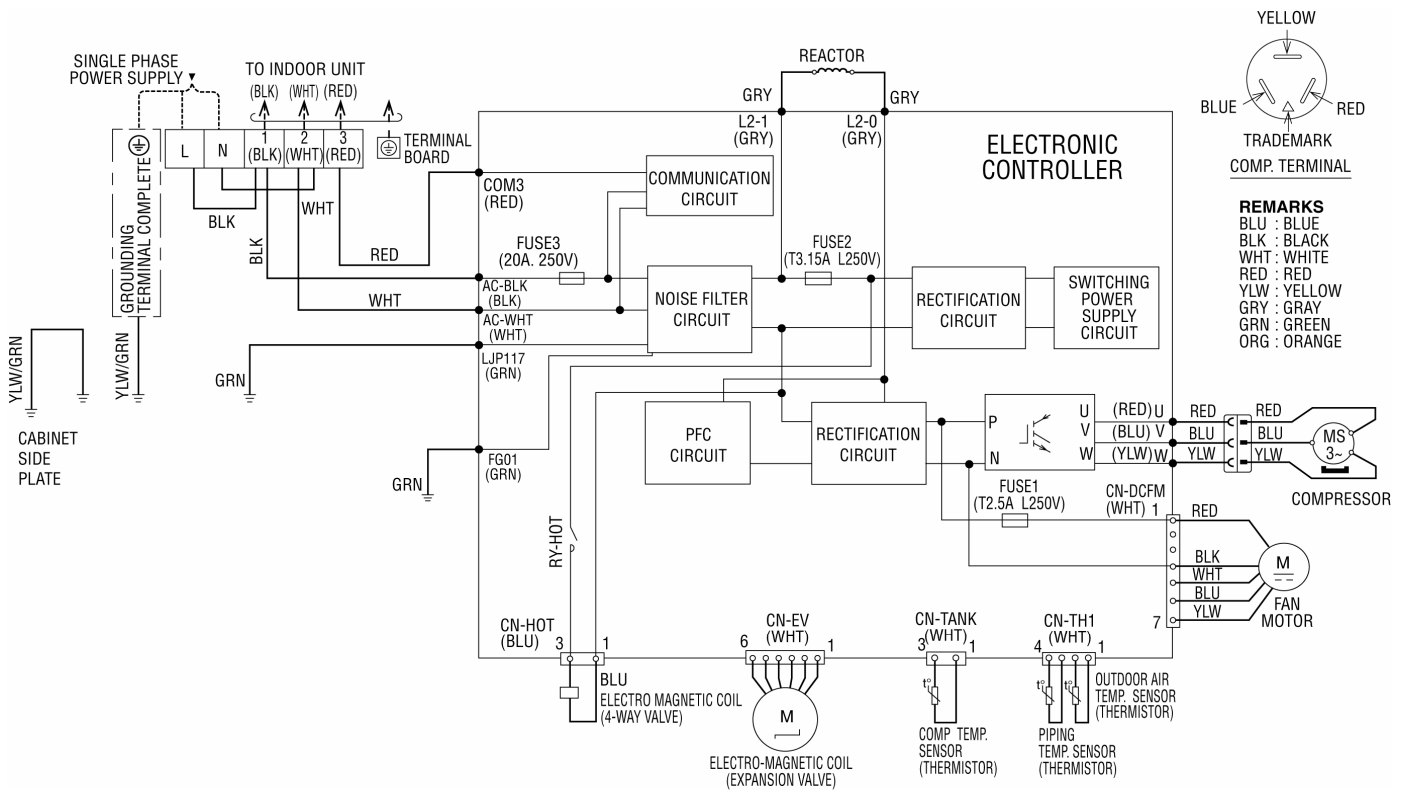



Resistance of Compressor Windings

MODEL	CU-E12QD3EAW
CONNECTION	5RD132XBA21
U-V	1.897Ω
U-W	1.907Ω
V-W	1.882Ω




Note: Resistance at 20°C of ambient temperature.

9. Electronic Circuit Diagram

9.1 Indoor Unit

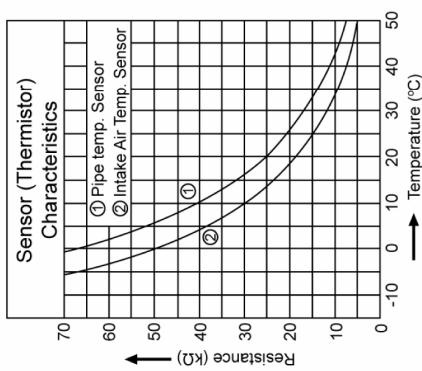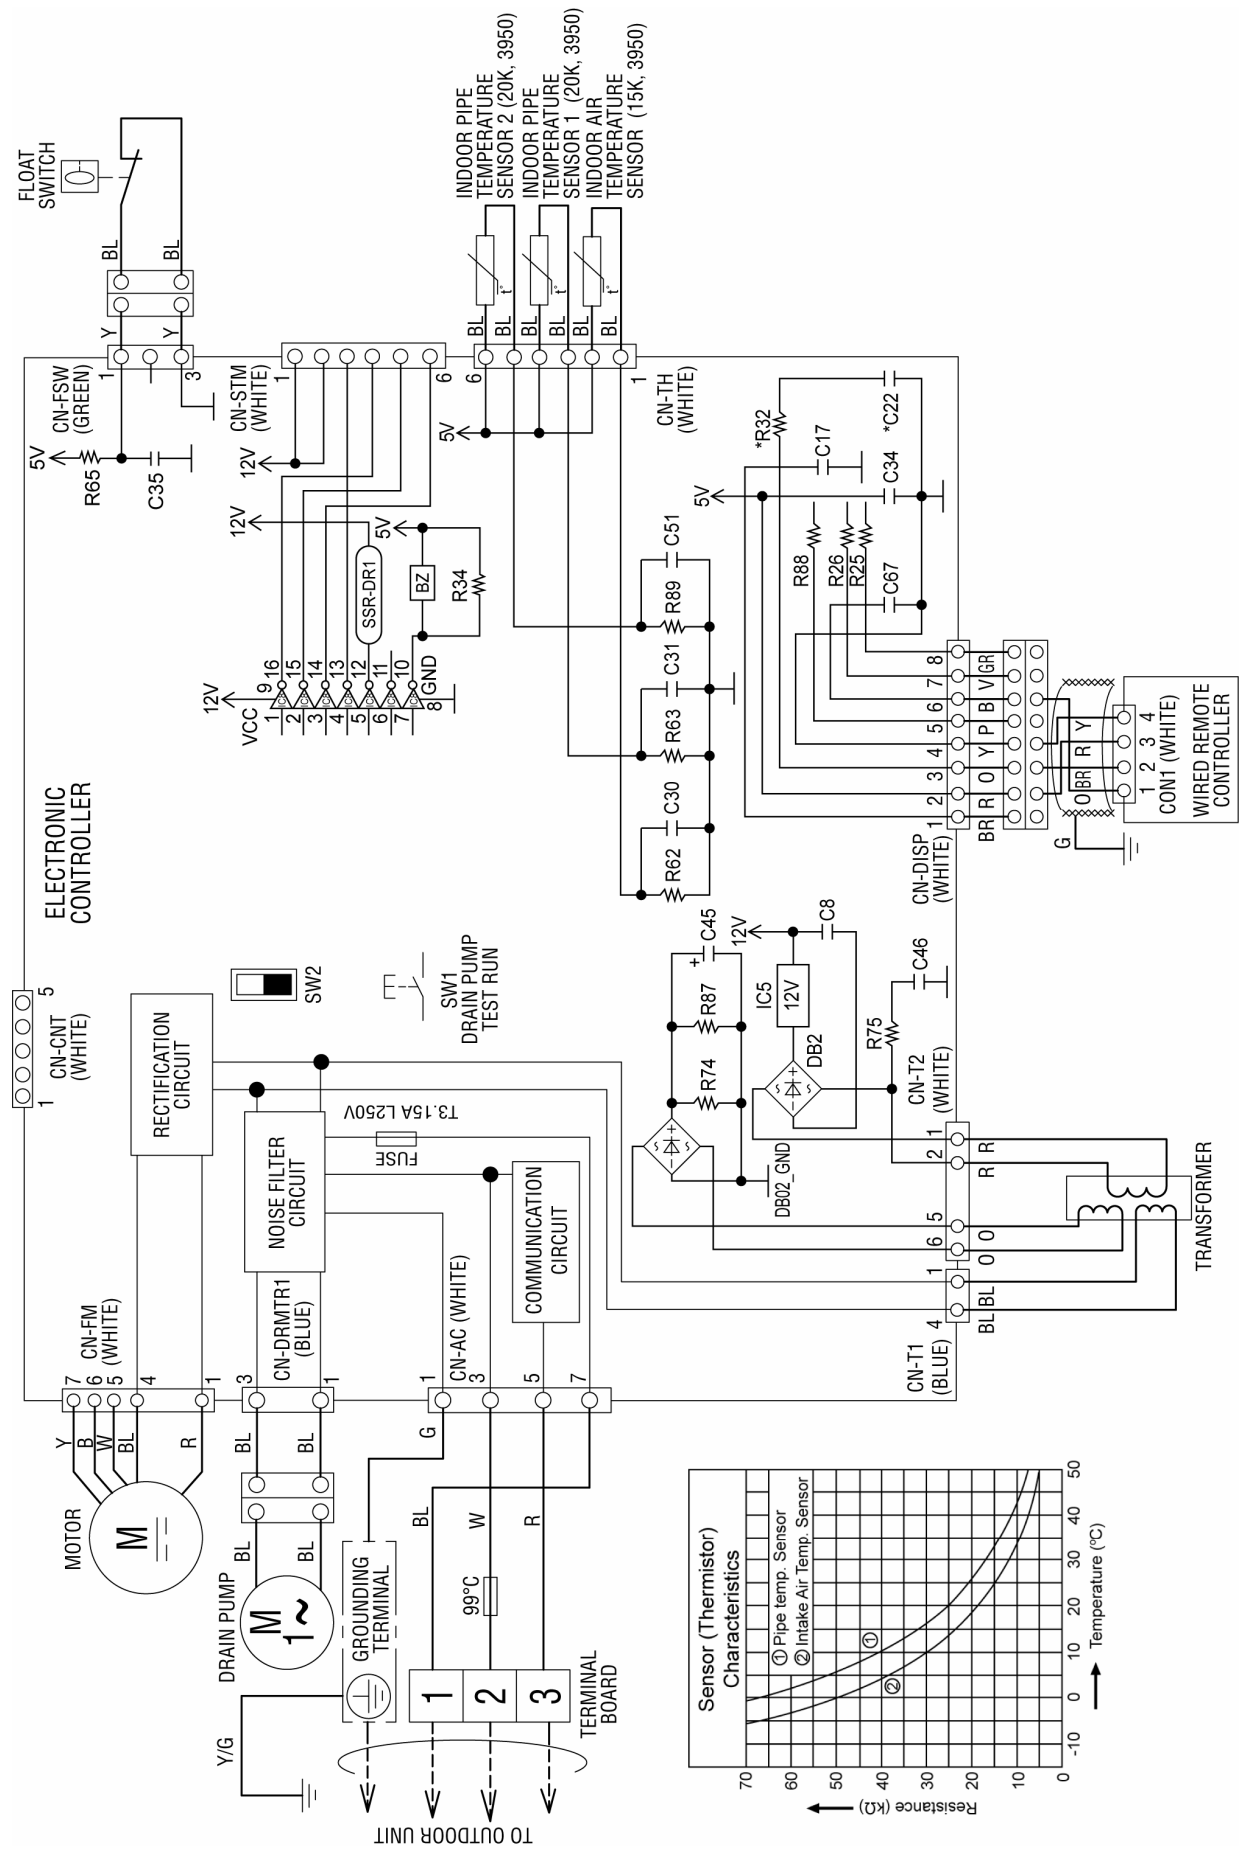

9.2 Outdoor Unit

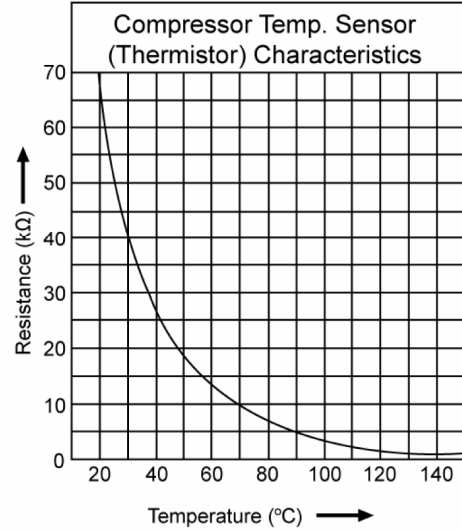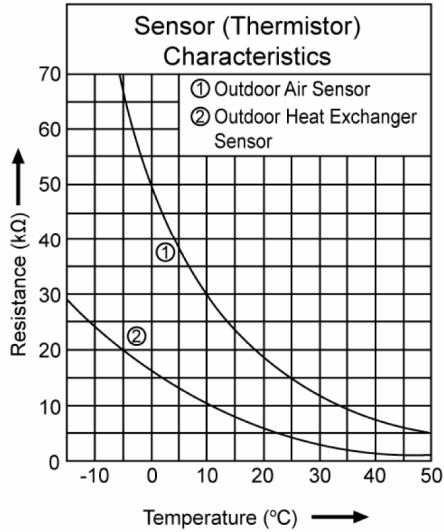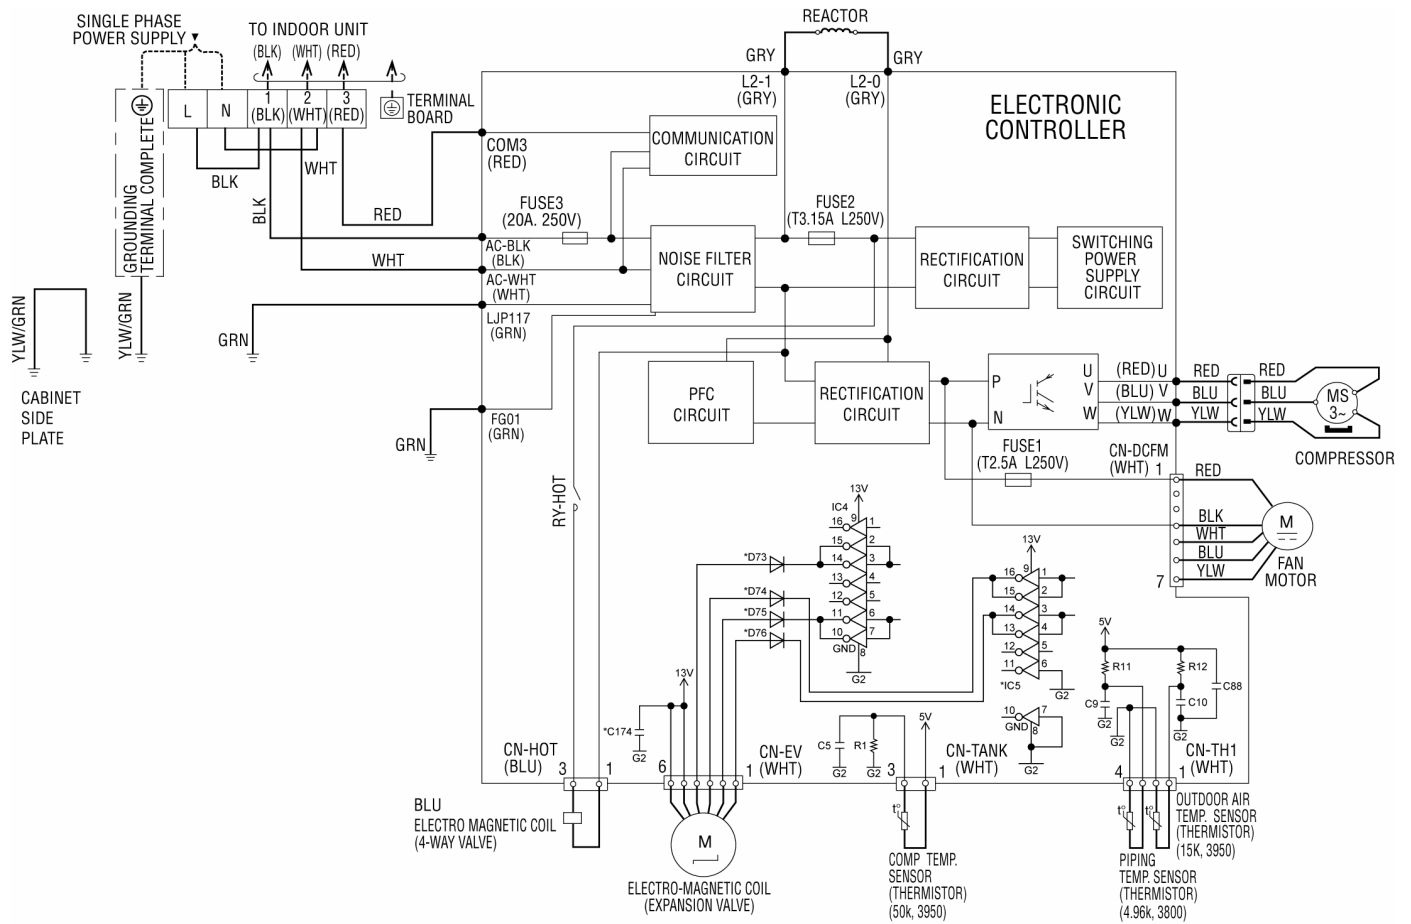


10.1.1 Main Printed Circuit Board




 

10.2 Outdoor Unit

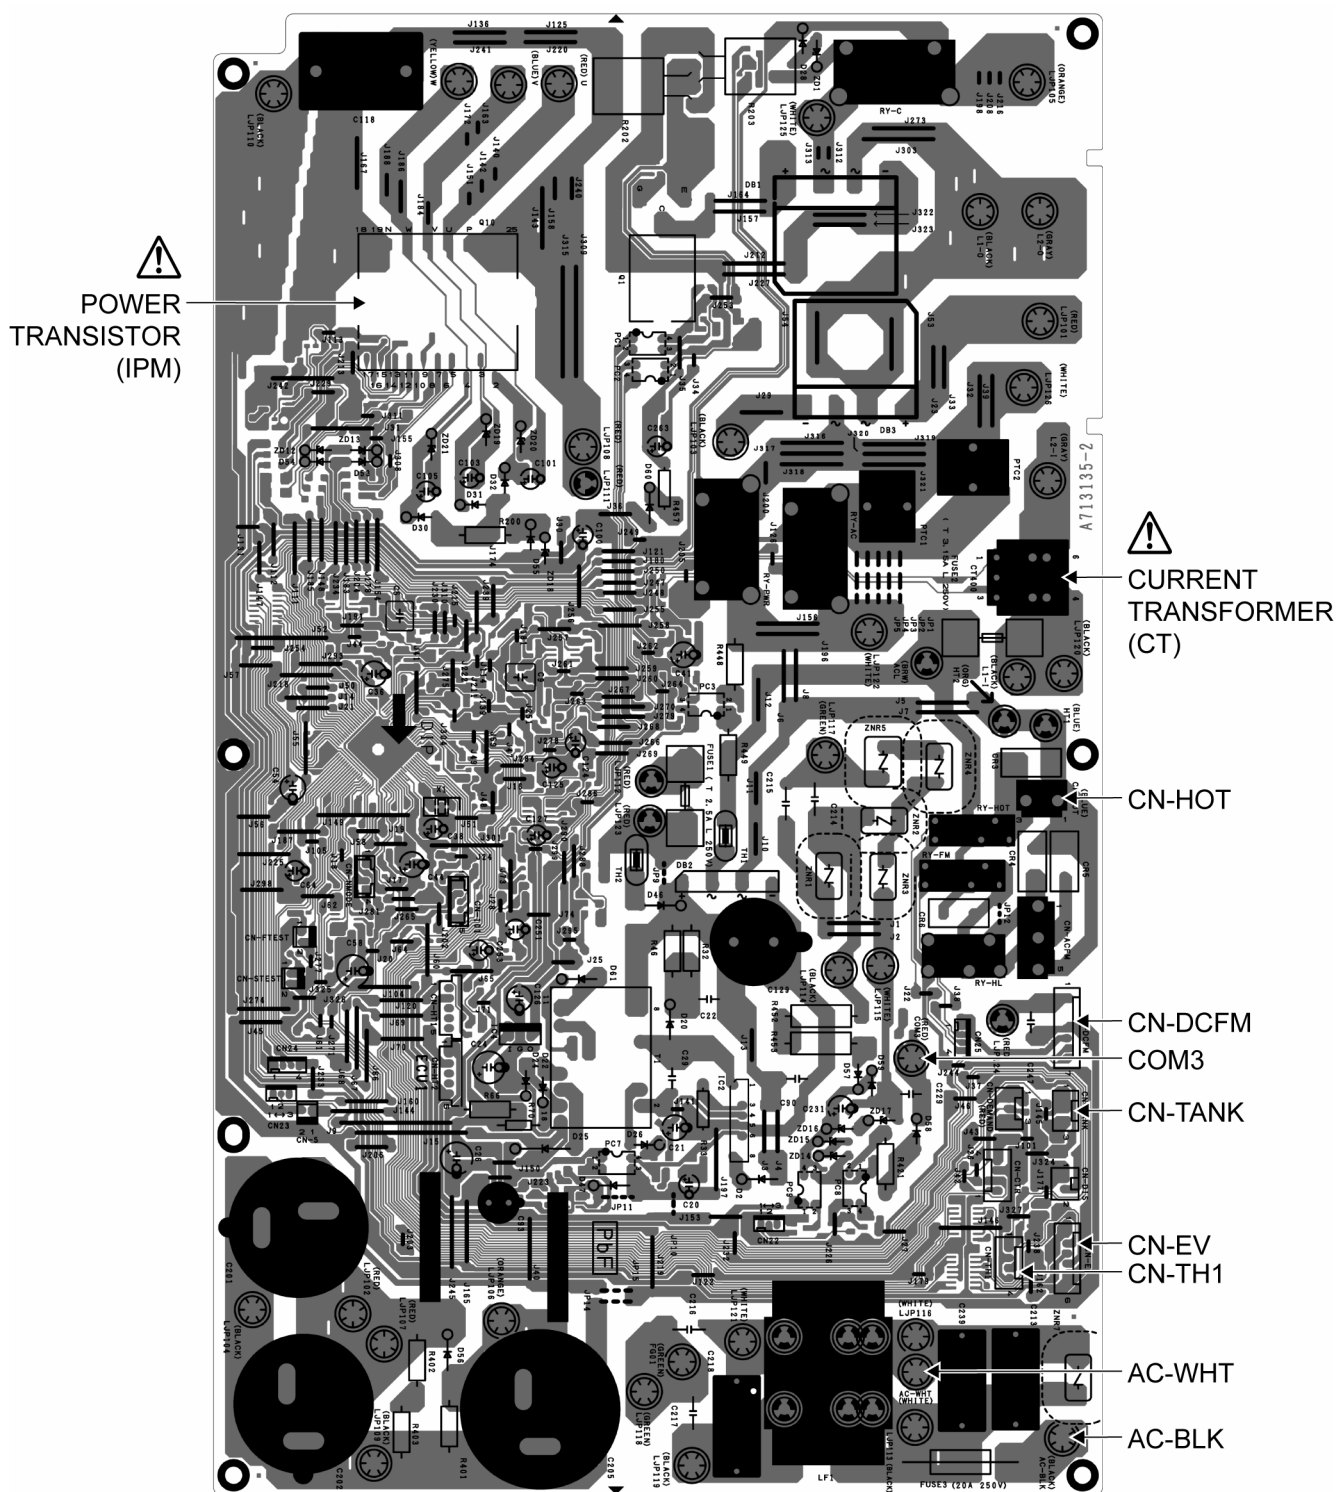


10.2.1 Main Printed Circuit Board





11. Installation Instruction

Attached accessories

No.	Accessory part	Qty.
1	Piping insulation 	1
2	Band 	2
3	Remote controller 	1

No.	Accessory part	Qty.
4	Remote controller cable 	1
5	Screw (M4 machine pitched - 30 mm) 	3
6	Screw (M4 self tapping - 14 mm) 	3

No.	Accessory part	Qty.
7	Drain hose insulation 	1
8	Drain elbow 	1

Required Materials




- Read the catalog and other technical materials and prepare the required materials.
- Applicable piping kit

Applicable piping kit	Piping size	
	Gas	Liquid
CZ-3F5, 7BP	9.52 mm (3/8")	6.35 mm (1/4")
CZ-4F5, 7, 10BP	12.7 mm (1/2")	6.35 mm (1/4")
CZ-52F5, 7, 10BP	15.88 mm (5/8")	6.35 mm (1/4")

- Pipe Size Reducer (CZ-MA1P) for Outdoor Multi connection CS-E15***
- Please refer to "11.2.3 connect the piping" in outdoor unit section


Other Items to be Prepared (Locally Purchased)

Product name	Remarks
Rigid PVC pipe	VP20 (outer diameter ø26); also sockets, elbows and other parts as necessary
Adhesive	PVC adhesive
Insulation	For refrigerant piping insulation: foamed polyethylene with a thickness of 8 mm or more. For drain piping insulation: foamed polyethylene with a thickness of 10 mm or more.
Indoor/outdoor connecting cable	4 x 1.5 mm ² flexible cord, designation type 245 IEC 57 (H05RN-F)
Hanging bolt related parts	Hanging bolts (M10) (4) and nuts (12), Flat washers (8) (when hanging the indoor unit)

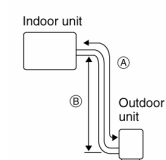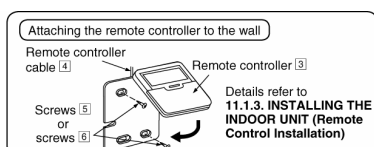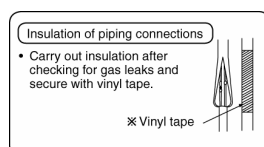

IMPORTANT
Begin the installation job from the "Indoor Unit" installation.

It is advisable to avoid more than 2 blockage directions. For better ventilation & multiple-outdoor installation, please consult authorized dealer/specialist.

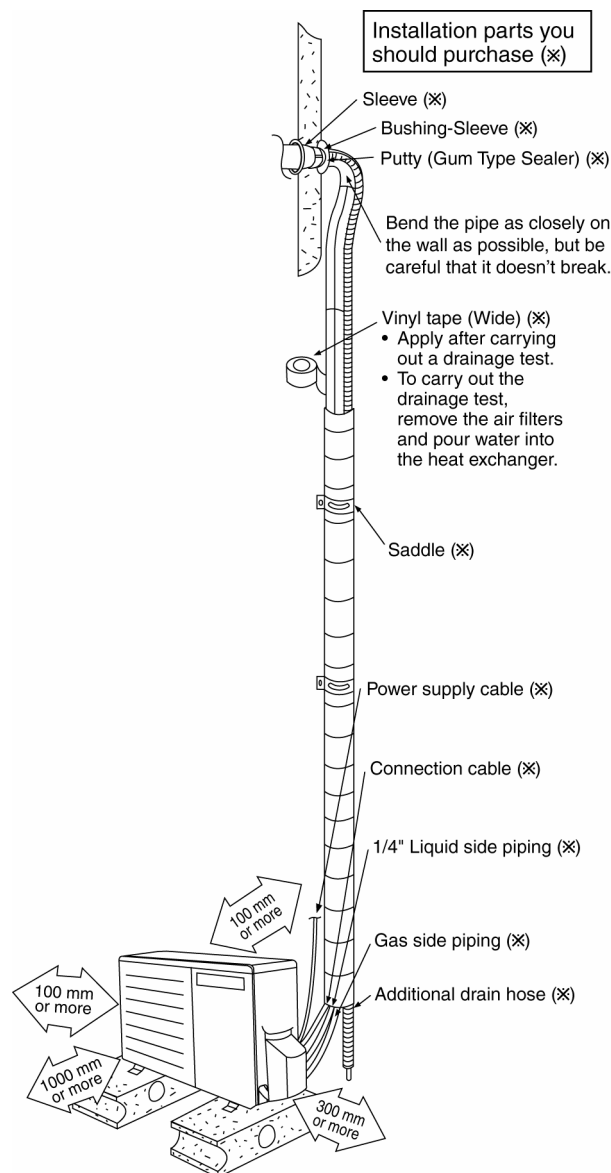

- This illustration is for explanation purposes only. The indoor unit will actually face a different way.



11.1 Indoor Unit

11.1.1 SELECTING THE INSTALLATION LOCATION

Take into consideration the following contents when creating the blueprint.


■ Indoor unit installation location

- Do not install the unit in excessive oil fume area such as kitchen, workshop and etc.
- The location should be strong enough to support the main unit without vibration.
- There should not be any heat or steam source nearby.
- Drainage should be easy. Avoid locating the drain port close to ditches (domestic wastewater).
- Avoid locations above entrances and exits.
- Do not block the air intake and discharge passages.
- Select the location that enables the cool and warm air to spread out to the entire room.
- Locate the indoor unit at least 1 m or more away from a TV, radio, wireless appliance, antenna cable and fluorescent light, and 2 m or more away from a telephone.

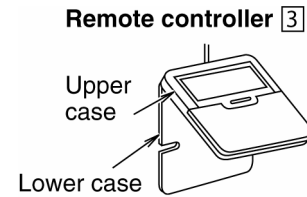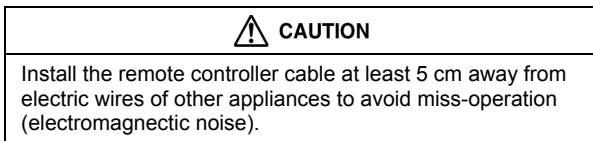


■ Remote control mounting location

- Allow sufficient space around the remote controller ③ as shown in the illustration at right.
- Install in a place which is away from direct sunlight and high humidity.
- Install in a flat surface to avoid warping of the remote controller. If installed to a wall with an uneven surface, damage to the LCD case or operation problems may result.
- Install in a place where the LCD can be easily seen for operation.
(Standard height from the floor is 1.2 to 1.5 meters.)
- Avoid installing the remote controller cable near refrigerant pipes or drain pipes, else it will cause electrical shock or fire.

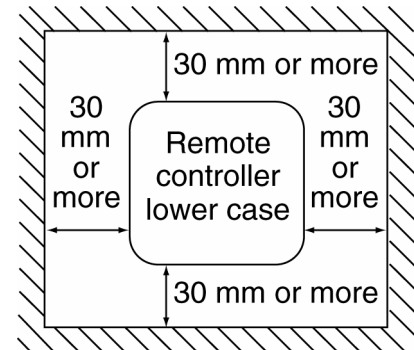


11.1.2 TO DRILL A HOLE IN THE WALL AND INSTALL A SLEEVE OF PIPING

- 1 Insert the piping sleeve to the hole.
- 2 Fix the bushing to the sleeve.
- 3 Cut the sleeve until it extrudes about 15 mm from the wall.

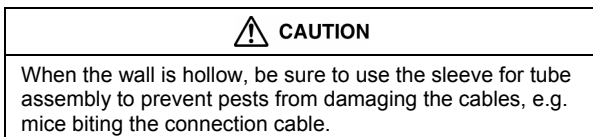

- 4 Finish by sealing the sleeve with putty or caulking compound at the final stage.

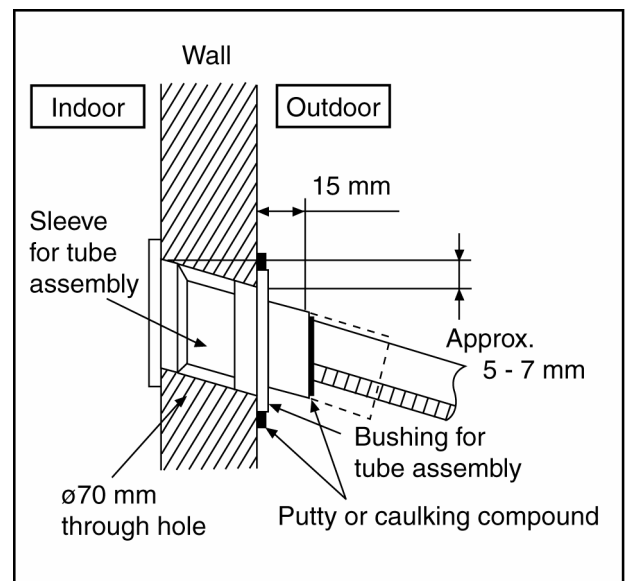

11.1.3 INSTALLING THE INDOOR UNIT (INSTALLATION EMBEDDED IN THE CEILING)

- Always provide sufficient entry and exit space to allow installation work, inspection and unit replacement.
- Waterproof the rear surface of the ceiling below the unit in consideration of water droplets forming and dropping.

⚠ CAUTION


When cooling operation is performed for an extended period under the following conditions, water droplets may form and drop. Attach locally purchased insulation (foamed polyethylene with a thickness of 5 mm or more) to the outside of the indoor unit before installing into the ceiling to improve heat insulation.

- Locations with a dew point inside the ceiling of 23°C or more.
- Kitchens and other locations that produce large amounts of heat and steam.
- Locations where the inside of the ceiling serves as an outside air intake passage.

- **When installing into a ceiling, select the unit position and airflow direction that enable the cool and warm air to spread out to the whole room.**
- Do not place objects that might obstruct the airflow within 1 m below the intake grill.

CEILING OPENING AND HANGING BOLT LOCATIONS

- The relative positions of the ceiling opening and hanging bolts are shown in the illustrations below. When making an inspection opening below the unit, make a 960 mm x 480 mm opening at the ceiling surface. Also, lead the drain piping, refrigerant piping and indoor/outdoor connection cables up to the respective piping and cable connection positions.
- Secure the hanging bolts (M10, locally purchased) firmly in a manner capable of supporting the unit weight.
- Consult your construction or interior contractor for details on finishing the ceiling opening.

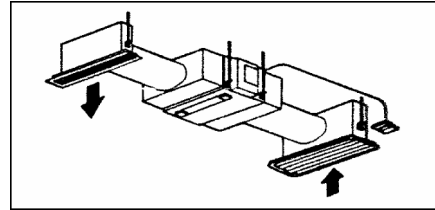

Installing an Intake and Discharge Duct Type


	Allowable duct length	Duct bends
Discharge side duct	5 m or less including the intake side	90° or less in one location
Intake side duct	1 m or less	45° or less in one location

Installation Diagram


These diagrams show the unit together with the purchased components.

(This shows an installation example.)


Top view (from above the ceiling)

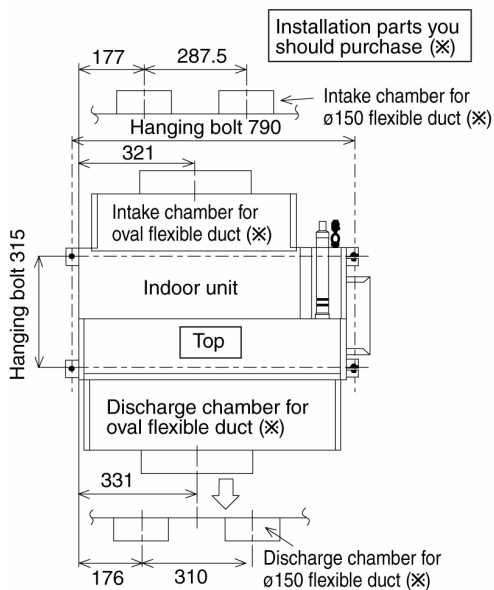

Front view

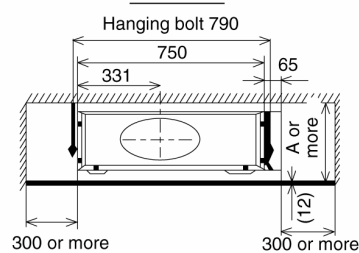

Right view

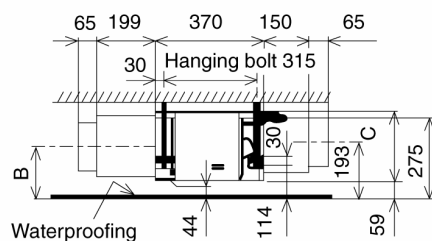


	CS-E9***, CS-E12***, CS-E15***
A	330
B	180
C	235

PREPARING TO INSTALL THE INDDOR UNIT

- Fit the drain hose insulation [7] around the drain hose as shown in the diagram beside.
- Attach the discharge chamber. (※) (10 screws)
- Cut out the intake cut-out portions at the unit rear panel using a cutter or other tools to make openings.
- Remove the two screws at the rear edge of the unit top panel and attach the intake chamber. (※) (8 screws)


View from below and behind the unit

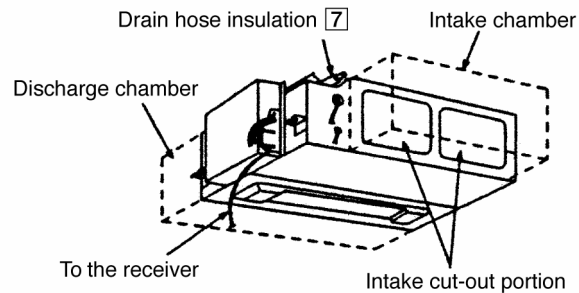

Securing the Hanging Bolts



Reinforced concrete

(Unit: mm)

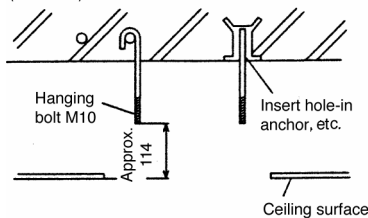

Wooden of other structure

(Unit: mm)

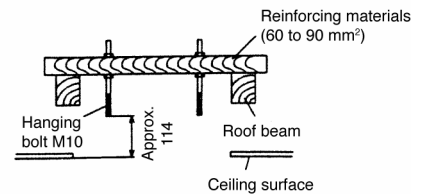
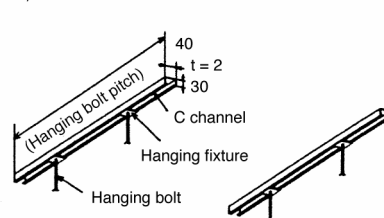


Switching the High State Switch (SW2)

- To increase the air volume, open the control box and on the control board, switch the FAN switch (SW2) to "HI".
- See the diagram for "Connecting the Indoor/Outdoor Connection Cable".



Installation into the Ceiling

- Attach the nuts and washers to the hanging bolts, then lift up and hook the main unit onto the hanging fixtures.
- Check if the unit is leveled using a level or a vinyl hose filled partially with water.

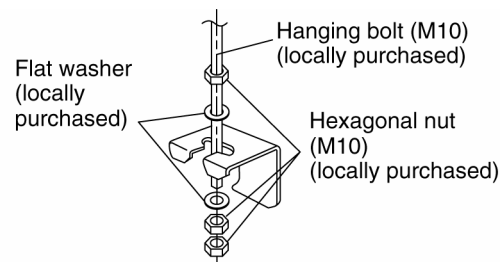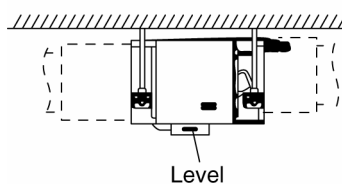

Remote Controller Installation

- 1 Remove the remote controller [3] lower case.
(Insert a flat-tipped screw driver or similar tool 2 to 3 mm into one of the gaps at the bottom of the case, and twist to open. Refer to the illustration at right.)
Be careful not to damage the lower case.
- 2 Do not remove the protective tape which is affixed to the upper case circuit board when remove the remote controller lower case.
- 3 Secure the lower case to an outlet box or wall.
Refer to (A) or (B) instructions below depending on your choice of cable installation.
- 4 Be sure to use only the screws provided.
- 5 Do not over tighten the screws, as it may result in damage to the lower case.
- 6 Connect the indoor unit and the remote controller [3] as shown in the illustration at below.
- 7 Insert firmly the connector of remote controller cable [4] to connector at control box of indoor unit.
- 8 Fix the green wire from remote controller cable [4] to the grounding location provided.

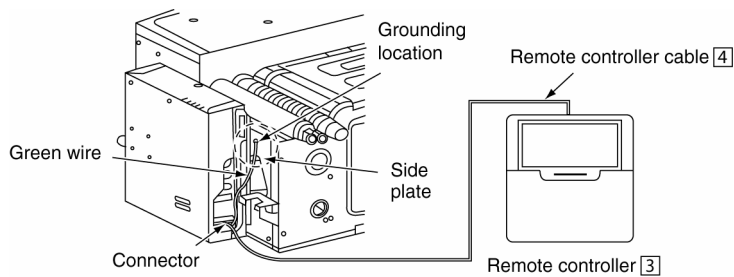
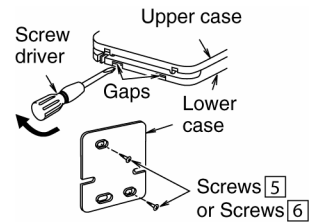


A. IF REMOTE CONTROLLER CABLE IS EMBEDDED

- 1 Embed an outlet box (JIS C 8336) into the wall. Outlet box maybe purchased separately. Medium size square outlet box (obtain locally) Part No. DS3744 (Panasonic Co., Ltd.) or equivalent.
- 2 Secure the remote controller lower case to the outlet box with the two accessory screws [5]. Make sure that the lower case is flat against the wall at this time, with no bending.
- 3 Pass the remote controller cable [4] into the box.
- 4 Route the remote controller cable [4] inside the lower case through rear feeding-out direction.
- 5 Insert firmly the connector of remote controller cable [4] to connector (CON1) in the upper case circuit board. (Refer to the illustration at below.)
- 6 Secure the remote controller upper case to the lower case with the tabs provided.


CAUTION

When the wall is hollow, please be sure to use the sleeve for remote controller cable to prevent dangers caused by mice biting the cable.

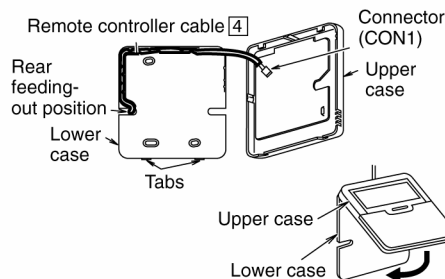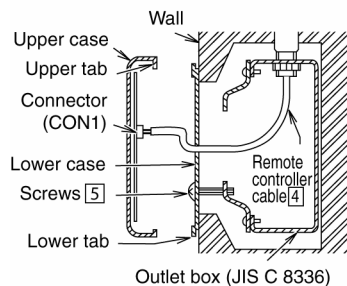


B. IF REMOTE CONTROLLER CABLE IS EXPOSED

- 1 Install the remote controller lower case to the wall with the two accessory screws [6].
- 2 Fasten the screws properly until screw head is lower than the rib and reach the base of remote controller lower case to ensure they do not damage the PCB inside the remote controller [3].

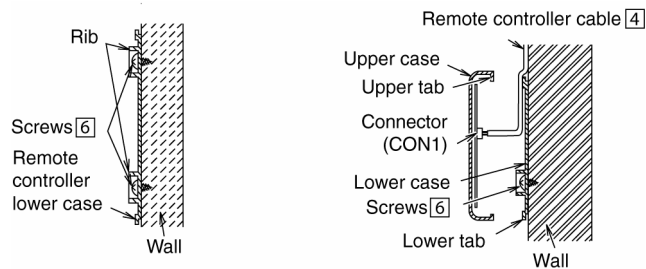

- 3 The feeding-out direction for the remote controller cable can be either via top, left or right side.
- 4 Use nipper to cut a notch at the upper case. (Select the intended feeding-out position)
- 5 Route the remote controller cable [4] inside the lower case in accordance with the intended feeding-out direction. (Refer to the illustration at below).
- 6 Insert firmly the connector of remote controller cable [4] to connector (CON1) in the upper case circuit board. (Refer to the illustration at below)
- 7 Secure the remote controller upper case to the lower case with the tabs provided.

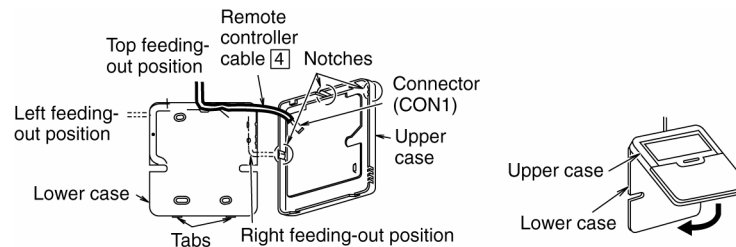


11.1.4 CONNECTING THE DRAIN PIPING

- Lay the drain piping so as to ensure drainage.
- Use a locally purchased VP20 general rigid PVC pipe (outer diameter $\varnothing 26$) for the drain piping **and firmly connect the indoor unit and the drain piping using PVC adhesive to ensure that no leakage occurs.**
- Drain piping located indoor should always be insulated by wrapping with locally purchased insulation (foamed polyethylene with a thickness of 10 mm or more).
- The drain piping should have a downward gradient (1/50 or more) and should be secured by using pipe hanging equipment to avoid creating hills or traps partway.
- Should there be any obstacle preventing the drain piping from being extended smoothly, the drain piping can be raised outside of the main unit as shown in the illustration below.

CAUTION


Strictly do not install and extend the drain piping from the main unit drain water outlet horizontally or upward or raised it 20 cm or more. Doing so may result in poor drainage or drain motor failure.

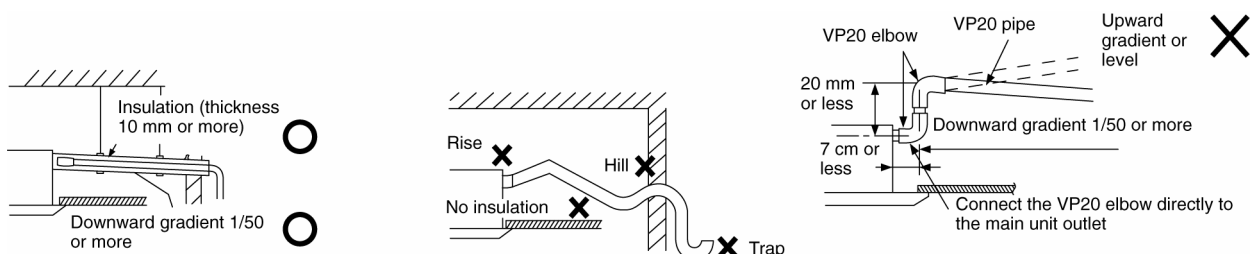

CHECK THE DRAINAGE


Check after connecting the power supply.

- Pour approximately 600 cc of water into the drain pan of the main unit using a squeeze bottle, etc.
- Press the drain test run switch on the control board in the control box to start the drain motor and check whether the water drains normally. (The drain motor operates for approximately 5 minutes and then stops automatically.) (See the diagram for "Connecting the Indoor/Outdoor Connection Cable".)

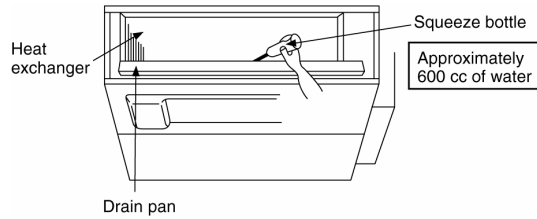

11.1.5 INSULATING THE REFRIGERANT PIPING

- After the piping is connected, insulate as shown in the illustration.

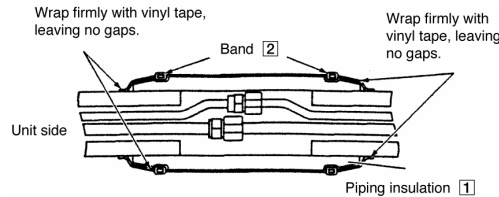

11.1.6 CONNECTING THE INDOOR/OUTDOOR CONNECTION CABLE

- Remove the control box cover and lead the connection cable into the control box.
- Check the color of the wires on the terminal board and secure them with screws.
- Secure the outer sheath of the connection cable with the cord clamp.
- Reattach the control box cover to its original position.
- Ensure the colour of wires of outdoor unit and the terminal Nos. are the same to the indoor's respectively.
- Earth wire shall be Yellow/Green (Y/G) in colour and longer than other AC wires for safety reason.


⚠ CAUTION

When the wall is hollow, please be sure to use the sleeve for tube ass'y to prevent dangers caused by mice biting the connection cable.

- Connection cable between indoor unit and outdoor unit should be approved polychloroprene sheathed 4 x 1.5 mm² flexible cord, designation type 60245 IEC 57 (H05RN-F) or heavier cord. Allowable connection cable length of each indoor unit shall be 30 m or less.
 - Ensure that the terminal numbers on the indoor unit are connected to the same terminal numbers on the outdoor unit by the right coloured wires as shown in the diagram.
 - Earth lead wire should be longer than the other lead wires as shown in the diagram for electrical safety purpose in case the cord slips out from the anchorage.
- Secure the cable onto the control board with the holder (clammer).



⚠ WARNING

This equipment must be properly earthed.


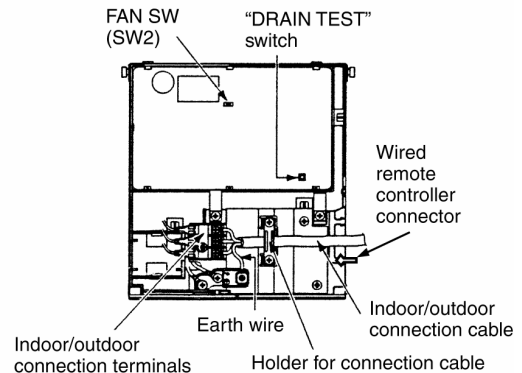


Terminals on the indoor unit	1	2	3	
Colour of wires				
Terminals on the outdoor unit	1	2	3	

11.1.6.1 WIRE STRIPPING AND CONNECTING REQUIREMENT

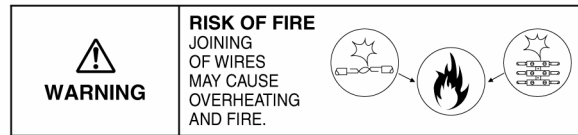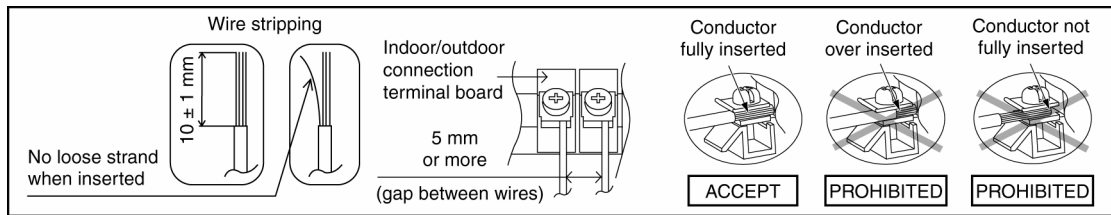

Do not joint wires

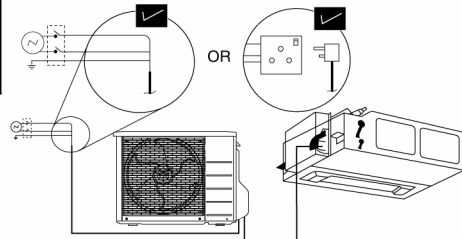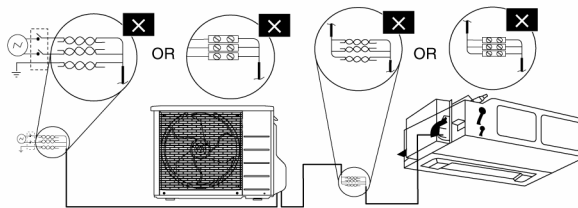

- ❗ Use complete wire without joining.
- ❗ Use approved socket and plug with earth pin.
- ❗ Wire connection in this area must follow to national wiring rules.

11.2 Outdoor Unit

11.2.1 SELECTING THE INSTALLATION LOCATION

- If an awning is built over the unit to prevent direct sunlight or rain, be careful that heat radiation from the condenser is not obstructed.
- There should not be any animal or plant which could be affected by hot air discharged.
- Keep the spaces indicated by arrows from wall, ceiling, fence or other obstacles.
- Do not place any obstacles which may cause a short circuit of the discharged air.
- If piping length is over the [piping length for additional gas], additional refrigerant should be added as shown in the table.

Model	Horse Power (HP)	Piping size		Std. Length (m)	Max. Elevation (m)	Min. Piping Length (m)	Max. Piping Length (m)	Additional Refrigerant (g/m)	Piping Length for add. gas (m)
		Gas	Liquid						
E9****	1.0HP	9.52mm (3/8")	6.35mm (1/4")	5	15	3	20	20	7.5
E12****	1.5HP	9.52mm (3/8")			15	3	20	20	7.5
E15****	1.75HP	12.7mm (1/2")			15	3	20	20	7.5


Example: For E9****

If the unit is installed at 10 m distance, the quantity of additional refrigerant should be 50 g (10-7.5) m x 20 g/m = 50 g.

11.2.2 INSTALL THE OUTDOOR UNIT

At the best location, start installation according to Indoor-Outdoor Unit Installation Diagram.

- 1 Fix the unit on concrete or rigid frame firmly and horizontally by bolt nut. (ø10 mm).
- 2 When installing at roof, please consider strong wind.
Please fasten the installation stand firmly with bolt or nails.

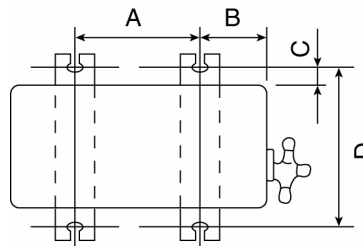

Model	A	B	C	D
E9****	540 mm	160 mm	18.5 mm	330 mm
E12****, E15****	613 mm	131 mm	16 mm	360.5 mm

11.2.3 CONNECT THE PIPING

Connecting The Piping To Indoor Unit

Please make flare after inserting flare nut (locate at joint portion of tube assembly) onto the copper pipe. (In case of using long piping)

Connect the piping


- Align the center of piping and sufficiently tighten the flare nut with fingers.
- Further tighten the flare nut with torque wrench in specified torque as stated in the table.

Do not overtighten, overtightening may cause gas leakage.

Piping size	Torque
6.35 mm (1/4")	[18 N•m (1.8 kgf.m)]
9.52 mm (3/8")	[42 N•m (4.3 kgf.m)]
12.7 mm (1/2")	[55 N•m (5.6 kgf.m)]
15.88 mm (5/8")	[65 N•m (6.6 kgf.m)]
19.05 mm (3/4")	[100 N•m (10.2 kgf.m)]


Connecting The Piping To Outdoor Unit

Decide piping length and then cut by using pipe cutter. Remove burrs from cut edge. Make flare after inserting the flare nut (locate at valve) onto the copper pipe. Align center of piping to valve and then tighten with torque wrench to the specified torque as stated in the table.

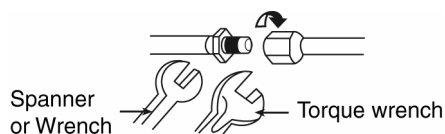

Connecting The Piping to Outdoor Multi

 Decide piping length and then cut by using pipe cutter.
Remove burrs from cut edge.
Make flare after inserting the flare nut (locate at valve)
onto the copper pipe.
Align center of piping to valve and then tighten with
torque wrench to the specified torque as stated in the
table.




* For Gas side piping please refer table and diagram below

Outdoor Multi combination model		Gas side	
CS-E9****, CS-E12****	CU-2E15***, CU-2E18***, CU-3E18***, CU-4E23***, CU-4E27***, CU-5E34***	Auxiliary pipe (male side)	Flare Nut Connection pipe (female side)
CS-E15****	CU-3E18***, CU-4E23***, CU-4E27***, CU-5E34***	Auxiliary pipe (male side)	Hall union Packing Pipe size reducer (CZ-MA1P) Connection pipe (female side) Flare Nut


* Kindly consult authorised dealer for connectivity validity.

CUTTING AND FLARING THE PIPING

 - 1 Please cut using pipe cutter and then remove the burrs.
- 2 Remove the burrs by using reamer. If burrs is not removed, gas leakage may be caused.
Turn the piping end down to avoid the metal powder entering the pipe.
- 3 Please make flare after inserting the flare nut onto the copper pipes.




1. To cut

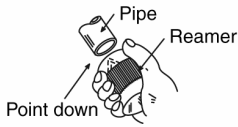


2. To remove burrs



3. To flare

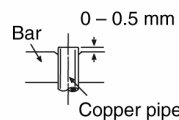


Improper flaring

 

When properly flared, the internal surface of the flare will evenly shine and be of even thickness. Since the flare part comes into contact with the connections, carefully check the flare finish.

11.2.4 EVACUATION OF THE EQUIPMENT

WHEN INSTALLING AN AIR CONDITIONER, BE SURE TO EVACUATE THE AIR INSIDE THE INDOOR UNIT AND PIPES in the following procedure.

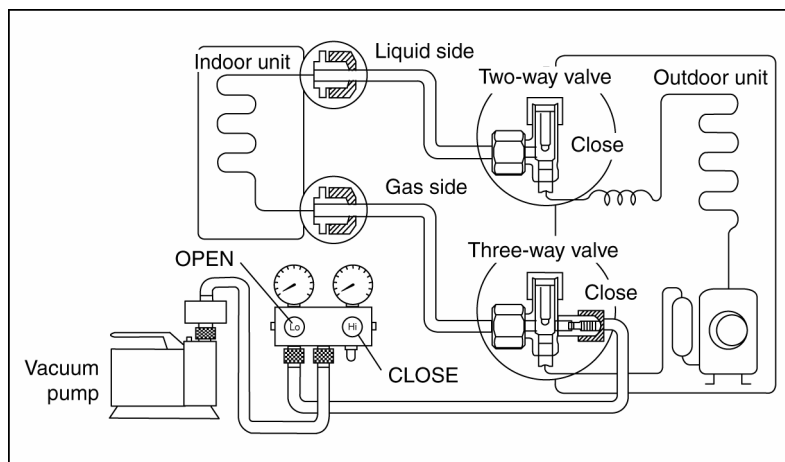

- 1 Connect a charging hose with a push pin to the Low side of a charging set and the service port of the 3-way valve.
 - o Be sure to connect the end of the charging hose with the push pin to the service port.
- 2 Connect the center hose of the charging set to a vacuum pump.
- 3 Turn on the power switch of the vacuum pump and make sure that the needle in the gauge moves from 0 cmHg (0 MPa) to -76 cmHg (-0.1 MPa). Then evacuate the air approximately ten minutes.
- 4 Close the Low side valve of the charging set and turn off the vacuum pump. Make sure that the needle in the gauge does not move after approximately five minutes.

Note : BE SURE TO TAKE THIS PROCEDURE IN ORDER TO AVOID REFRIGERANT GAS LEAKAGE.


- 5 Disconnect the charging hose from the vacuum pump and from the service port of the 3-way valve.
- 6 Tighten the service port caps of the 3-way valve at a torque of 18 N•m with a torque wrench.
- 7 Remove the valve caps of both of the 2-way valve and 3-way valve. Position both of the valves to “OPEN” using a hexagonal wrench (4 mm).
- 8 Mount valve caps onto the 2-way valve and the 3-way valve.
 - Be sure to check for gas leakage.

- If gauge needle does not move from 0 cmHg (0 MPa) to -76 cmHg (-0.1 MPa), in step ③ above take the following measure:
- If the leak stops when the piping connections are tightened further, continue working from step ③.
- If the leak does not stop when the connections are retightened, repair the location of leak.
- Do not release refrigerant during piping work for installation and reinstallation.
- Take care of the liquid refrigerant, it may cause frostbite.


11.2.5 CONNECT THE CABLE TO THE OUTDOOR UNIT

(FOR DETAIL REFER TO WIRING DIAGRAM AT UNIT)

- 1 Remove the control board cover from the unit by loosening the screw.
- 2 Cable connection to the power supply through Isolating Devices (Disconnecting means).
 - Connect approved type polychloroprene sheathed **power supply cord** 3 x 1.5 mm² type designation 60245 IEC 57 or heavier cord to the terminal board, and connect the others end of the cord to Isolating Devices (Disconnecting means).
- 3 **Connection cable** between indoor unit and outdoor unit shall be approved polychloroprene sheathed 4 x 1.5 mm² flexible cord, type designation 60245 IEC 57 or heavier cord. Allowable connection cable length of each indoor unit shall be 30 m or less.
- 4 Connect the power supply cord and connection cable between indoor unit and outdoor unit according to the diagram below.

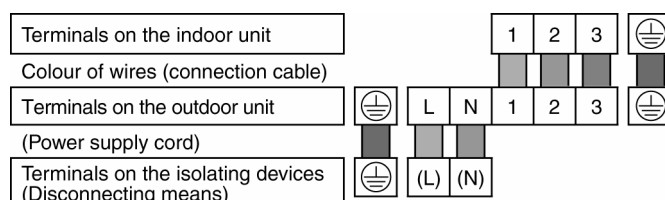

- 5 Secure the power supply cord and connection cable onto the control board with the holder.
- 6 Attach the control board cover back to the original position with screw.
- 7 For wire stripping and connection requirement, refer to instruction 11.1.6.1 of indoor unit.

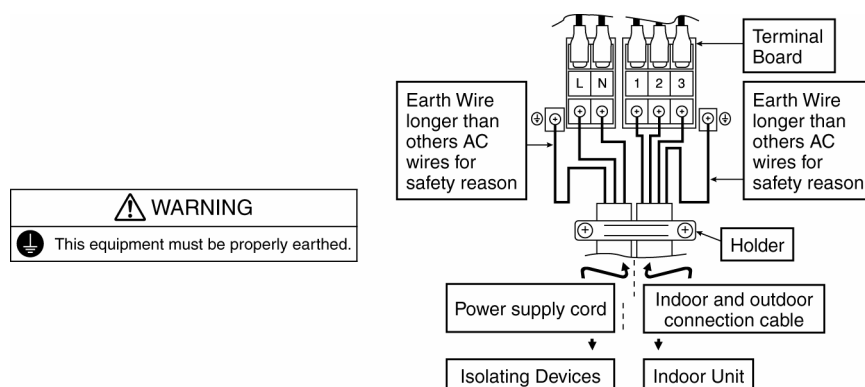


- Note: Isolating Devices (Disconnecting means) should have minimum 3.0 mm contact gap.
- Earth wire shall be Yellow/Green (Y/G) in colour and longer than other AC wires for safety reason.

11.2.6 PIPE INSULATION

- 1 Please carry out insulation at pipe connection portion as mentioned in Indoor/Outdoor Unit Installation Diagram. Please wrap the insulated piping end to prevent water from going inside the piping.
- 2 If drain hose or connecting piping is in the room (where dew may form), please increase the insulation by using POLY-E FOAM with thickness 8 mm or above.

DISPOSAL OF OUTDOOR UNIT DRAIN WATER

- If a drain elbow is used, the unit should be placed on a stand which is taller than 30 mm.
- If the unit is used in an area where temperature falls below 0°C for 2 or 3 days in succession, it is recommended not to use a drain elbow, for the drain water freezes and the fan will not rotate.

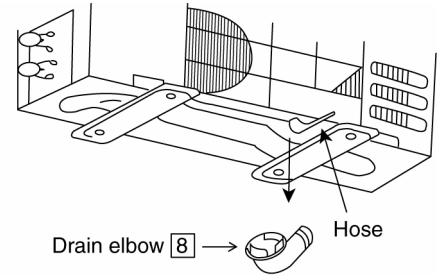

Install the hose at an angle so that the water smoothly flows out.

CHECK ITEMS

- | | |
|---|---|
| <input type="checkbox"/> Is there any gas leakage at flare nut connections? | <input type="checkbox"/> Is the Earth wire connection done properly? |
| <input type="checkbox"/> Has the heat insulation been carried out at flare nut connections? | <input type="checkbox"/> Is the power supply voltage complied with the rated value? |
| <input type="checkbox"/> Is the connection cable being fixed firmly to the terminal board? | <input type="checkbox"/> Is there any abnormal sound emitted? |
| <input type="checkbox"/> Is the connection cable being clamped firmly? | <input type="checkbox"/> Is the cooling / heating operation normal? |
| <input type="checkbox"/> Is the drainage OK? (Refer to the "Check the Drainage" section) | <input type="checkbox"/> Is the thermostat operation normal? |
| | <input type="checkbox"/> Is the Remote Control's LCD operation normal? |


12. Operation and Control

12.1 Basic Function

Inverter control, which equipped with a microcomputer in determining the most suitable operating mode as time passes, automatically adjusts output power for maximum comfort always. In order to achieve the suitable operating mode, the microcomputer maintains the set temperature by measuring the temperature of the environment and performing temperature shifting. The compressor at outdoor unit is operating following the frequency instructed by the microcomputer at indoor unit that judging the condition according to internal setting temperature and intake air temperature.

12.1.1 Internal Setting Temperature

Once the operation starts, remote control setting temperature will be taken as base value for temperature shifting processes. These shifting processes are depending on the air conditioner settings and the operation environment. The final shifted value will be used as internal setting temperature and it is updated continuously whenever the electrical power is supplied to the unit.

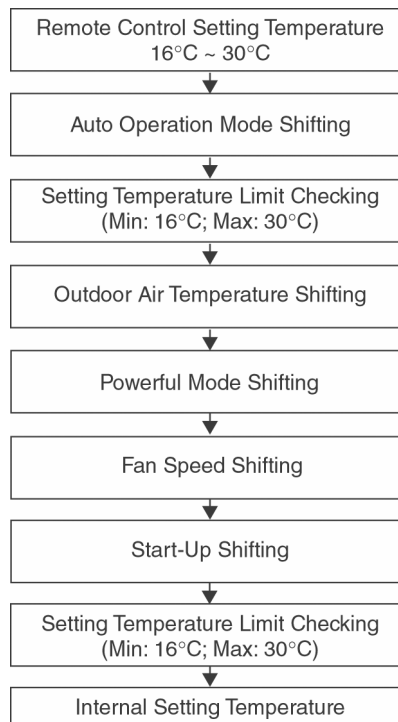

12.1.2 Cooling Operation

12.1.2.1 Thermostat control

- Compressor is OFF when Intake Air Temperature - Internal Setting Temperature < -2.0°C continue for 3 minutes.
- Compressor is ON after waiting for 3 minutes, if the Intake Air Temperature - Internal Setting Temperature > Compressor OFF point.

12.1.3 Soft Dry Operation

12.1.3.1 Thermostat control

- Compressor is OFF when Intake Air Temperature - Internal Setting Temperature < -2.0°C continue for 3 minutes.
- Compressor is ON after waiting for 3 minutes, if the Intake Air Temperature - Internal Setting Temperature > Compressor OFF point.


12.1.4 Heating Operation

12.1.4.1 Thermostat control


- Compressor is OFF when Intake Air Temperature - Internal Setting Temperature $> +2.0^{\circ}\text{C}$.
- Compressor is ON after waiting for 3 minutes, if the Intake Air Temperature - Internal Setting Temperature $<$ Compressor OFF point.

12.1.5 Automatic Operation

- This mode can be set using remote control and the operation is decided by remote control setting temperature, remote control operation mode and indoor intake air temperature.
- During operation mode judgment, indoor fan motor (with speed of Lo-) is running for 30 seconds to detect the indoor intake air temperature.
- Every 10 minutes, the indoor temperature is judged.
- For the 1st judgment
 - If indoor intake temperature - remote control setting temperature $\geq 2^{\circ}\text{C}$, COOL mode is decided.
 - If $-2^{\circ}\text{C} \leq$ indoor intake temperature - remote control setting temperature $< 2^{\circ}\text{C}$, DRY mode is decided.
 - If indoor intake temperature - remote control setting temperature $< -2^{\circ}\text{C}$, HEAT mode is decided.

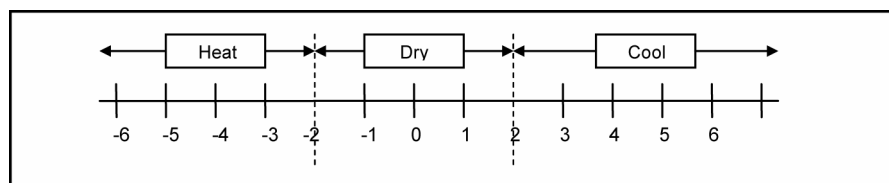

- For the 2nd judgment onwards
 - If indoor intake temperature - remote control setting temperature $\geq 3^{\circ}\text{C}$, if previous operate in DRY mode, then continue in DRY mode. otherwise COOL mode is decided.
 - If $-2^{\circ}\text{C} \leq$ indoor intake temperature - remote control setting temperature $< 3^{\circ}\text{C}$, maintain with previous mode.
 - If indoor intake temperature - remote control setting temperature $< -2^{\circ}\text{C}$, HEAT mode is decided.

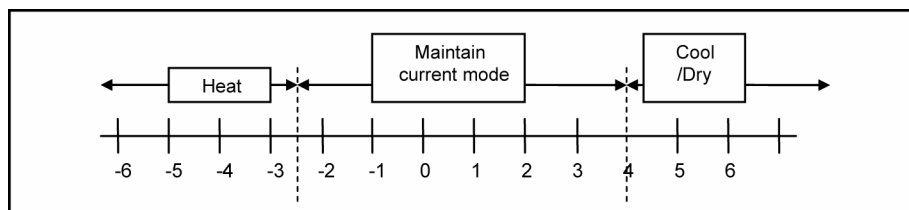

12.1.6 Indoor Fan Motor Operation

A. Basic Rotation Speed (rpm)

i. Manual Fan Speed

[Cooling, Dry]

- Fan motor's number of rotation is determined according to remote control setting.

Remote Control	O	O	O	O	O
Tab (rpm)	Hi	Me+	Me	Me-	Lo

[Heating]

- Fan motor's number of rotation is determined according to remote control setting.


Remote Control	O	O	O	O	O
Tab (rpm)	Shi	Me+	Me	Me-	Lo

ii. Auto Fan Speed

[Cooling, Dry]


- According to room temperature and setting temperature, indoor fan speed is determined automatically.

- The indoor fan will operate according to pattern below.

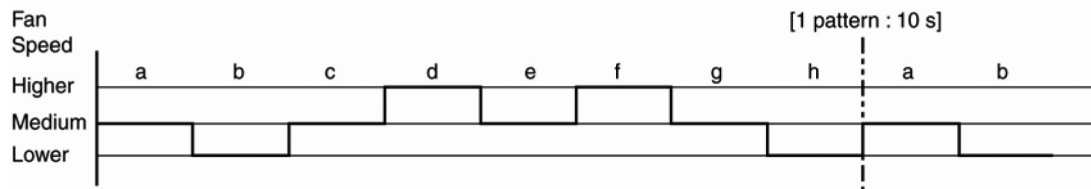

[Heating]

- According to indoor pipe temperature, automatic heating fan speed is determined as follows.

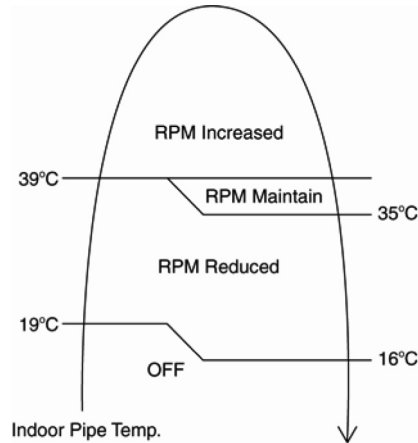


B. Feedback control

- Immediately after the fan motor started, feedback control is performed once every second.
- During fan motor on, if fan motor feedback ≥ 2550 rpm or < 50 rpm continue for 10 seconds, then fan motor error counter increase, fan motor is then stop and restart. If the fan motor counter becomes 7 times, then H19 - fan motor error is detected. Operation stops and cannot on back.

12.1.7 Outdoor Fan Motor Operation

Outdoor fan motor is operated with 15 fan speed. It starts when compressor starts operation and it stops 30 seconds after compressor stops operation.

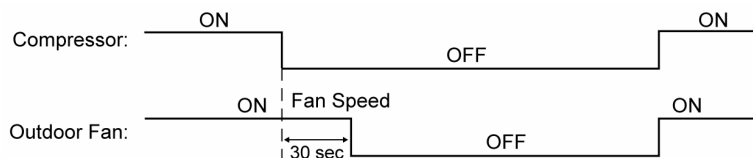

12.2 Quiet Operation (Cooling Mode/Cooling area of Soft Dry Mode)

A. Purpose

To provide quiet cooling operation compare to normal operation.

B. Control condition

a. Quiet operation start condition

- When “quiet” button at remote control is pressed.
Quiet LED illuminates.

b. Quiet operation stop condition

- 1 When one of the following conditions is satisfied, quiet operation stops:
 - a. Powerful button is pressed.
 - b. Stop by OFF/ON switch.
 - c. Timer “off” activates.
 - d. Quiet button is pressed again.
- 2 When quiet operation is stopped, operation is shifted to normal operation with previous setting.
- 3 When fan speed is changed, quiet operation is shifted to quiet operation of the new fan speed.
- 4 When operation mode is changed, quiet operation is shifted to quiet operation of the new mode.
- 5 During quiet operation, if timer “on” activates, quiet operation maintains.
- 6 After off, when on back, quiet operation is not memorised.

C. Control contents

- 1 Auto fan speed is changed from normal setting to quiet setting of respective fan speed.
This is to reduce sound of Hi, Me, Lo for 3dB.
- 2 Manual fan speed for quiet operation is 1 step from setting fan speed.
- 3 Compressor frequency reduced.

12.2.1 Quiet operation (Heating)

A. Purpose

To provide quiet heating operation compare to normal operation.

B. Control condition

a. Quiet operation start condition

- When “quiet” button at remote control is pressed.
Quiet LED illuminates.

b. Quiet operation stop condition

- 1 When one of the following conditions is satisfied, quiet operation stops:
 - a. Powerful button is pressed.
 - b. Stop by OFF/ON switch.
 - c. Timer “off” activates.
 - d. Quiet button is pressed again.
- 2 When quiet operation is stopped, operation is shifted to normal operation with previous setting.
- 3 When fan speed is changed, quiet operation is shifted to quiet operation of the new fan speed.
- 4 When operation mode is changed, quiet operation is shifted to quiet operation of the new mode, except fan only mode.
- 5 During quiet operation, if timer “on” activates, quiet operation maintains.
- 6 After off, when on back, quiet operation is not memorised.

C. Control contents

a. Fan Speed Auto

- Indoor FM RPM depends on pipe temperature sensor of indoor heat exchanger.
Auto fan speed is changed from normal setting to quiet setting of respective fan speed.
This is to reduce sound of Hi, Me, Lo for 3dB.

b. Fan Speed Manual

- Manual fan speed for quiet operation is - 1 step from setting fan speed.

c. Compressor frequency reduced.

12.3 Powerful Mode Operation

When the powerful mode is selected, the internal setting temperature will shift higher up to +6.0°C (for Heating) or lower up to 4°C (for Cooling/Soft Dry) than remote control setting temperature for 20 minutes to achieve the setting temperature quickly.


12.4 Timer Control

12.4.1 ON Timer Control

ON timer can be set using remote control, the unit with timer set will start operate earlier than the setting time. This is to provide a comfortable environment when reaching the set ON time.

60 minutes before the set time, indoor (at fan speed of Lo-) and outdoor fan motor start operate for 30 seconds to determine the indoor intake air temperature and outdoor air temperature in order to judge the operation starting time.

From the above judgment, the decided operation will start operate earlier than the set time as shown below.

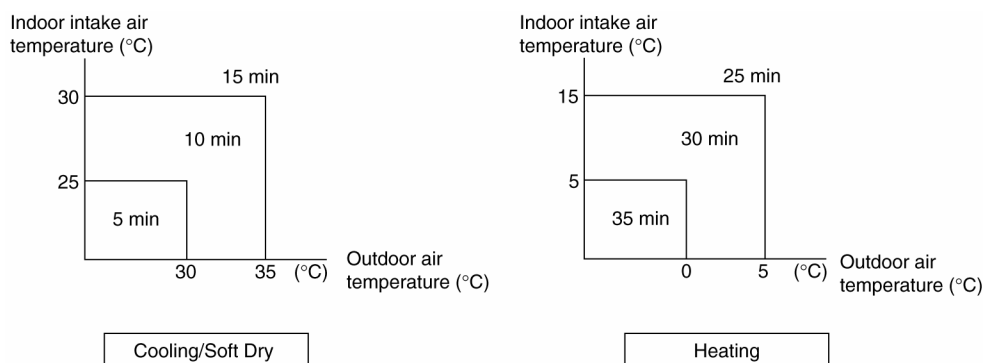

12.4.2 OFF Timer Control

OFF timer can be set using remote control, the unit with timer set will stop operate at set time.

12.5 Auto Restart Control

- 1 When the power supply is cut off during the operation of air conditioner, the compressor will re-operate within three to four minutes (there are 10 patterns between 2 minutes 58 seconds and 3 minutes 52 seconds to be selected randomly) after power supply resumes.
- 2 This type of control is not applicable during ON/OFF Timer setting.
- 3 This control can be omitted by open the circuit of JP10 at indoor unit printed board.

12.6 Indication Panel

LED	OFF/ON Operation
Color	Green
Light ON	Operation ON
Light OFF	Operation OFF

Note:

- If OFF/ON operation LED is OFF and OFF indicator does not shown on remote control display, there is an abnormality operation occurs.

13. Protection Control

13.1 Protection Control For All Operations

13.1.1 Restart Control (Time Delay Safety Control)

- The Compressor will not turn on within 3 minutes from the moment operation stops, although the unit is turned on again by pressing OFF/ON button at remote control within this period.
- This control is not applicable if the power supply is cut off and on again.
- This phenomenon is to balance the pressure inside the refrigerant cycle.

13.1.2 30 Seconds Forced Operation


- Once the air conditioner is turned on, the compressor will not stop within 30 seconds in a normal operation although the intake air temperature has reached the thermo-off temperature. However, force stop by pressing the OFF/ON button at the remote control is permitted or the Auto OFF/ON button at indoor unit.
- The reason for the compressor to force operation for minimum 30 seconds is to allow the refrigerant oil run in a full cycle and return back to the outdoor unit.

13.1.3 Total Running Current Control

- 1 When the outdoor unit total running current (AC) exceeds X value, the frequency instructed for compressor operation will be decreased.
- 2 If the running current does not exceed X value for five seconds, the frequency instructed will be increased.
- 3 However, if total outdoor unit running current exceeds Y value, compressor will be stopped immediately for 3 minutes.

Operation mode	E12QD3EAW	
	X (A)	Y (A)
Cooling/Soft Dry (A)	6.65	14.70
Cooling/Soft Dry (B/C)	6.11	14.70
Heating	6.56	14.70

- 4 The first 30 minutes of cooling operation, (A) will be applied.

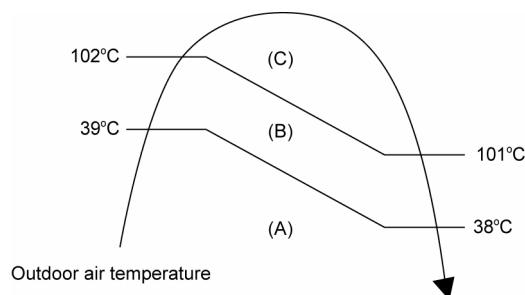


13.1.4 IPM (Power transistor) Prevention Control

- Overheating Prevention Control
 - 1 When the IPM temperature rises to 120°C, compressor operation will stop immediately.
 - 2 Compressor operation restarts after three minutes the temperature decreases to 110°C.
- DC Peak Current Control
 - 1 When electric current to IPM exceeds set value of 30.0 ± 5.0 A, the compressor will stop operate. Then, operation will restart after three minutes.
 - 2 If the set value is exceeded again more than 30 seconds after the compressor starts, the operation will restart after two minutes.
 - 3 If the set value is exceeded again within 30 seconds after the compressor starts, the operation will restart after one minute. If this condition repeats continuously for seven times, all indoor and outdoor relays will be cut off.

13.1.5 Compressor Overheating Prevention Control

Instructed frequency for compressor operation will be regulated by compressor top temperature. The changes of frequency are as below figure.

If compressor temperature exceeds 107°C, compressor will be stop, occurs 4 times per 20 minutes, timer LED will be blinking ("F97" is to be confirmed).

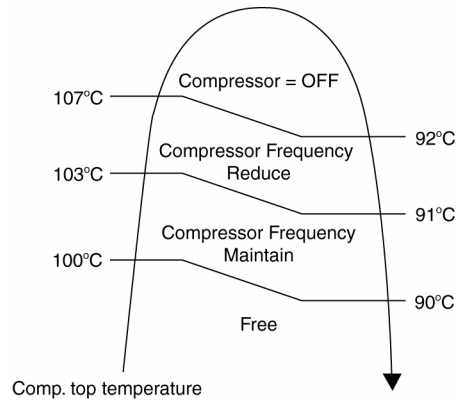


13.2 Protection Control For Cooling & Soft Dry Operation

13.2.1 Outdoor Air Temperature Control

The compressor operating frequency is regulated in accordance to the outdoor air temperature as shown in the diagram below.

This control will begin 1 minute after the compressor starts.

Compressor frequency will adjust base on Outdoor Air Temperature.

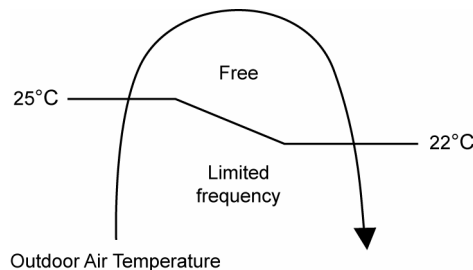

13.2.2 Cooling Overload Control

i. Pipe temperature limitation/restriction

- Detects the Outdoor pipe temperature and carry out below restriction/limitation (Limit the compressor Operation frequency)
- The compressor stop if outdoor pipe temperature exceeds 63°C.
- If the compressor stops 4 times in 20 minutes, Timer LED blinking (F95: outdoor high pressure rise protection)

13.2.3 Dew Prevention Control 1

- 1 To prevent dew formation at indoor unit discharge area.
- 2 This control activated if:
 - Outdoor air temperature and Indoor pipe temperature judgment by microcontroller if fulfilled.
 - When Cooling or Dry mode is operated more than 20 minutes or more.
- 3 This control stopped if:
 - Compressor stopped.
 - Remote control setting changed. (fan speed / temperature)
 - Outdoor air temperature and indoor intake temperature changed.

13.2.4 Dew Prevention Control 2

- 1 To prevent dew formation at indoor unit discharge area.
- 2 This control starts if all conditions continue for 20 minutes:
 - Operated with Cooling or Soft Dry Mode.
 - Indoor intake temperature is between 25°C and 29°C.
 - Outdoor air temperature is less than 30°C.
 - Quiet Lo fan speed.
- 3 This control stopped if:
 - When receive air swing change signal from Remote Control.

13.2.5 Freeze Prevention Control

- 1 When indoor heat exchanger temperature is lower than 0°C continuously for six minutes, compressor will stop operating.
- 2 Compressor will resume its operation 3 minutes after the indoor heat exchanger is higher than 5°C.
- 3 At the same time, indoor fan speed will be higher than during its normal operation.
- 4 If indoor heat exchanger temperature is higher than 13°C, the fan speed will return to its normal operation.

13.3 Protection Control For Heating Operation

13.3.1 Intake Air Temperature Control

Compressor will operate at maximum frequency if below conditions occur:

- 1 When the indoor intake air temperature is 30°C or above.


13.3.2 Outdoor Air Temperature Control

The maximum current value is regulated when the outdoor air temperature rises above 14°C in order to avoid compressor overloading.

13.3.3 Overload Protection Control

The compressor operating frequency is regulated in accordance to indoor heat exchanger temperature as shown in below figures.

If the heat exchanger temperature exceeds 60°C, compressor will stop.

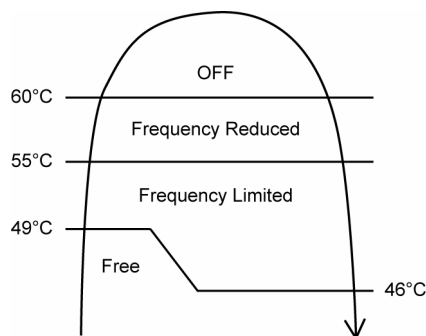

13.3.4 Cold Draught Operation

When indoor pipe temperature is low, cold draught operation start where indoor fan speed will be reduced.

13.3.5 Deice Operation

When outdoor pipe temperature and outdoor temperature is low, deice operation start where indoor fan motor and outdoor fan motor stop and operation LED blinks.

13.3.6 Drain Pump Control

- This unit has built-in with drain pump.


Control content

- During COOL/DRY mode.
 - During COOL/DRY mode, drain pump starts 10 seconds after indoor fan motor starts.
 - The drain pump turns ON and turns OFF periodically. (ON or OFF duration depends on room temperature).
- After COOL/DRY mode, when unit turns OFF (power standby) or changes to HEAT mode.
 - The drain pump turns ON for 60 seconds immediately.
- Error judgment
 - When float switch detects ON signal continuously for 2 minutes 30 seconds, error code H21 are shown.
 - When float switch ON has operated 2 times within 20 minutes, error code H35 are shown.

14. Servicing Mode

14.1 TEST RUN OPERATION (FOR PUMP DOWN/SERVICING PURPOSE)

- The Test Run operation will be activated by short-circuiting CN-S (Pin 1 & 2) at outdoor unit PCB after power supplied to outdoor unit terminal 1 and 2. The unit forced to run rated frequency cooling operation mode.

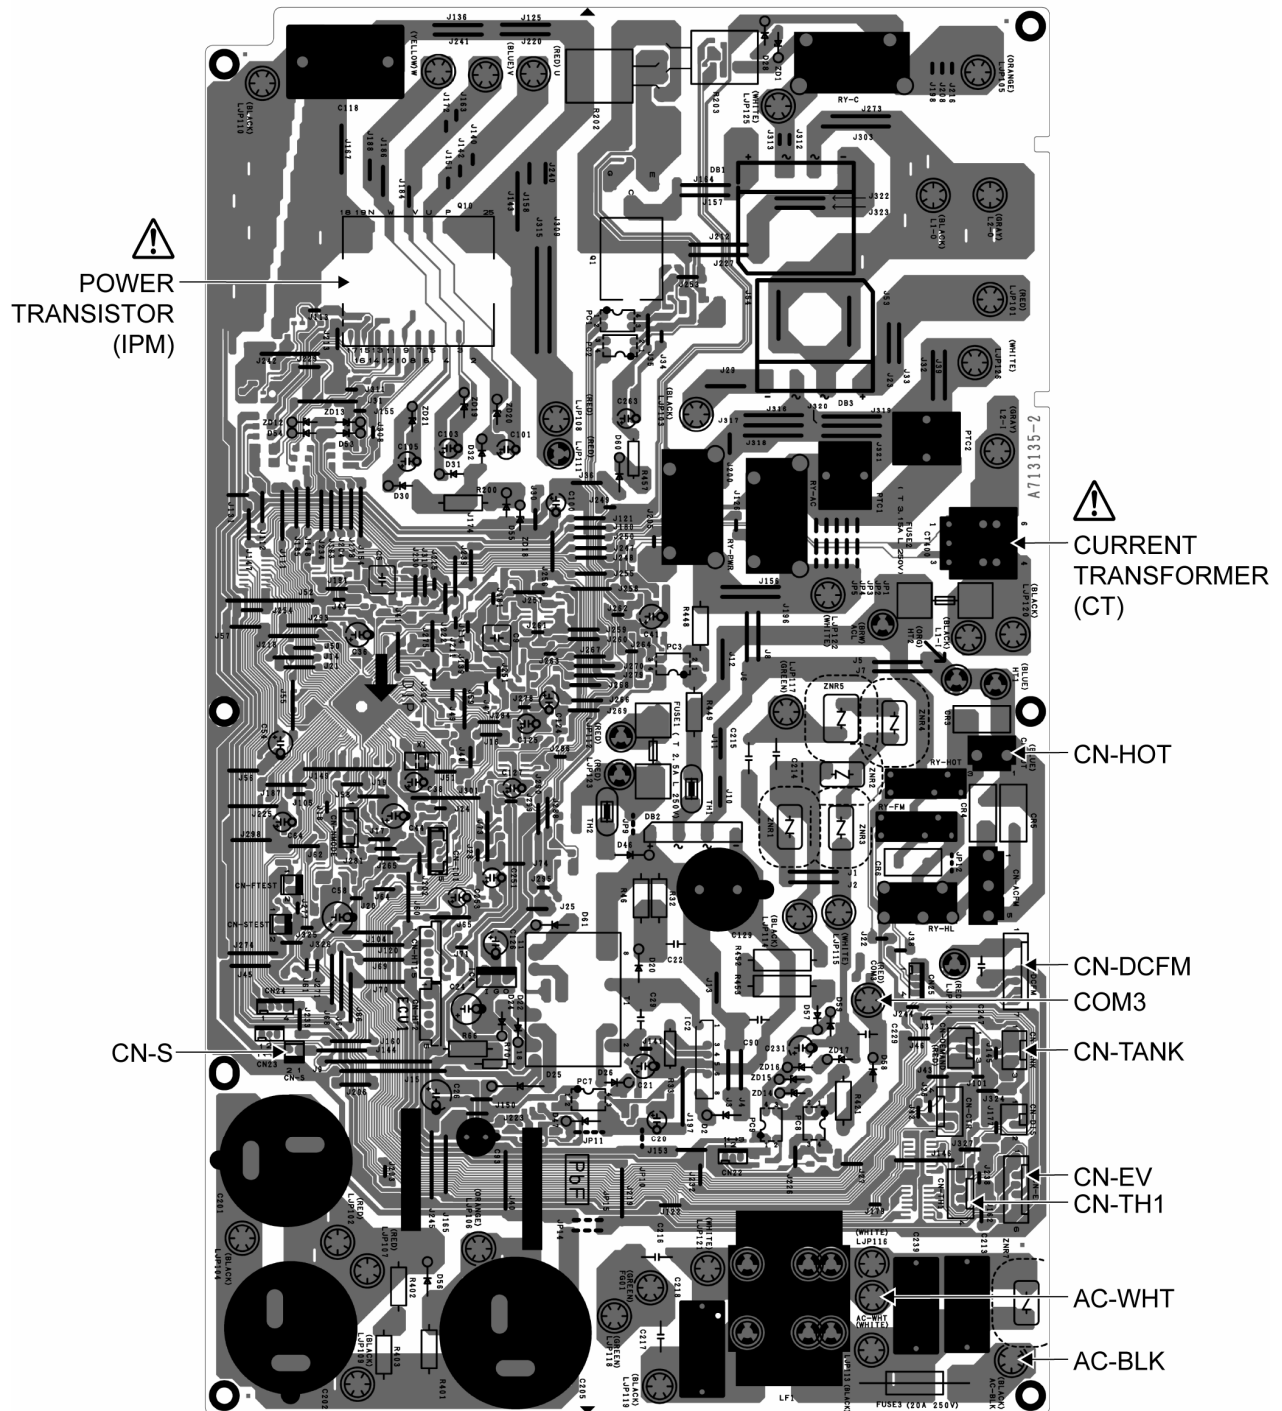

15. Troubleshooting Guide


15.1 Refrigeration Cycle System

In order to diagnose malfunctions, make sure that there are no electrical problems before inspecting the refrigeration cycle. Such problems include insufficient insulation, problem with the power source, malfunction of a compressor and a fan. The normal outlet air temperature and pressure of the refrigeration cycle depends on various conditions, the standard values for them are shown in the table on the right.

Normal Pressure and Outlet Air Temperature (Standard)

	Gas pressure MPa (kg/cm ² G)	Outlet air temperature (°C)
Cooling Mode	0.9 ~ 1.2 (9 ~ 12)	12 ~ 16
Heating Mode	2.3 ~ 2.9 (23 ~ 29)	36 ~ 45

*Condition: • Indoor fan speed; High
• Outdoor temperature 35°C at cooling mode and 7°C at heating mode
• Compressor operates at rated frequency

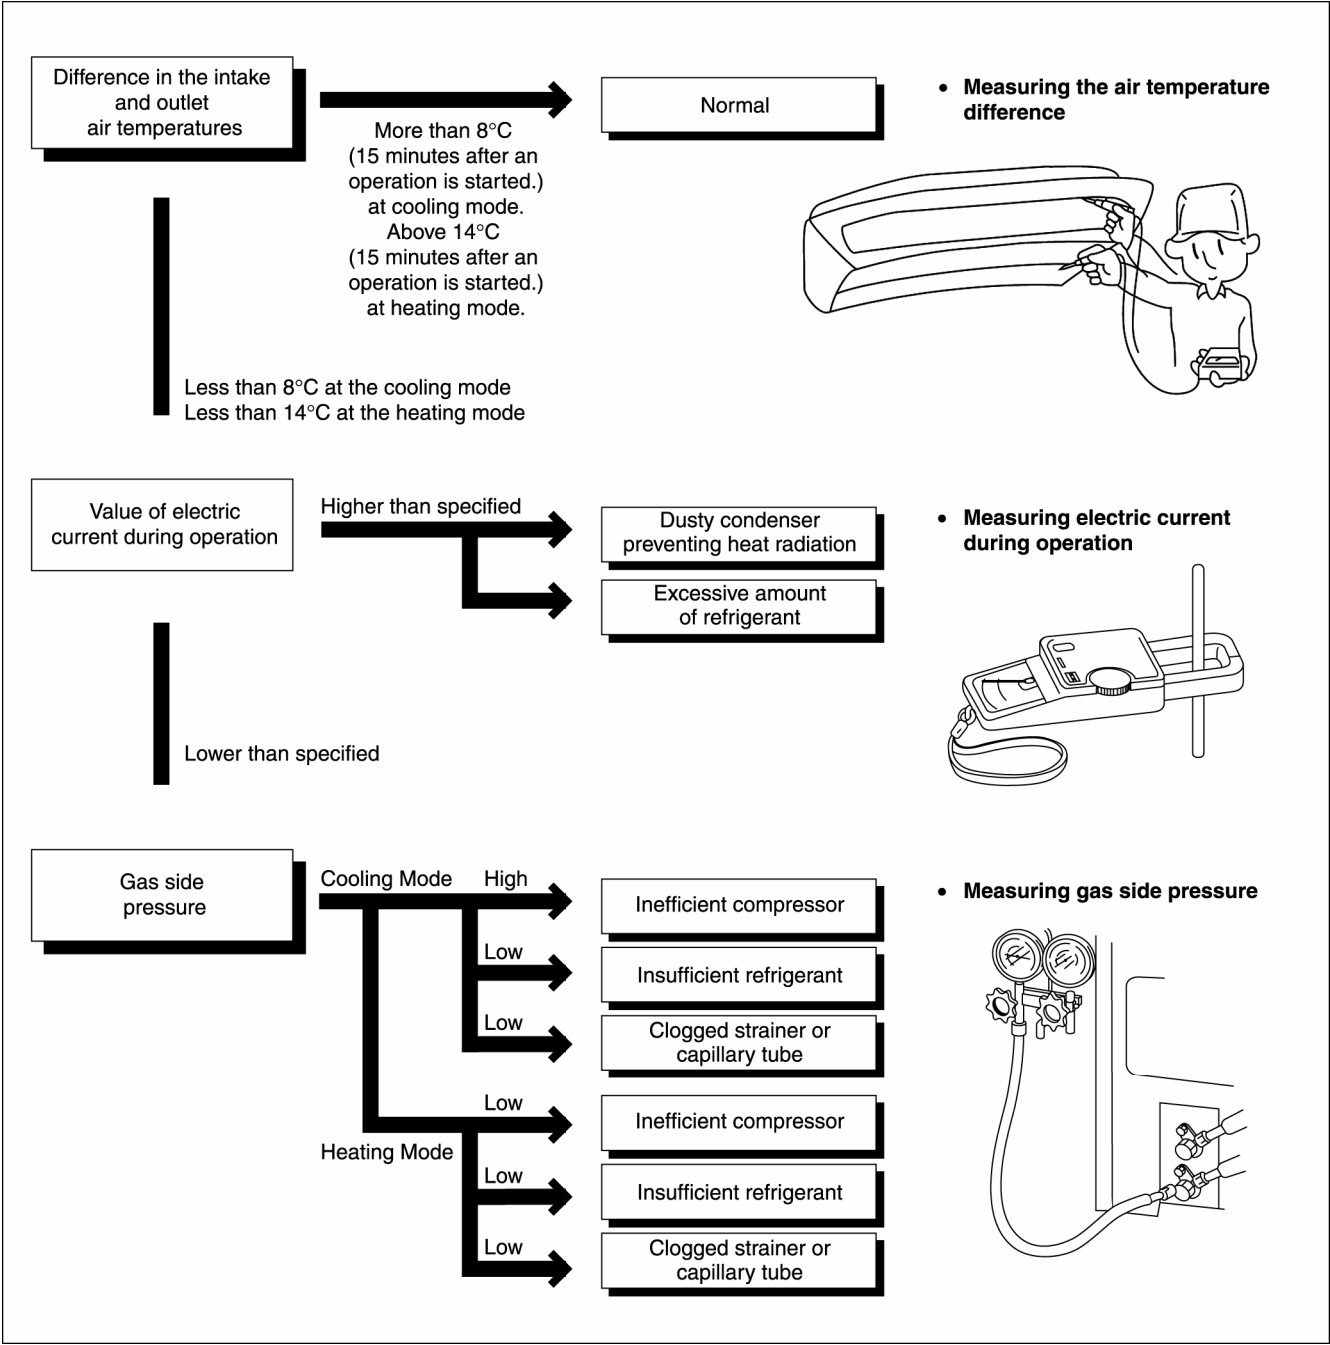

15.2 Relationship Between The Condition Of The Air Conditioner And Pressure And Electric Current

Condition of the air conditioner	Cooling Mode			Heating Mode		
	Low Pressure	High Pressure	Electric current during operation	Low Pressure	High Pressure	Electric current during operation
Insufficient refrigerant (gas leakage)	↘	↘	↘	↘	↘	↘
Clogged capillary tube or Strainer	↘	↘	↘	↗	↗	↗
Short circuit in the indoor unit	↘	↘	↘	↗	↗	↗
Heat radiation deficiency of the outdoor unit	↗	↗	↗	↘	↘	↘
Inefficient compression	↗	↘	↘	↗	↘	↘

- Carry out the measurement of pressure, electric current, and temperature fifteen minutes after an operation is started.


15.3 Breakdown Self Diagnosis Function

15.3.1 Self Diagnosis Function (Three Digits Alphanumeric Code)

- Once abnormality has occurred during operation, the unit will stop its operation, and OFF/ON operation LED OFF.
- OFF indicator does not shown on remote control display.
- In operation after breakdown repair, the last error code abnormality will be stored in EEPROM.
- **To make a diagnosis**
 - 1 OFF/ON operation LED OFF and the unit automatically stops the operation, but the OFF indicator does not shown.
 - 2 Press CHECK button continuously for 5 seconds.
 - 3 “- -” will be displayed on the remote controller display.
 - 4 Press timer ▲ or ▼ button on the remote control. The error code “H00” (no abnormality) will be displayed.
 - 5 Every press of the button (▲ or ▼) will increase the error code number.
 - 6 When the displayed error code matches the unit's error code, OFF/ON operation LED will be ON continuously.
 - 7 The breakdown diagnosis mode will be cancelled by pressing CHECK button continuously for 5 seconds or wait for 30 seconds

- **AC Reset button**

When AC Reset button is pressed, the error code will be reset so that the unit will be able to operate and recheck if any error occurred.

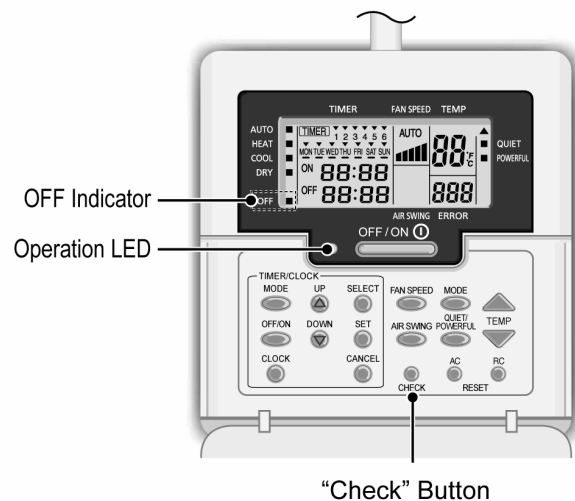

- **To display memorized error status:**

- 1 Turn ON the power supply.
- 2 Press CHECK button continuously for 5 seconds.
- 3 “- -” will be displayed on the remote controller display.
- 4 Press timer ▲ or ▼ button on the remote control. The error code "H00" (no abnormality) will be displayed.
- 5 Every press of the button (▲ or ▼) will increase the error code number.
- 6 When the displayed error code matches the unit's error code, OFF/ON operation LED will be ON continuously.
- 7 The breakdown diagnosis mode will be cancelled by pressing CHECK button continuously for 5 seconds or wait for 30 seconds.

15.4 Error Codes Table

Diagnosis display	Abnormality / Protection control	Abnormality Judgement	Emergency operation	Primary location to verify
H00	No abnormality detected	—	Normal operation	—
H11	Indoor / outdoor abnormal communication	> 1 min. after starting operation	Indoor fan operation only	<ul style="list-style-type: none"> • Internal / external cable connections • Indoor / Outdoor PCB
H12	Connection capability rank abnormal	—	—	—
H14	Indoor intake air temperature sensor abnormality	Continue for 5 sec.	—	<ul style="list-style-type: none"> • Intake air temperature sensor (defective or disconnected)
H15	Outdoor compressor temperature sensor abnormality	Continue for 5 sec.	—	<ul style="list-style-type: none"> • Compressor temperature sensor (defective or disconnected)
H16	Outdoor Current Transformer open circuit	—	—	<ul style="list-style-type: none"> • Outdoor PCB • IPM (Power transistor) module
H19	Indoor fan motor mechanism lock	—	—	<ul style="list-style-type: none"> • Indoor PCB • Fan motor
H21	Indoor float switch operation abnormal	—	—	—
H23	Indoor heat exchanger temperature sensor 1 abnormality	Continue for 5 sec.	O (Cooling only)	<ul style="list-style-type: none"> • Heat exchanger temperature sensor 1 (defective or disconnected)
H24	Indoor heat exchanger temperature sensor 2 abnormality	Continue for 5 sec.	—	<ul style="list-style-type: none"> • Heat exchanger temperature sensor 2 (defective or disconnected)
H27	Outdoor air temperature sensor abnormality	Continue for 5 sec.	O	<ul style="list-style-type: none"> • Outdoor temperature sensor (defective or disconnected)
H28	Outdoor heat exchanger temperature sensor abnormality	Continue for 5 sec.	O	<ul style="list-style-type: none"> • Outdoor heat exchanger temperature sensor (defective or disconnected)
H30	Discharge temperature sensor abnormality	Continue for 5 sec.	—	<ul style="list-style-type: none"> • Discharge temperature sensor
H32	Outdoor heat exchanger temperature sensor 2 abnormality	Continue for 5 sec.	—	<ul style="list-style-type: none"> • Discharge pipe temperature sensor (defective or disconnected).
H34	Outdoor heat sink temperature sensor abnormality	Continue for 2 sec.	—	<ul style="list-style-type: none"> • Outdoor heat sink temperature sensor (defective or disconnected).
H35	Indoor drain water adverse current abnormal	—	—	—
H36	Gas pipe temperature sensor abnormality	Continue for 5 sec.	—	<ul style="list-style-type: none"> • Gas pipe temperature sensor (defective or disconnected).
H37	Outdoor liquid pipe temperature sensor abnormality	Continue for 2 sec.	—	<ul style="list-style-type: none"> • Outdoor liquid pipe temperature sensor (defective or disconnected).
H39	Abnormal indoor operating unit or standby units	—	—	—
H41	Wiring or piping connection abnormality	3 minutes after compressor start up	—	—
H97	Outdoor Fan Motor lock abnormality	2 times occurrence within 30 minutes	—	<ul style="list-style-type: none"> • Outdoor PCB • Outdoor Fan Motor
H98	Indoor high pressure protection	—	—	<ul style="list-style-type: none"> • Air filter dirty • Air circulation short circuit
H99	Indoor heat exchanger anti-freezing protection	—	—	<ul style="list-style-type: none"> • Insufficient refrigerant • Air filter dirty
F11	Cooling / Heating cycle changeover abnormality	4 times occurrence within 30 minutes	—	<ul style="list-style-type: none"> • 4-way valve • V-coil
F17	Indoor unit freezing error	3 times occurrence within 30 minutes	—	<ul style="list-style-type: none"> • Expansion valve leakage • Indoor unit pipe temperature sensor (check for changes in characteristics and check its resistance)
F90	PFC control	4 times occurrence within 10 minutes	—	<ul style="list-style-type: none"> • Voltage at PFC
F91	Refrigeration cycle abnormality	2 times occurrence within 20 minutes	—	<ul style="list-style-type: none"> • No refrigerant (3-way valve is closed)
F93	Outdoor compressor abnormal revolution	4 times occurrence within 20 minutes	—	<ul style="list-style-type: none"> • Outdoor compressor
F95	Cool high pressure protection	4 times occurrence within 20 minutes	—	<ul style="list-style-type: none"> • Outdoor refrigerant circuit
F96	IPM (power transistor) overheating protection	—	—	<ul style="list-style-type: none"> • Excess refrigerant • Improper heat radiation • IPM (Power transistor)
F97	Outdoor compressor overheating protection	4 times occurrence within 20 minutes	—	<ul style="list-style-type: none"> • Insufficient refrigerant • Compressor

Diagnosis display	Abnormality / Protection control	Abnormality Judgement	Emergency operation	Primary location to verify
F98	Total running current protection	3 times occurrence within 20 minutes	—	<ul style="list-style-type: none"> • Excess refrigerant • Improper heat radiation
F99	Outdoor Direct Current (DC) peak detection	7 times occurrence continuously	—	<ul style="list-style-type: none"> • Outdoor PCB • IPM (Power transistor) • Compressor

Note:

“O” - Frequency measured and fan speed fixed.

The memory data of error code is erased when the power supply is cut off, or press the Auto Switch until “beep” sound heard following by pressing the “CHECK” button at Remote Control.

Although operation forced to stop when abnormality detected, emergency operation is possible for certain errors (refer to Error Codes Table) by using Remote Control or Auto Switch at indoor unit. However, the Remote Control signal receiving sound is changed from one “beep” to four “beep” sounds.

15.5 Self-diagnosis Method

15.5.1 H11 (Indoor/Outdoor Abnormal Communication)


Malfunction Decision Conditions

- During startup and operation of cooling and heating, the data received from outdoor unit in indoor unit signal transmission is checked whether it is normal.

Malfunction Caused

- Faulty indoor unit PCB.
- Faulty outdoor unit PCB.
- Indoor unit-outdoor unit signal transmission error due to wiring error.
- Indoor unit-outdoor unit signal transmission error due to breaking of wire in the connection wires between the indoor and outdoor units.

Troubleshooting

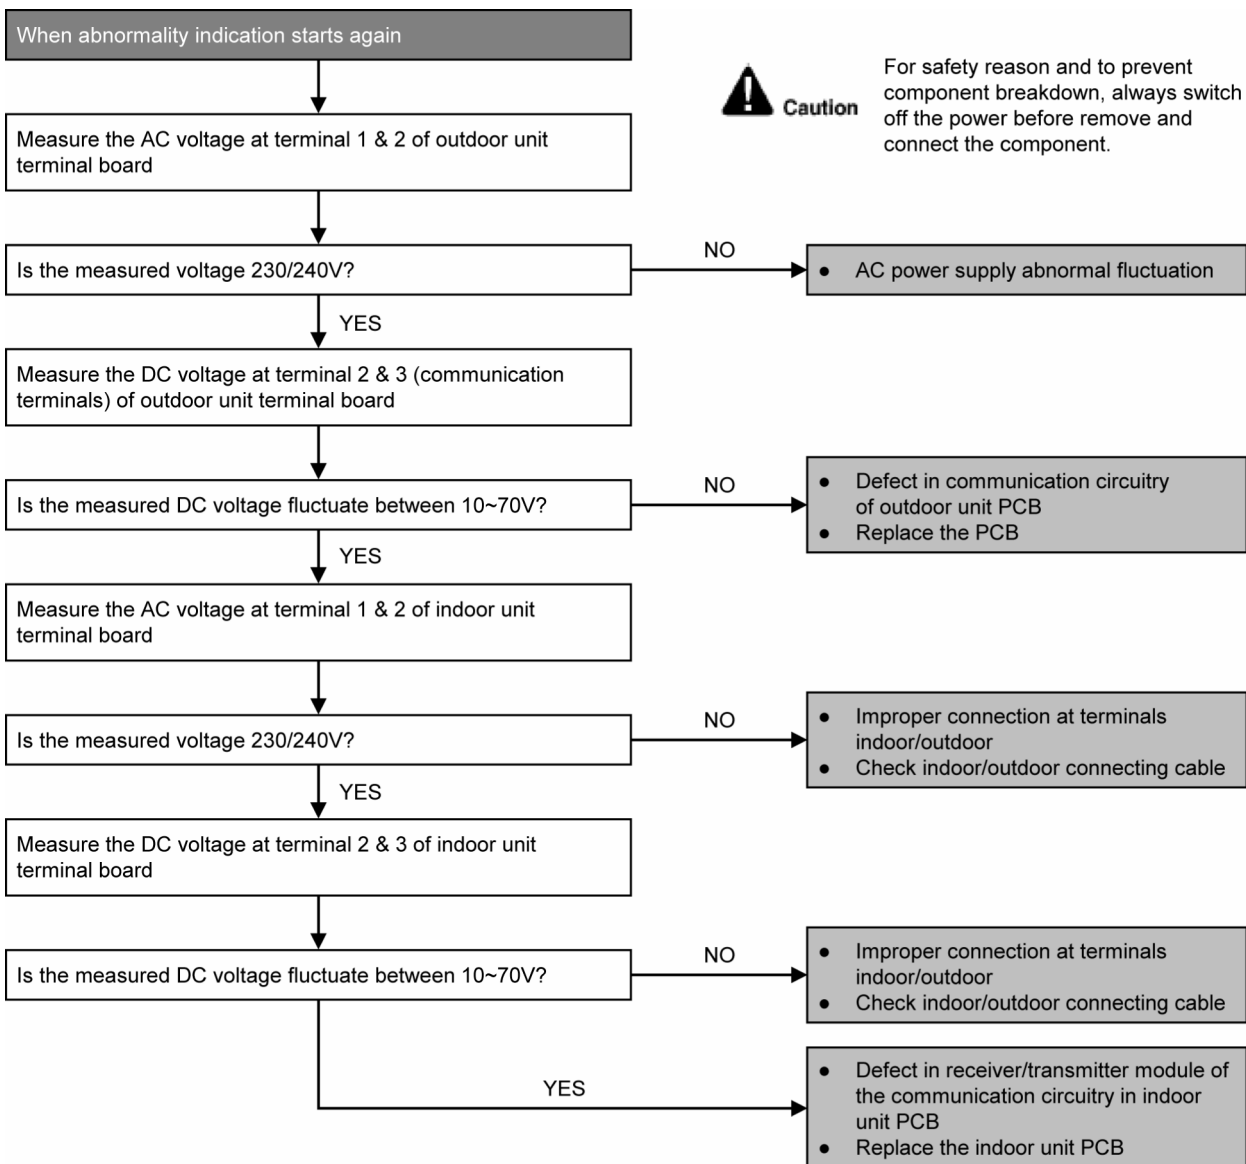

15.5.2 H12 (Indoor/Outdoor Capacity Rank Mismatched)


Malfunction Decision Conditions

- During startup, error code appears when different types of indoor and outdoor units are interconnected.

Malfunction Caused

- Wrong models interconnected.
- Wrong indoor unit or outdoor unit PCBs mounted.
- Indoor unit or outdoor unit PCBs defective.
- Indoor-outdoor unit signal transmission error due to wrong wiring.
- Indoor-outdoor unit signal transmission error due to breaking of wire 3 in the connection wires between the indoor and outdoor units.

Troubleshooting

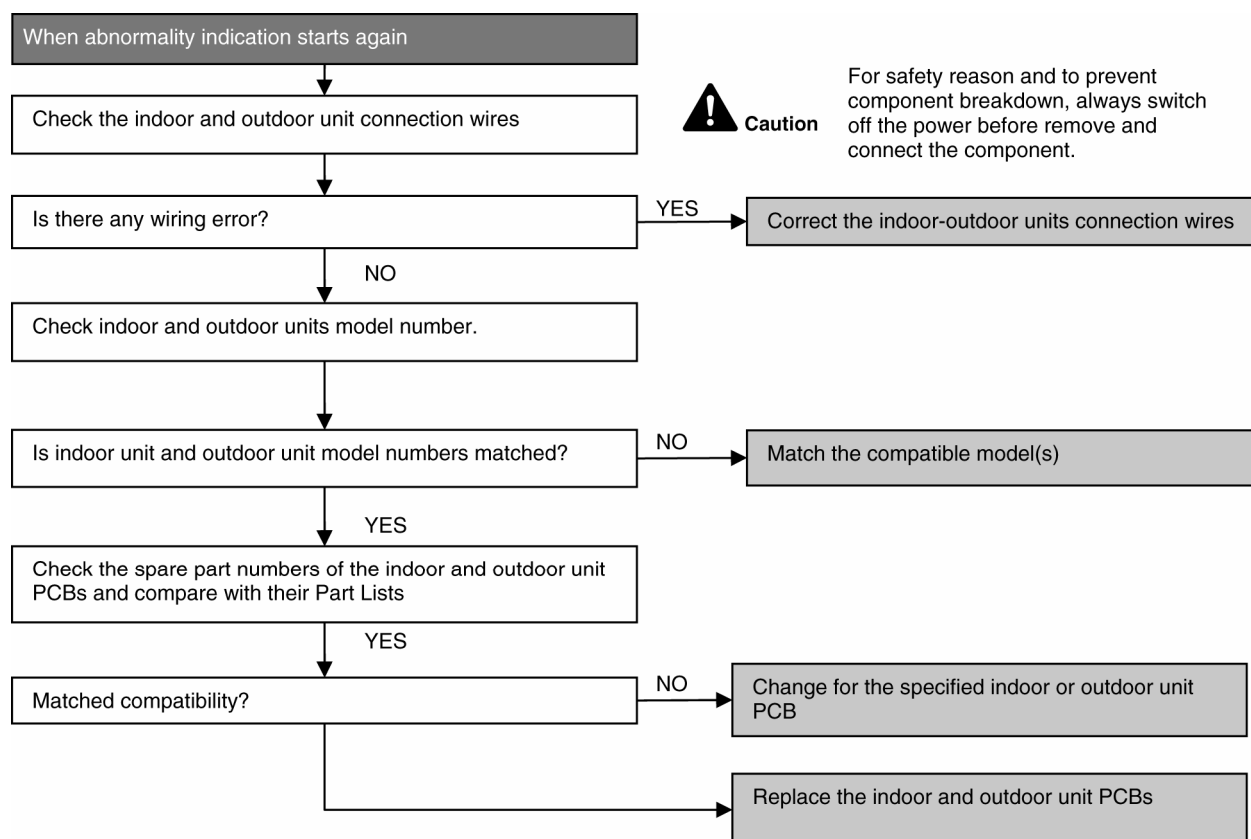

15.5.3 H14 (Indoor Intake Air Temperature Sensor Abnormality)



Malfunction Decision Conditions

- During startup and operation of cooling and heating, the temperatures detected by the indoor intake air temperature sensor are used to determine sensor errors.

Malfunction Caused

- Faulty connector connection.
- Faulty sensor.
- Faulty PCB.

Troubleshooting

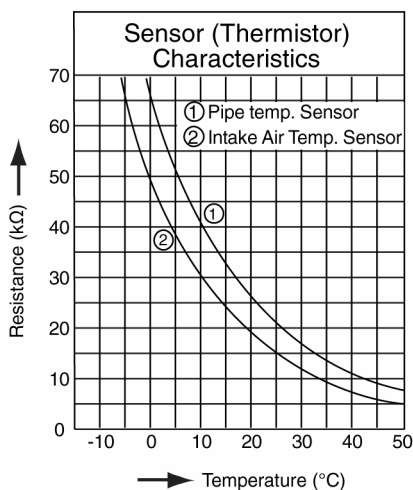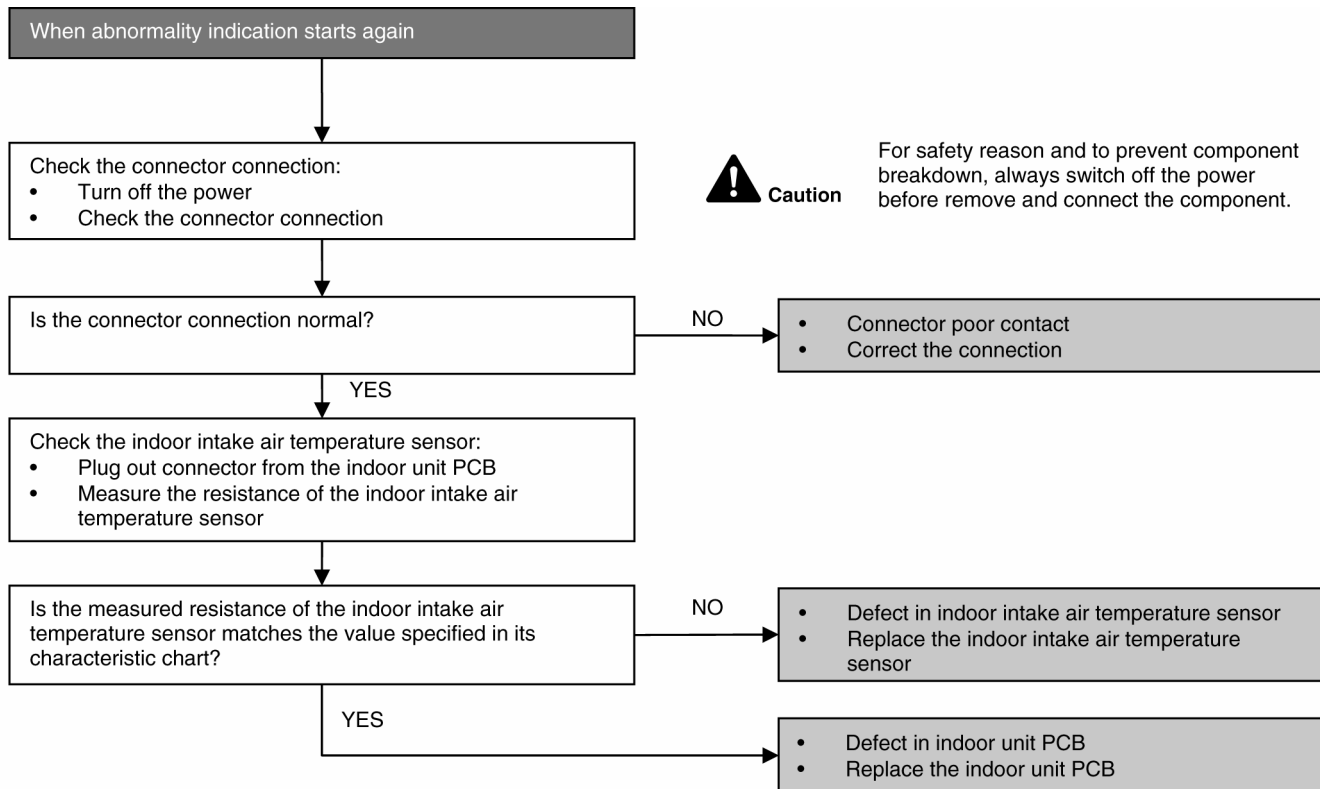

15.5.4 H15 (Compressor Temperature Sensor Abnormality)



Malfunction Decision Conditions

- During startup and operation of cooling and heating, the temperatures detected by the outdoor compressor temperature sensor are used to determine sensor errors.

Malfunction Caused

- Faulty connector connection.
- Faulty sensor.
- Faulty PCB.

Troubleshooting

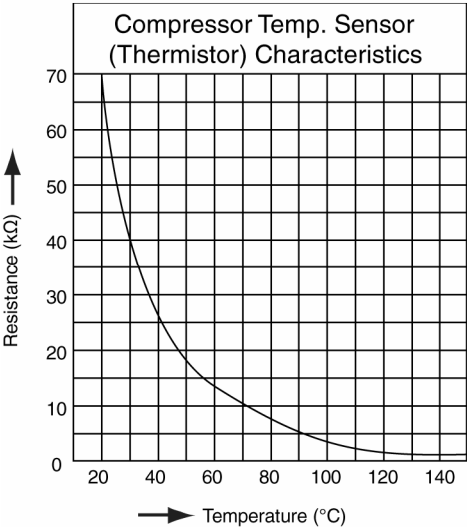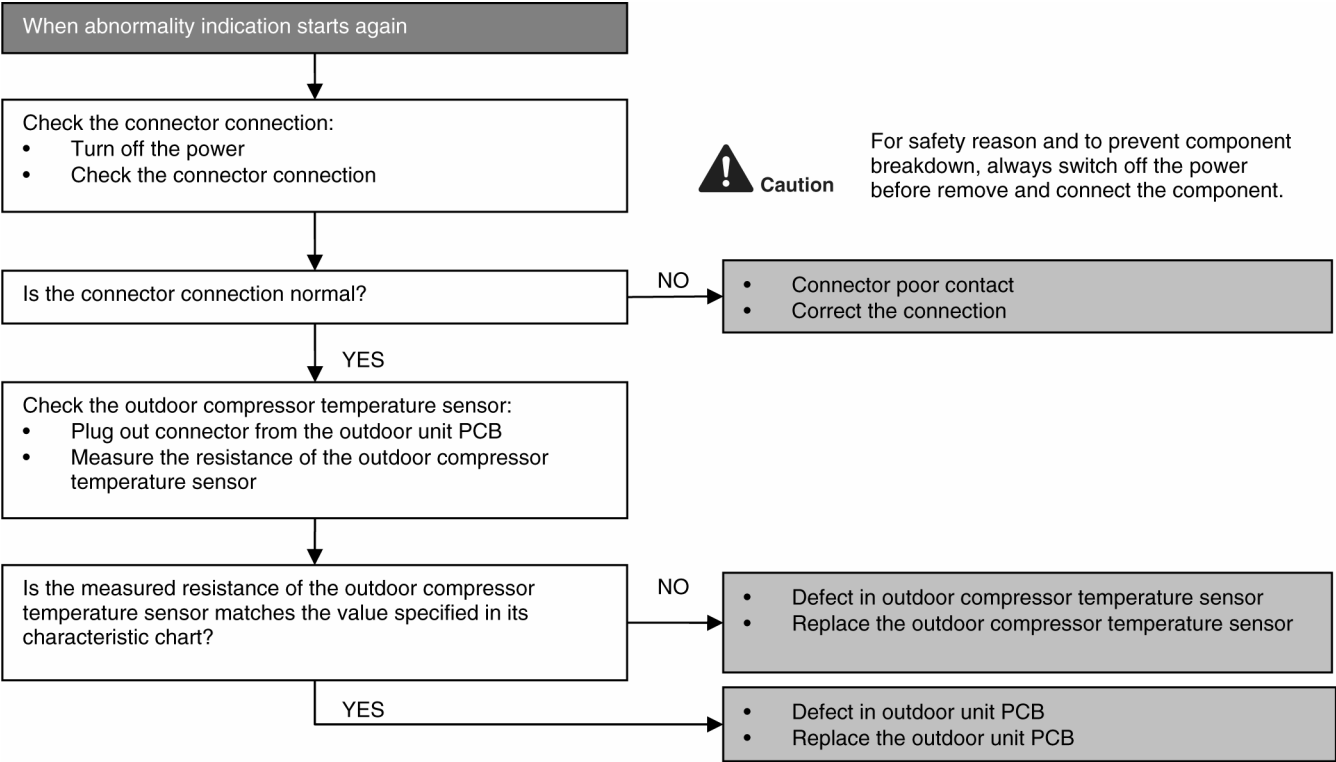

15.5.5 H16 (Outdoor Current Transformer)


Malfunction Decision Conditions

- An input current, detected by Current Transformer CT, is below threshold value when the compressor is operating at certain frequency value for 3 minutes.

Malfunction Caused

- Lack of gas
- Broken CT (current transformer)
- Broken Outdoor PCB

Troubleshooting

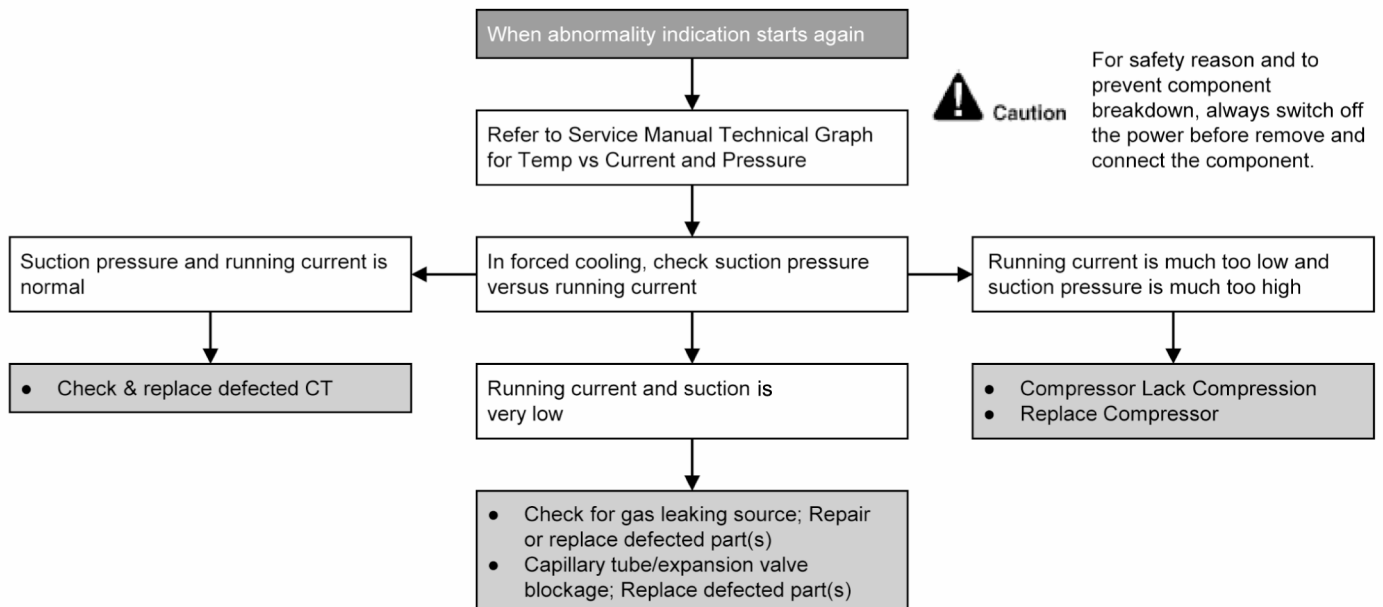

15.5.6 H19 (Indoor Fan Motor – DC Motor Mechanism Locked)


Malfunction Decision Conditions

- The rotation speed detected by the Hall IC during fan motor operation is used to determine abnormal fan motor (feedback of rotation > 2550rpm or < 50rpm)

Malfunction Caused

- Operation stops due to short circuit inside the fan motor winding.
- Operation stops due to breaking of wire inside the fan motor.
- Operation stops due to breaking of fan motor lead wires.
- Operation stops due to Hall IC malfunction.
- Operation error due to faulty indoor unit PCB.

Troubleshooting

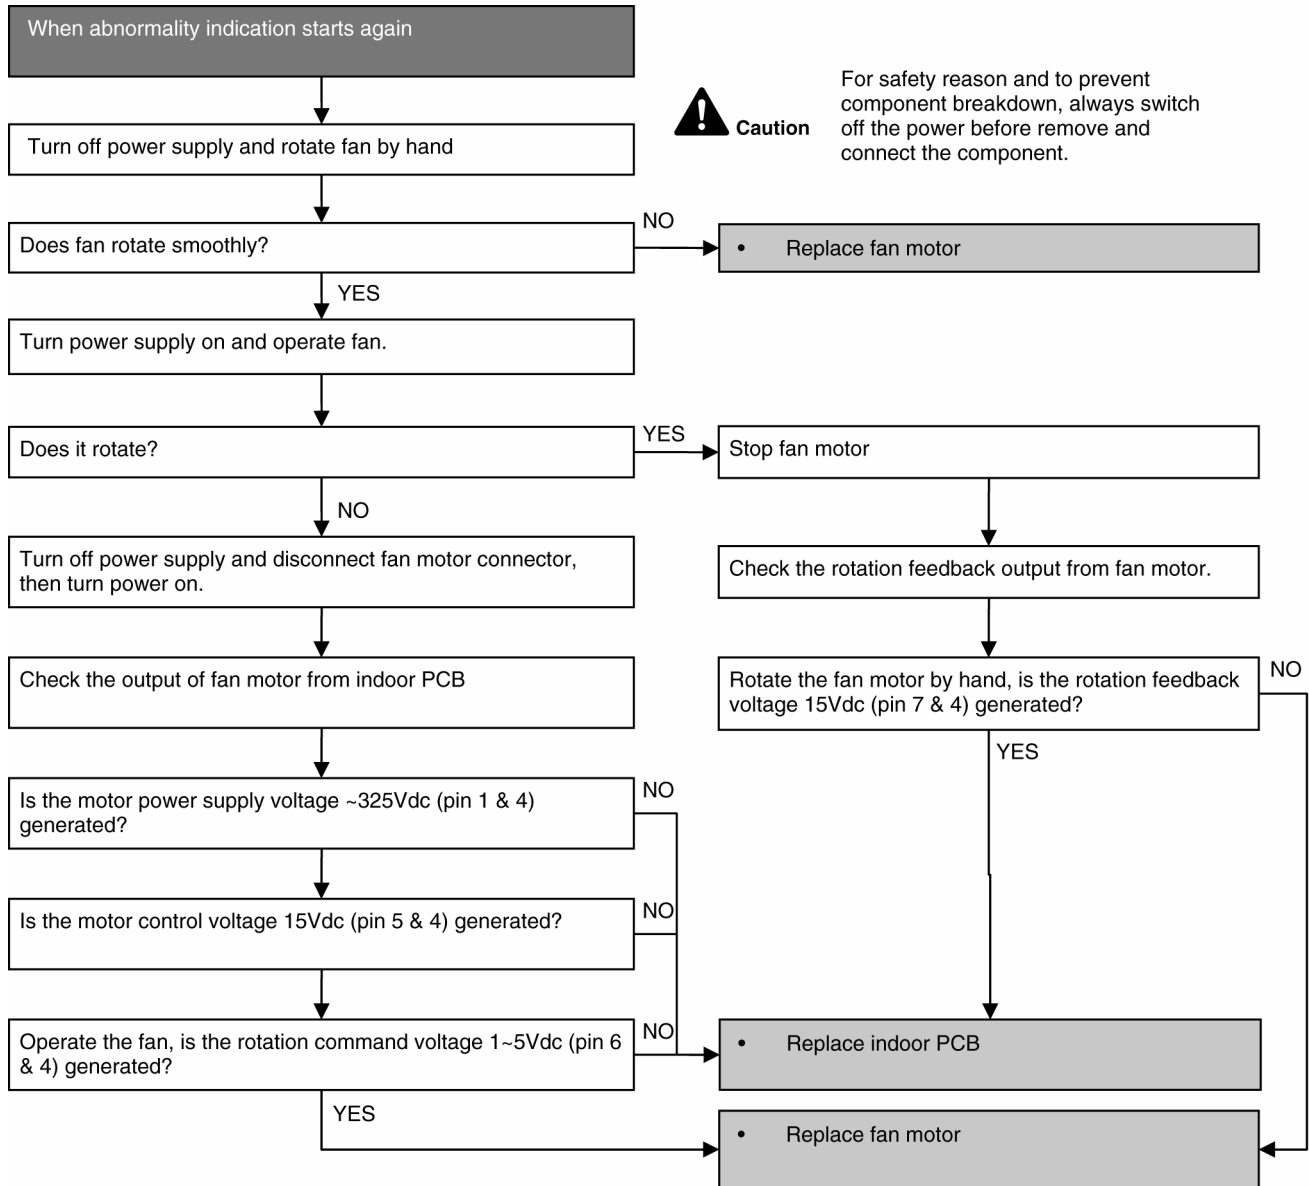

15.5.7 H23 (Indoor Pipe Temperature Sensor Abnormality)



Malfunction Decision Conditions

- During startup and operation of cooling and heating, the temperatures detected by the indoor heat exchanger temperature sensor are used to determine sensor errors.

Malfunction Caused

- Faulty connector connection.
- Faulty sensor.
- Faulty PCB.

Troubleshooting

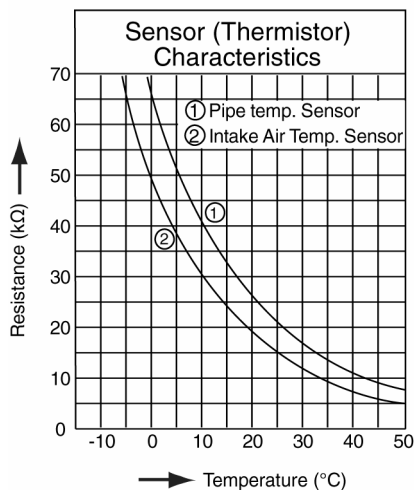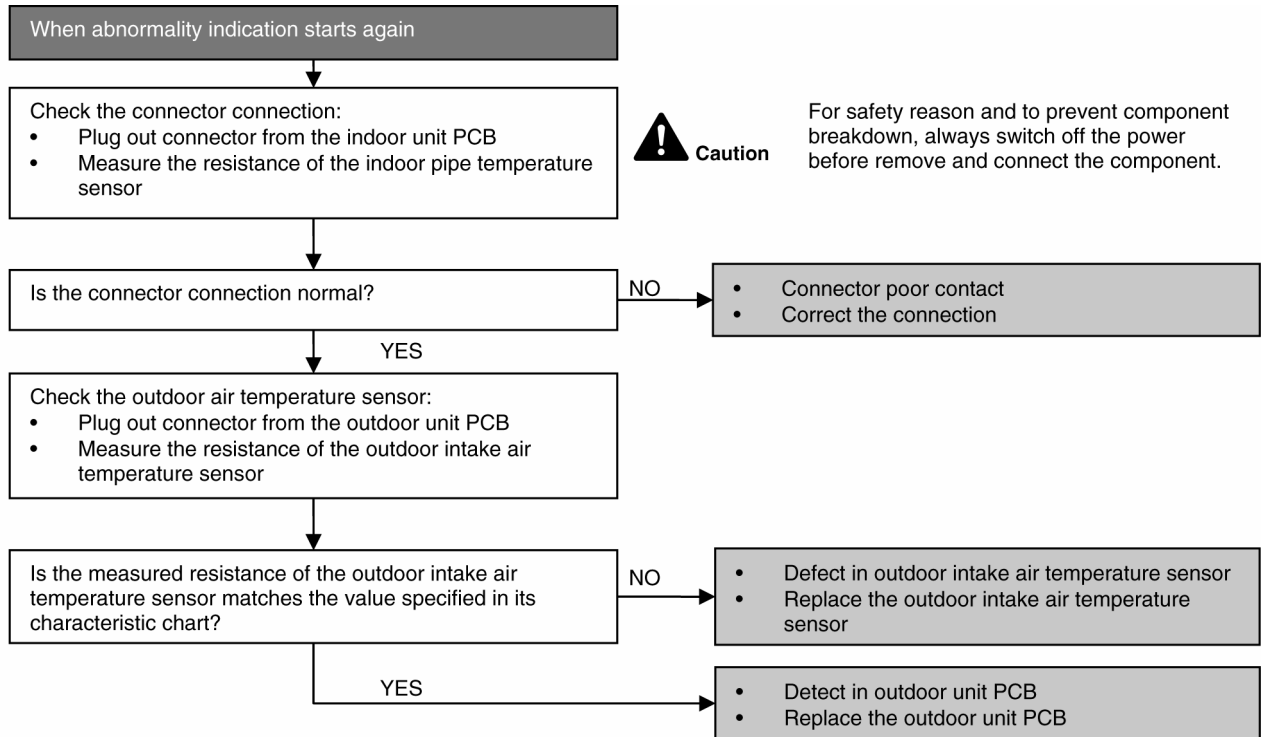

15.5.8 H24 (Indoor Pipe Temperature Sensor 2 Abnormality)



Malfunction Decision Conditions

- During startup and operation of cooling and heating, the temperatures detected by the indoor heat exchanger temperature sensor 2 are used to determine sensor errors.

Malfunction Caused

- Faulty connector connection.
- Faulty sensor.
- Faulty PCB.

Troubleshooting

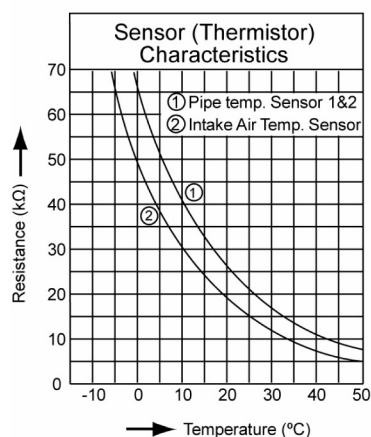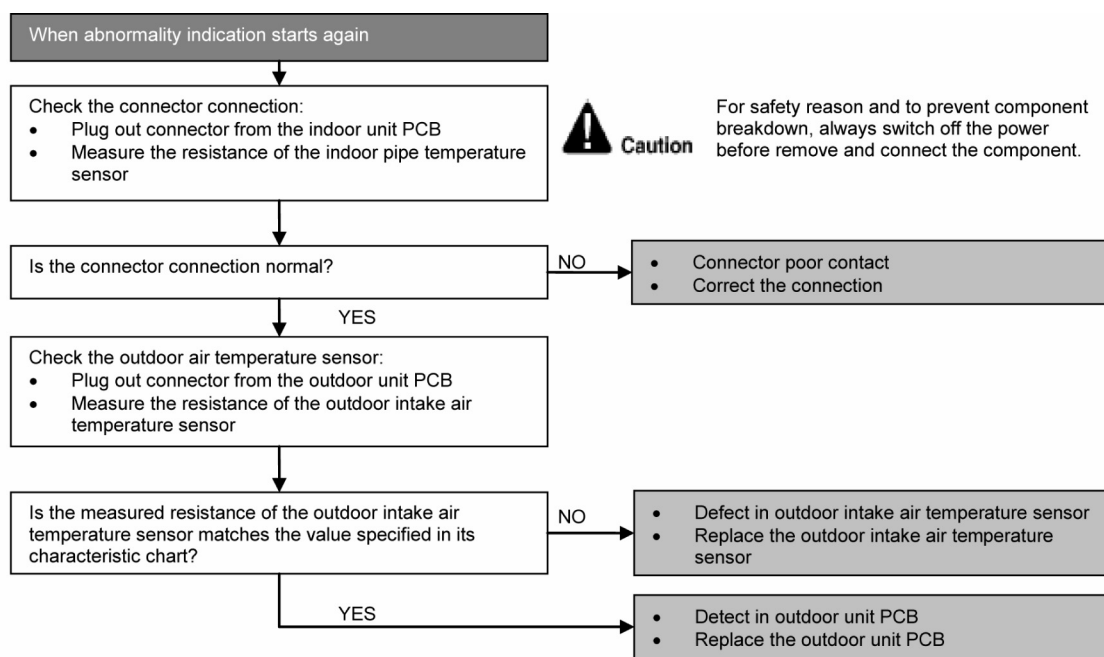

15.5.9 H27 (Outdoor Air Temperature Sensor Abnormality)



Malfunction Decision Conditions

- During startup and operation of cooling and heating, the temperatures detected by the outdoor air temperature sensor are used to determine sensor errors.

Malfunction Caused

- Faulty connector connection.
- Faulty sensor.
- Faulty PCB.

Troubleshooting

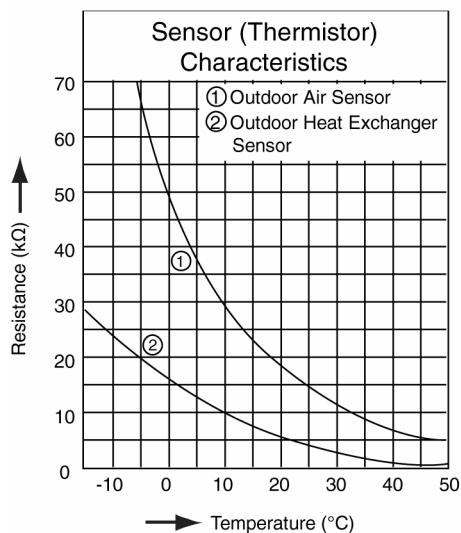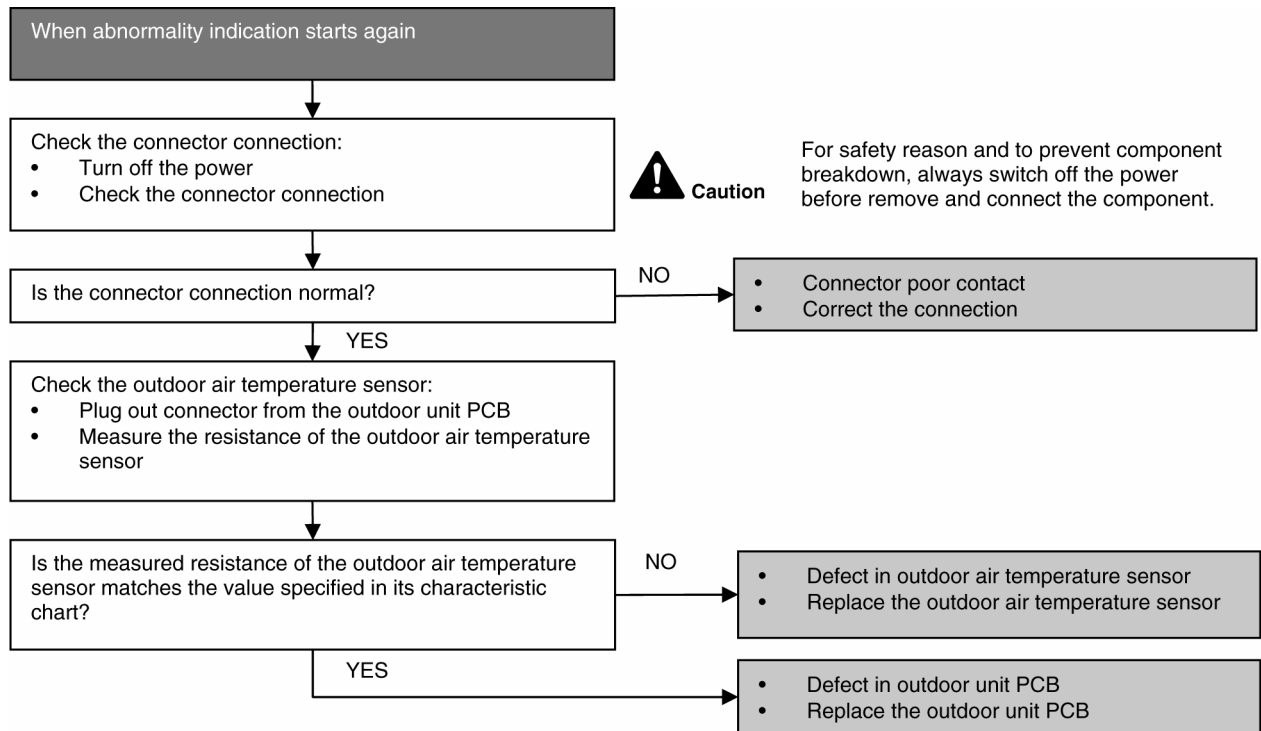

15.5.10 H28 (Outdoor Pipe Temperature Sensor Abnormality)



Malfunction Decision Conditions

- During startup and operation of cooling and heating, the temperatures detected by the outdoor pipe temperature sensor are used to determine sensor errors.

Malfunction Caused

- Faulty connector connection.
- Faulty sensor.
- Faulty PCB.

Troubleshooting

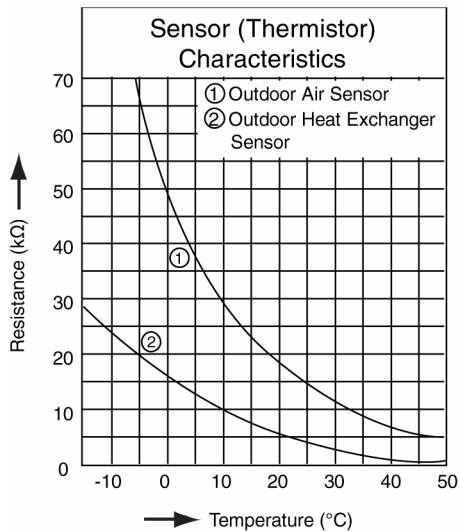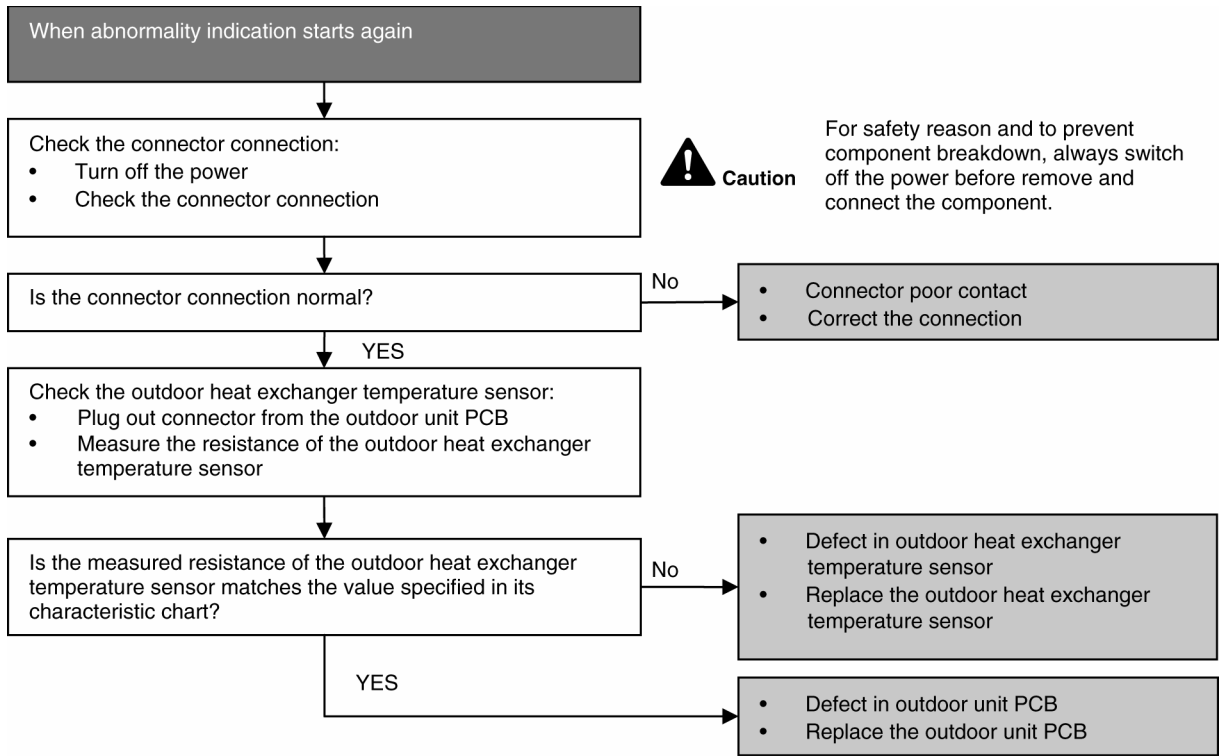

15.5.11 H30 (Compressor Discharge Temperature Sensor Abnormality)


Malfunction Decision Conditions

- During startup and operation of cooling and heating, the temperatures detected by the outdoor discharge pipe temperature sensor are used to determine sensor errors.

Malfunction Caused

- Faulty connector connection.
- Faulty sensor.
- Faulty PCB.

Troubleshooting

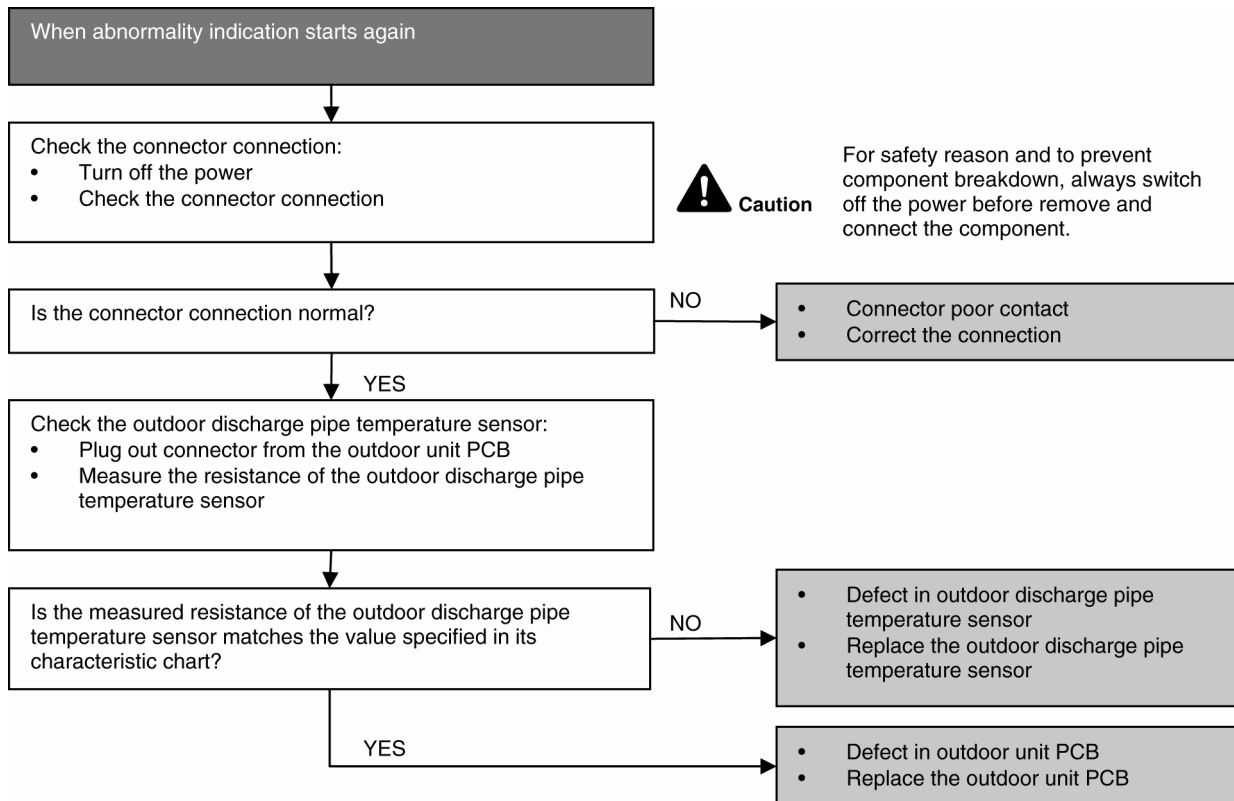

15.5.12 H33 (Unspecified Voltage between Indoor and Outdoor)


Malfunction Decision Conditions

- The supply power is detected for its requirement by the indoor/outdoor transmission.

Malfunction Caused

- Wrong models interconnected.
- Wrong indoor unit and outdoor unit PCBs used.
- Indoor unit or outdoor unit PCB defective.

Troubleshooting

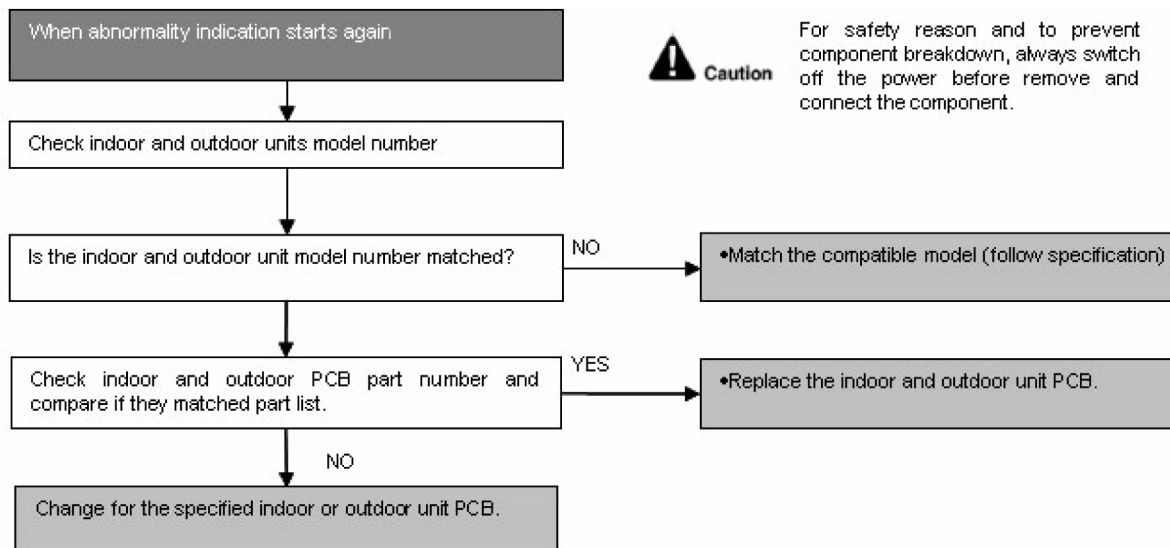

15.5.13 H97 (Outdoor Fan Motor – DC Motor Mechanism Locked)


Malfunction Decision Conditions

- The rotation speed detected by the Hall IC during fan motor operation is used to determine abnormal fan motor.

Malfunction Caused

- Operation stops due to short circuit inside the fan motor winding.
- Operation stops due to breaking of wire inside the fan motor.
- Operation stops due to breaking of fan motor lead wires.
- Operation stops due to Hall IC malfunction.
- Operation error due to faulty outdoor unit PCB.

Troubleshooting

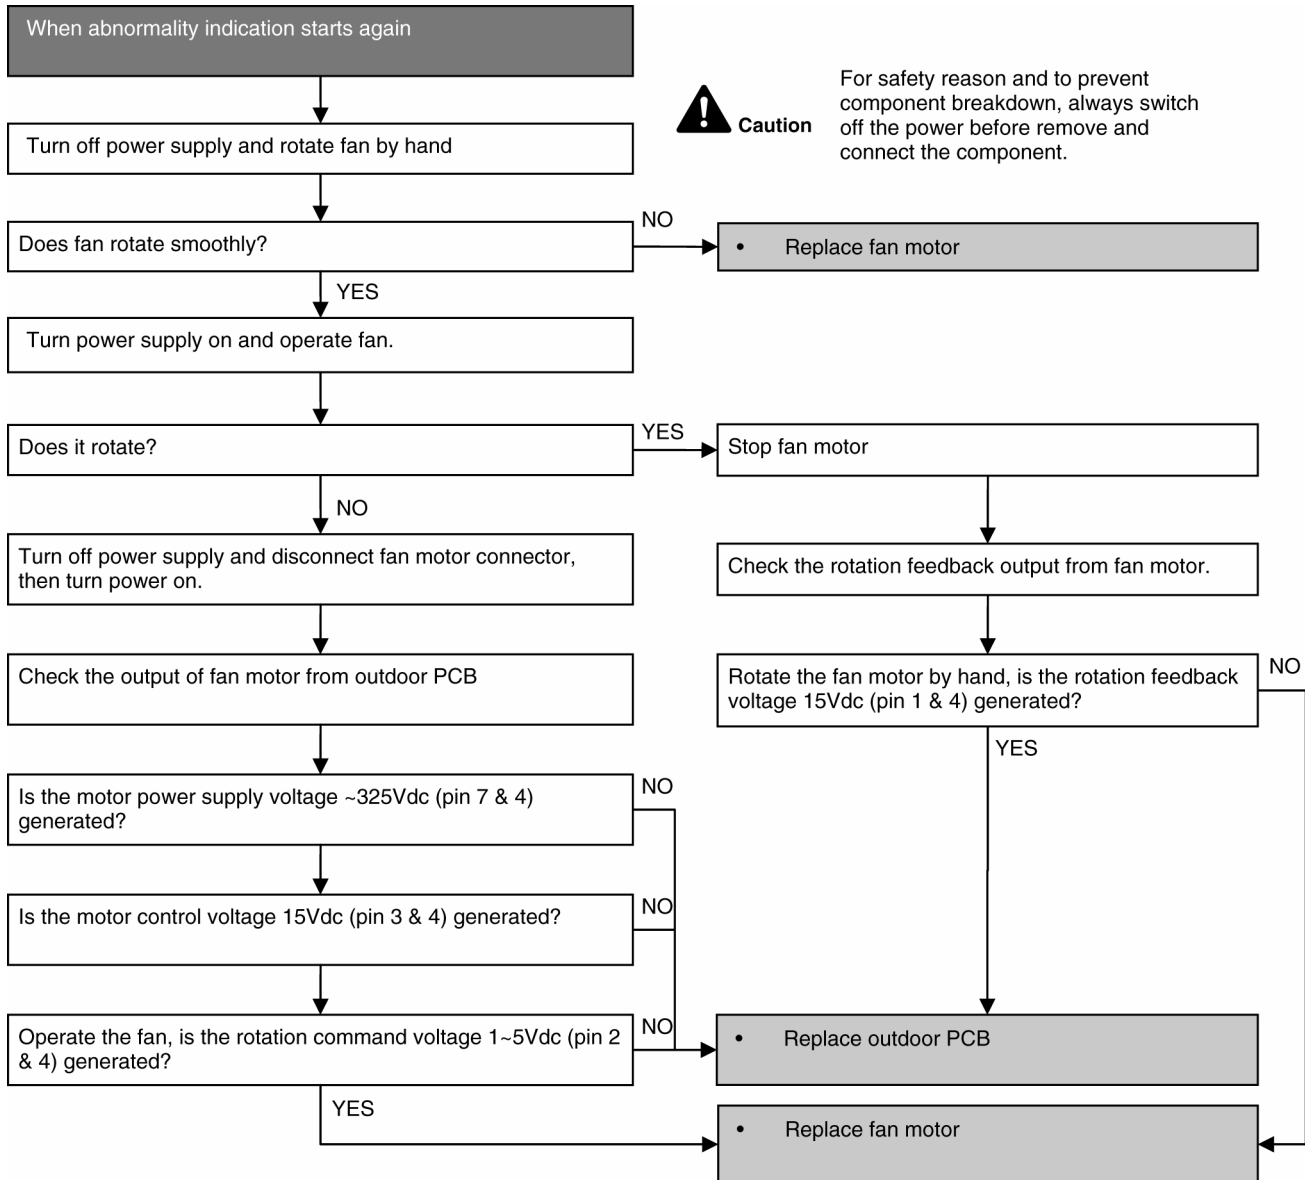

15.5.14 H98 (Error Code Stored in Memory and no alarm is triggered / no TIMER LED flashing)


Malfunction Decision Conditions

- Indoor high pressure is detected when indoor heat exchanger is detecting very high temperature when the unit is operating in heating operation.
- Phenomena: unit is stopping and re-starting very often in heating mode.

Malfunction Caused

- Indoor heat exchanger thermistor
- Clogged air filter or heat exchanger
- Over-bent pipe (liquid side)

Troubleshooting

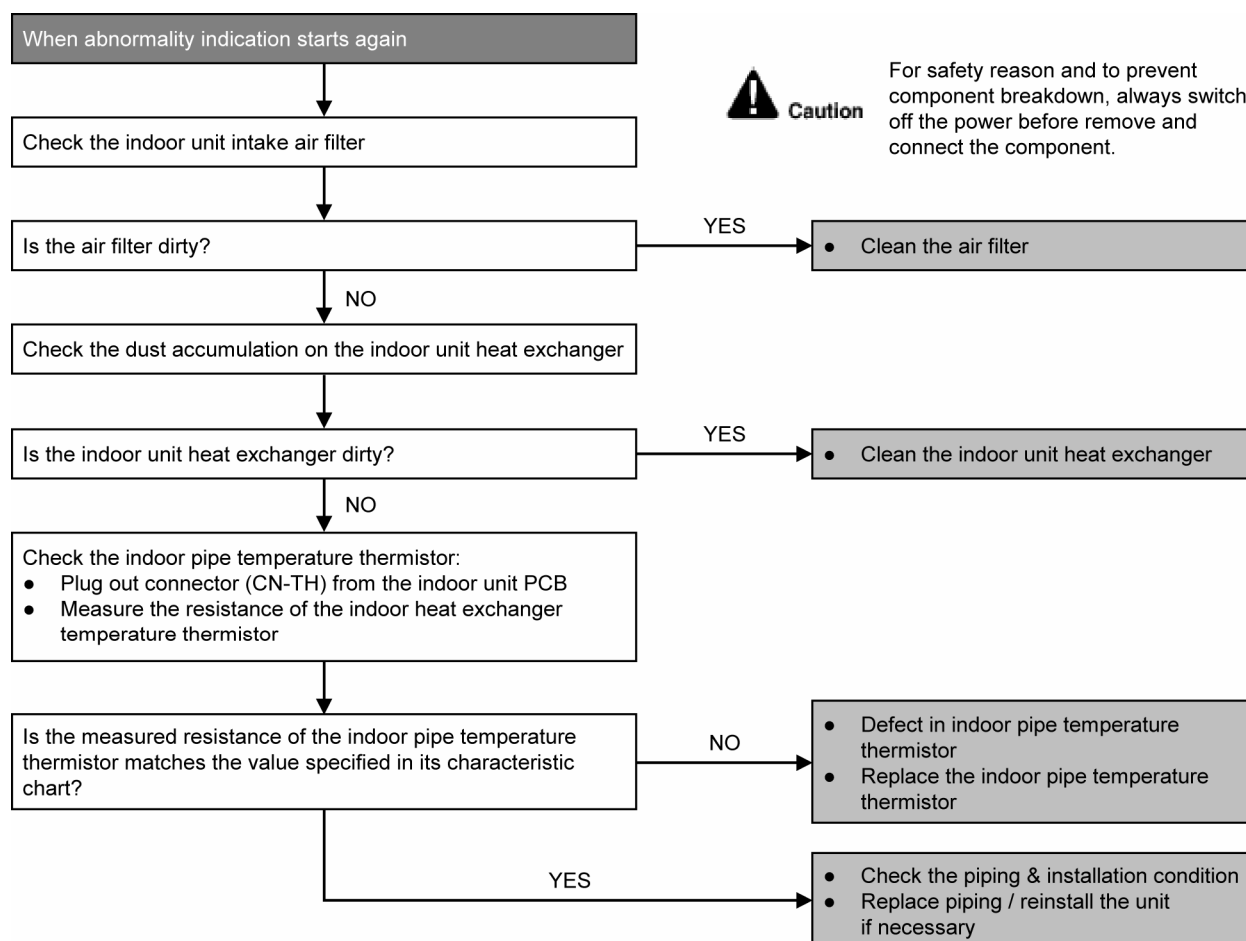

15.5.15 H99 (Indoor Freeze Prevention Protection: Cooling or Soft Dry)

Error Code will not display (no Timer LED blinking) but store in EEPROM


Malfunction Decision Conditions

- Freeze prevention control takes place (when indoor pipe temperature is lower than 2°C)

Malfunction Caused

- Air short circuit at indoor unit
- Clogged indoor unit air filter
- Dust accumulation on the indoor unit heat exchanger
- 2/3 way valve closed
- Faulty indoor unit fan motor
- Refrigerant shortage (refrigerant leakage)
- Clogged expansion valve or strainer
- Faulty indoor pipe temperature sensor
- Faulty indoor unit PCB

Troubleshooting

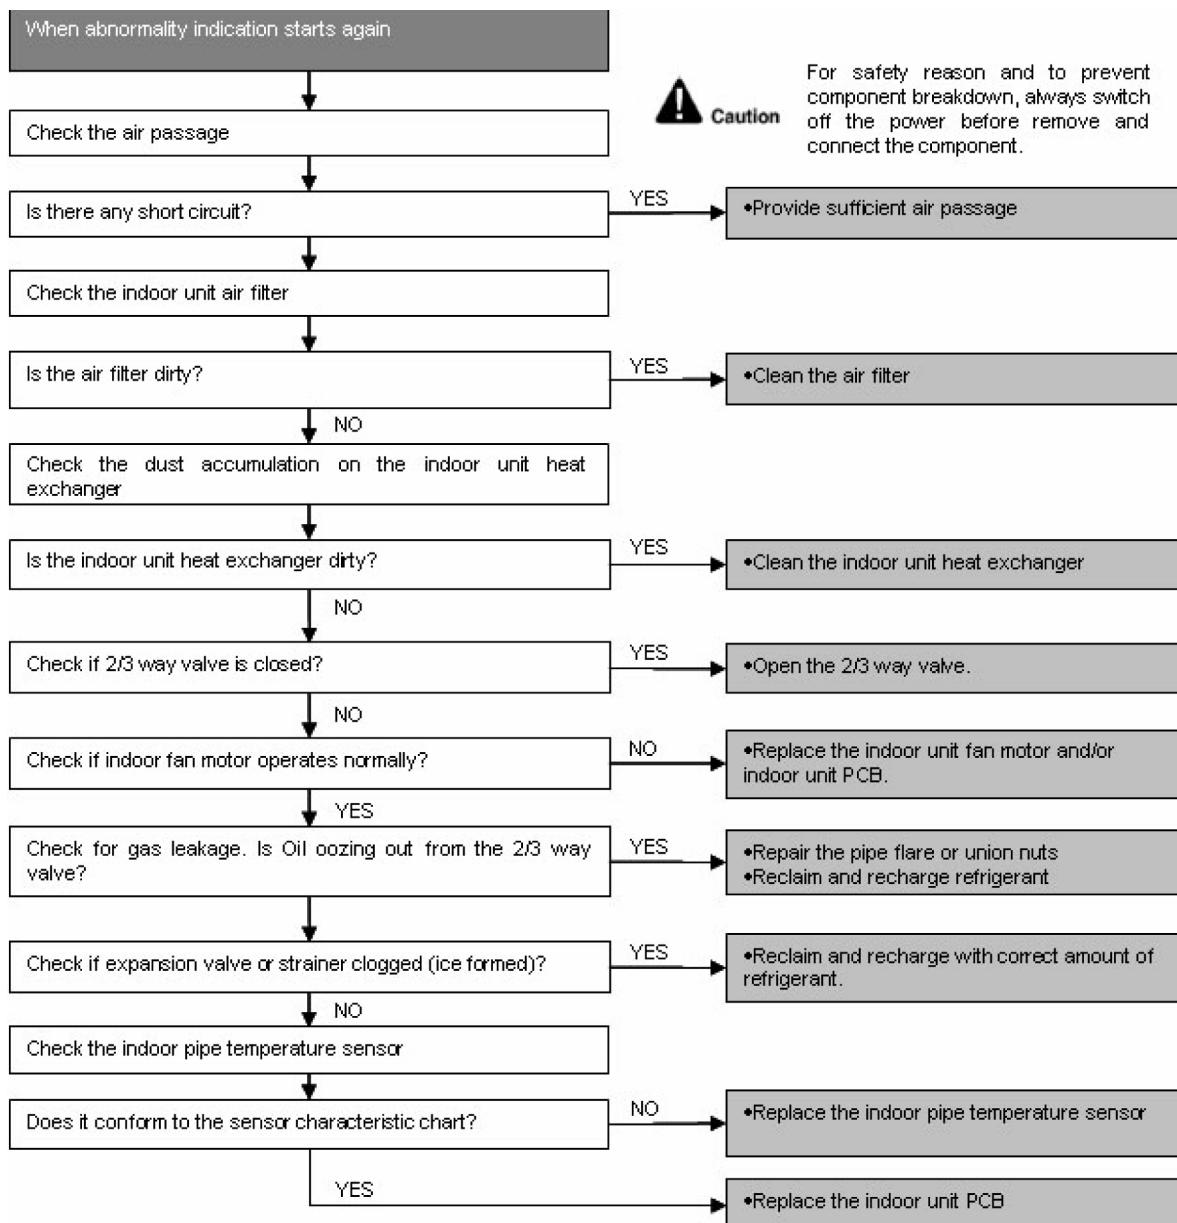

15.5.16 F11 (4-way Valve Switching Failure)


Malfunction Decision Conditions

- When indoor heat exchanger is cold during heating (except deice) or when indoor heat exchanger is hot during cooling and compressor operating, the 4-way valve is detected as malfunction.

Malfunction Caused

- Indoor heat exchanger (pipe) thermistor
- 4-way valve malfunction

Troubleshooting

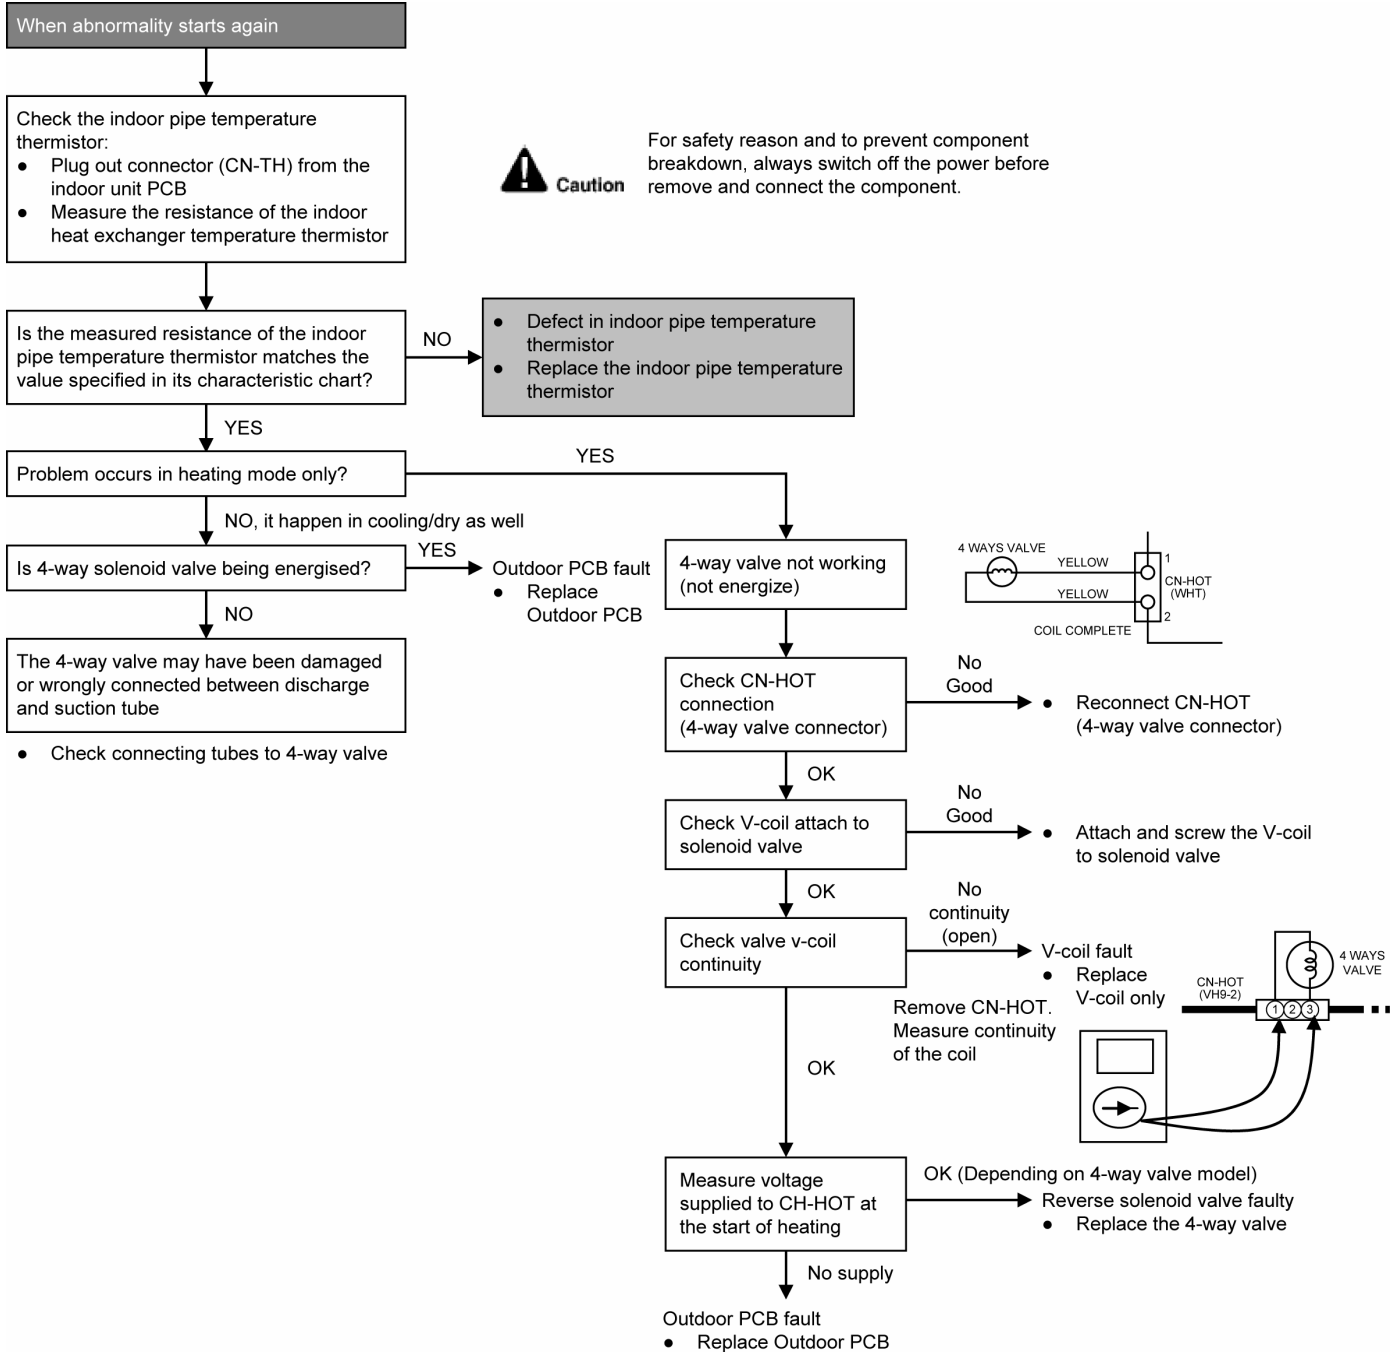

* Check gas side pipe – for hot gas flow in cooling mode

15.5.17 F90 (Power Factor Correction Protection)


Malfunction Decision Conditions

- To maintain DC voltage level supply to power transistor.
- To detect high DC voltage level after rectification.

Malfunction Caused

- During startup and operation of cooling and heating, when Power Factor Correction (PFC) protection circuitry at the outdoor unit main PCB senses abnormal DC voltage level for power transistors.
- When DC voltage detected is LOW, transistor switching will turn ON by controller to push-up the DC level.
- When DC voltage detected is HIGH (391Vdc – 425Vdc), active LOW signal will send by the controller to turn OFF relay RY-C.

Troubleshooting

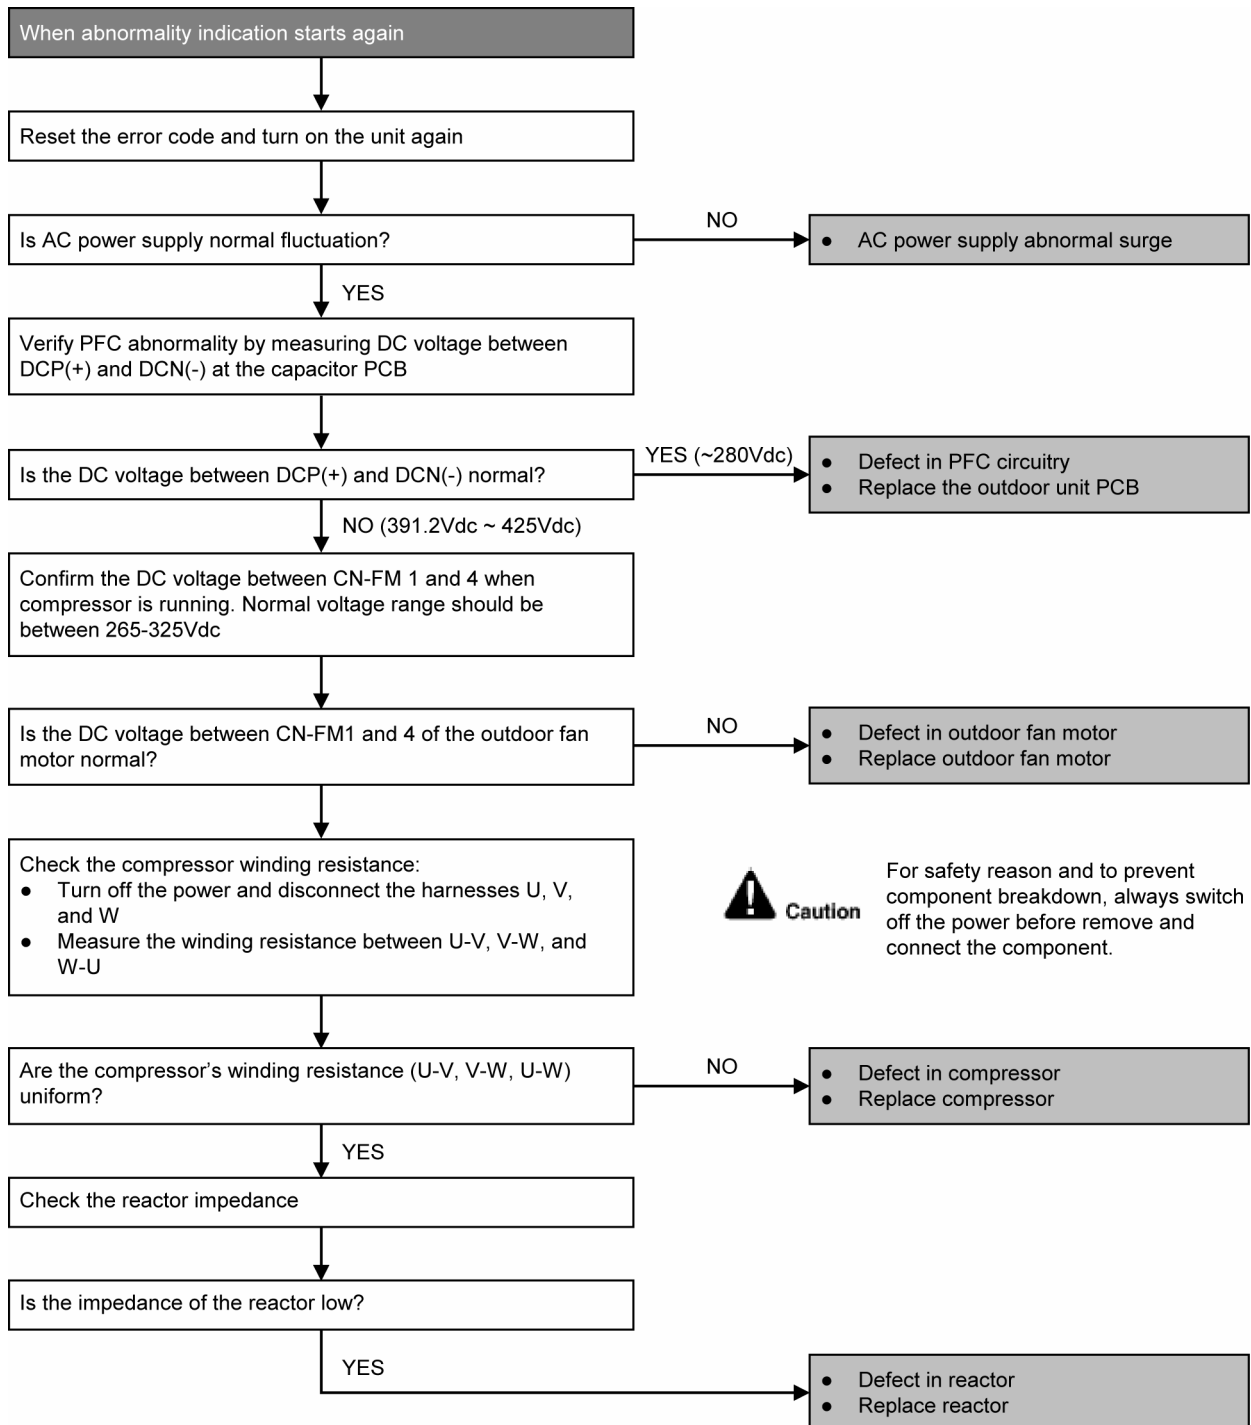

15.5.18 F91 (Refrigeration Cycle Abnormality)


Malfunction Decision Conditions

- The input current is low while the compressor is running at higher than the setting frequency.

Malfunction Caused

- Lack of gas.
- 3-way valve close.

Troubleshooting

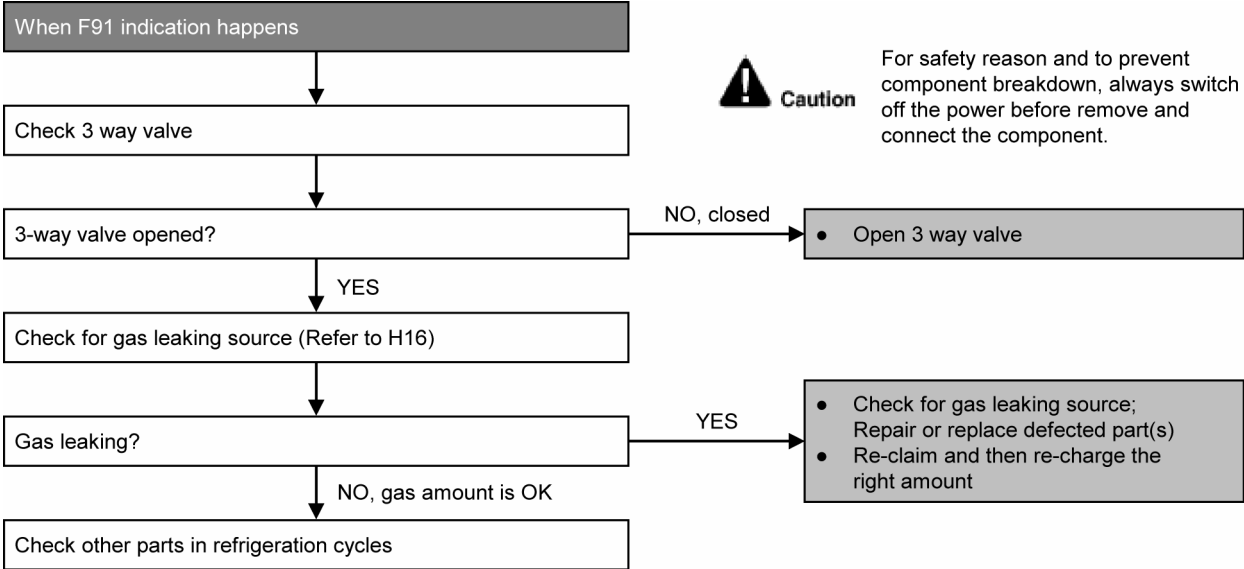

15.5.19 F93 (Compressor Rotation Failure)


Malfunction Decision Conditions

- A compressor rotation failure is detected by checking the compressor running condition through the position detection circuit.

Malfunction Caused

- Compressor terminal disconnect
- Faulty Outdoor PCB
- Faulty compressor

Troubleshooting

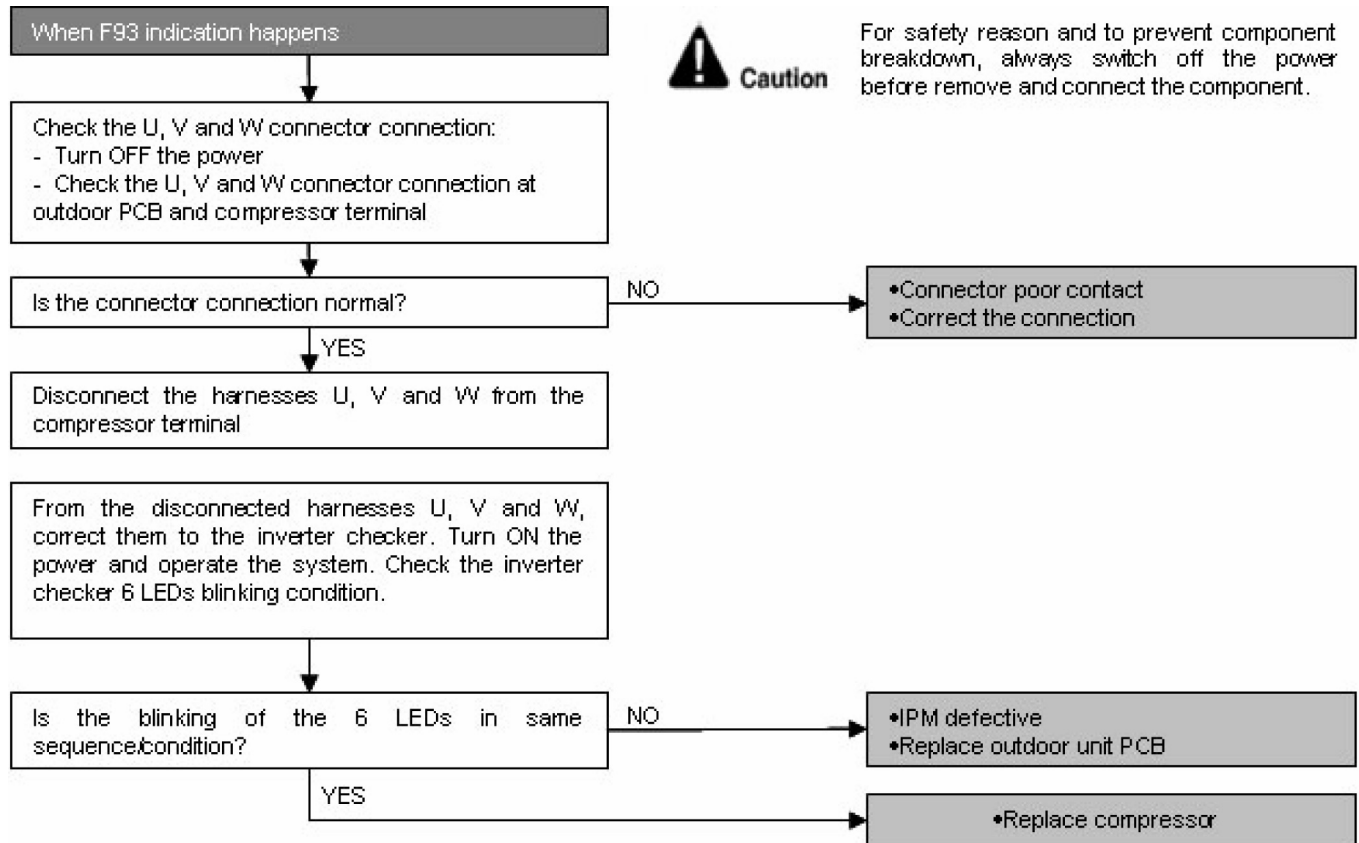

15.5.20 F95 (Outdoor High Pressure Protection: Cooling or Soft Dry)


Malfunction Decision Conditions

- During operation of cooling or soft dry, when outdoor unit heat exchanger high temperature data is detected by the outdoor unit heat exchanger thermistor.

Malfunction Caused

- Outdoor heat exchanger temperature rise due to short-circuit of hot discharge air flow.
- Outdoor heat exchanger temperature rise due to defective of outdoor fan motor.
- Outdoor heat exchange temperature rise due to defective outdoor heat exchanger thermistor.
- Outdoor heat exchanger temperature rise due to defective of outdoor unit PCB.

Troubleshooting

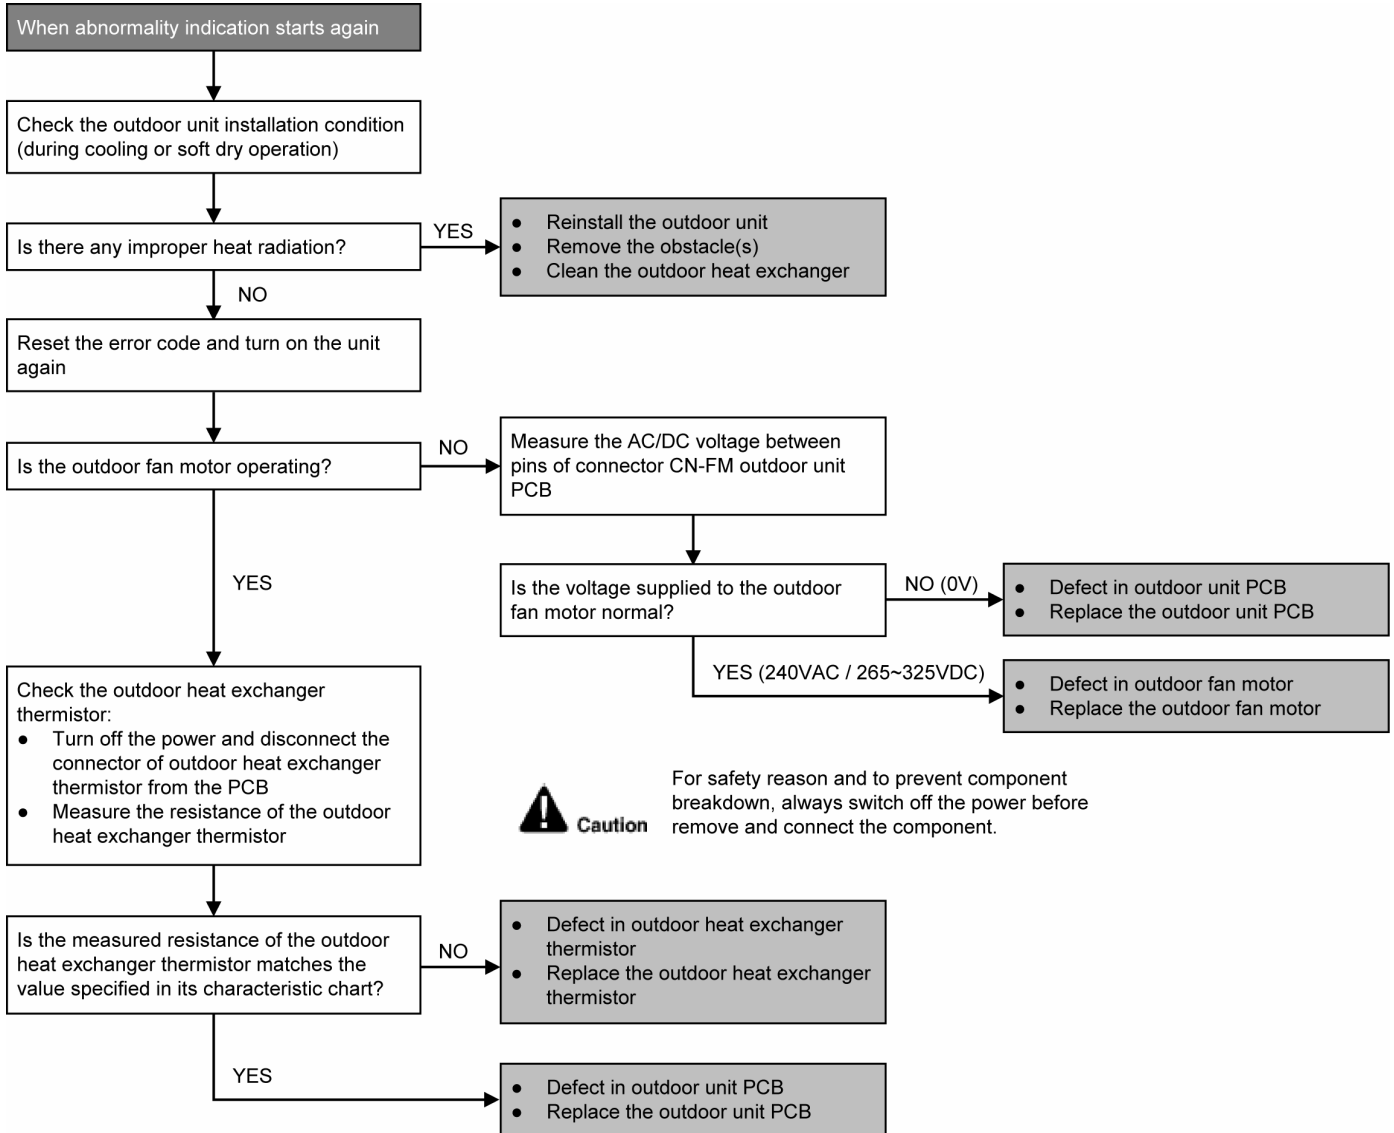

15.5.21 F96 (IPM Overheating)

Malfunction Decision Conditions

- During operating of cooling and heating, when IPM temperature data (100°C) is detected by the IPM temperature sensor.

Multi Models only

- Compressor Overheating: During operation of cooling and heating, when the compressor OL is activated.
- Heat Sink Overheating: During operation of cooling and heating, when heat sink temperature data (90°C) is detected by the heat sink temperature sensor.


Malfunction Caused

- IPM overheats due to short circuit of hot discharge air flow.
- IPM overheats due to defective of outdoor fan motor.
- IPM overheats due to defective of internal circuitry of IPM.
- IPM overheats due to defective IPM temperature sensor.

Multi Models Only

- Compressor OL connector poor contact.
- Compressor OL faulty.

Troubleshooting

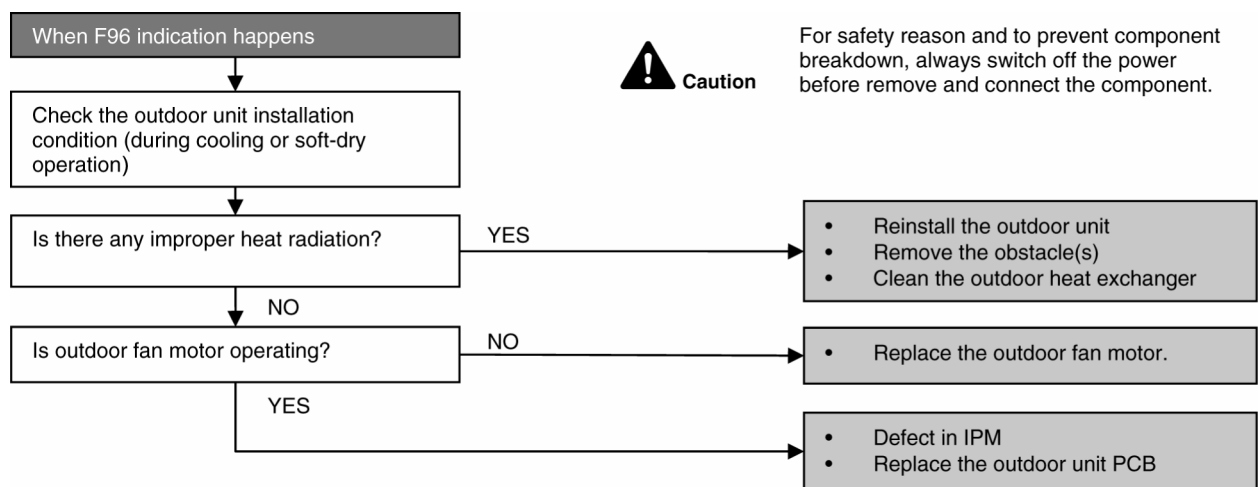

15.5.22 F97 (Compressor Overheating)


Malfunction Decision Conditions

- During operation of cooling and heating, when compressor tank temperature data (112°C) is detected by the compressor tank temperature sensor.

Malfunction Caused

- Faulty compressor tank temperature sensor
- 2/3 way valve closed
- Refrigerant shortage (refrigerant leakage)
- Faulty outdoor unit PCB
- Faulty compressor

Troubleshooting

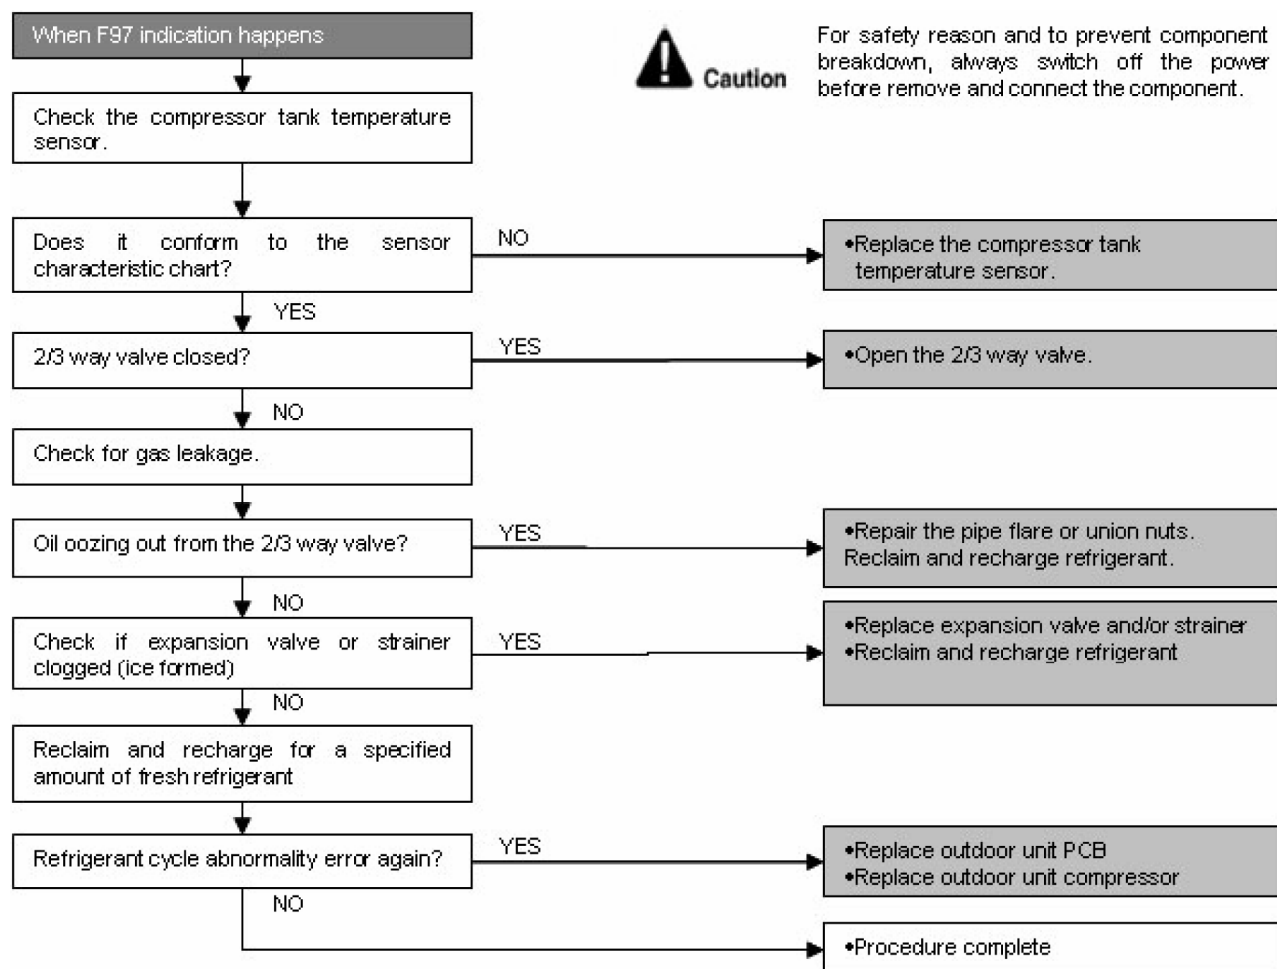

15.5.23 F98 (Input Over Current Detection)


Malfunction Decision Conditions

- During operation of cooling and heating, when an input over-current (X value in Total Running Current Control) is detected by checking the input current value being detected by current transformer (CT) with the compressor running.

Malfunction Caused

- Excessive refrigerant.
- Faulty outdoor unit PCB.

Troubleshooting

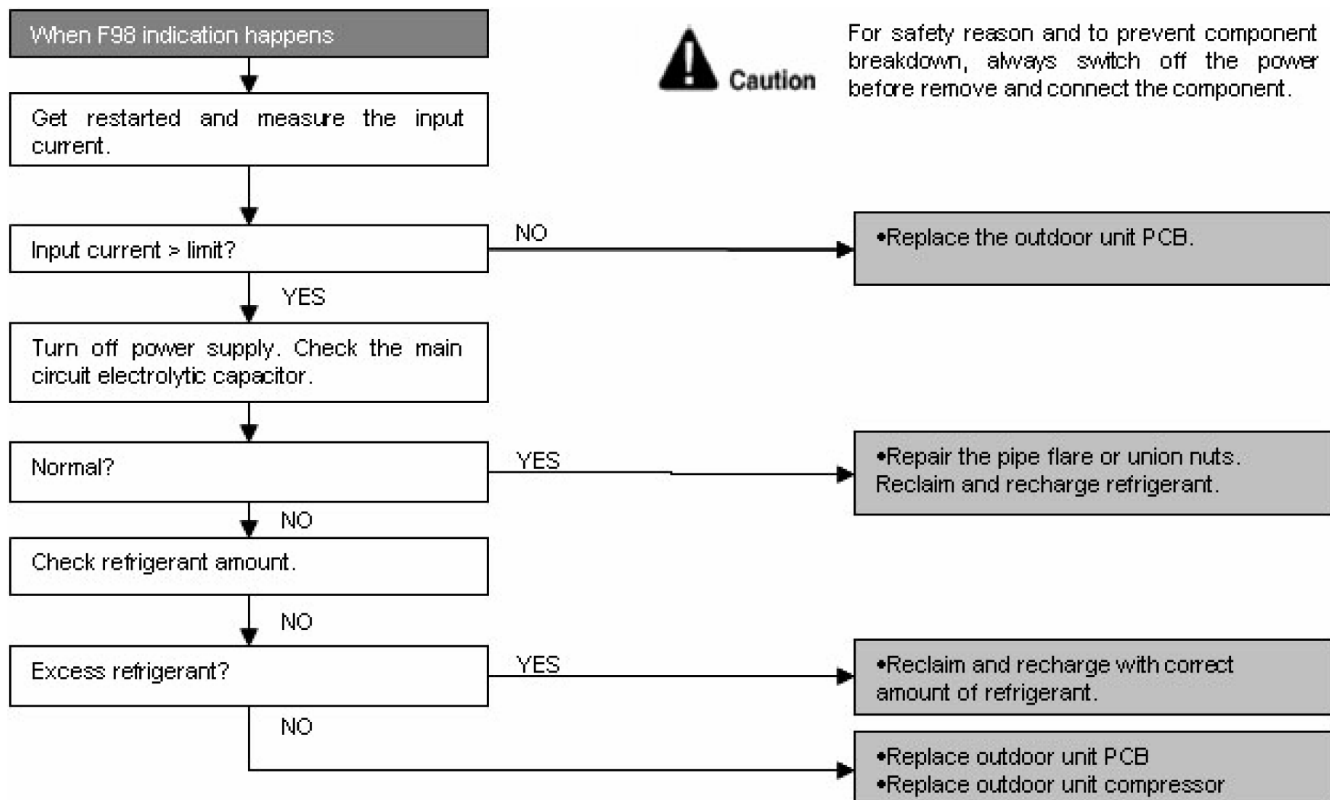

15.5.24 F99 (DC Peak Detection)


Malfunction Decision Conditions

During startup and operation of cooling and heating, when inverter DC peak data is received by the outdoor internal DC Peak sensing circuitry.

Malfunction Caused

- DC current peak due to compressor failure.
- DC current peak due to defective power transistor(s).
- DC current peak due to defective outdoor unit PCB.
- DC current peak due to short circuit.

Troubleshooting

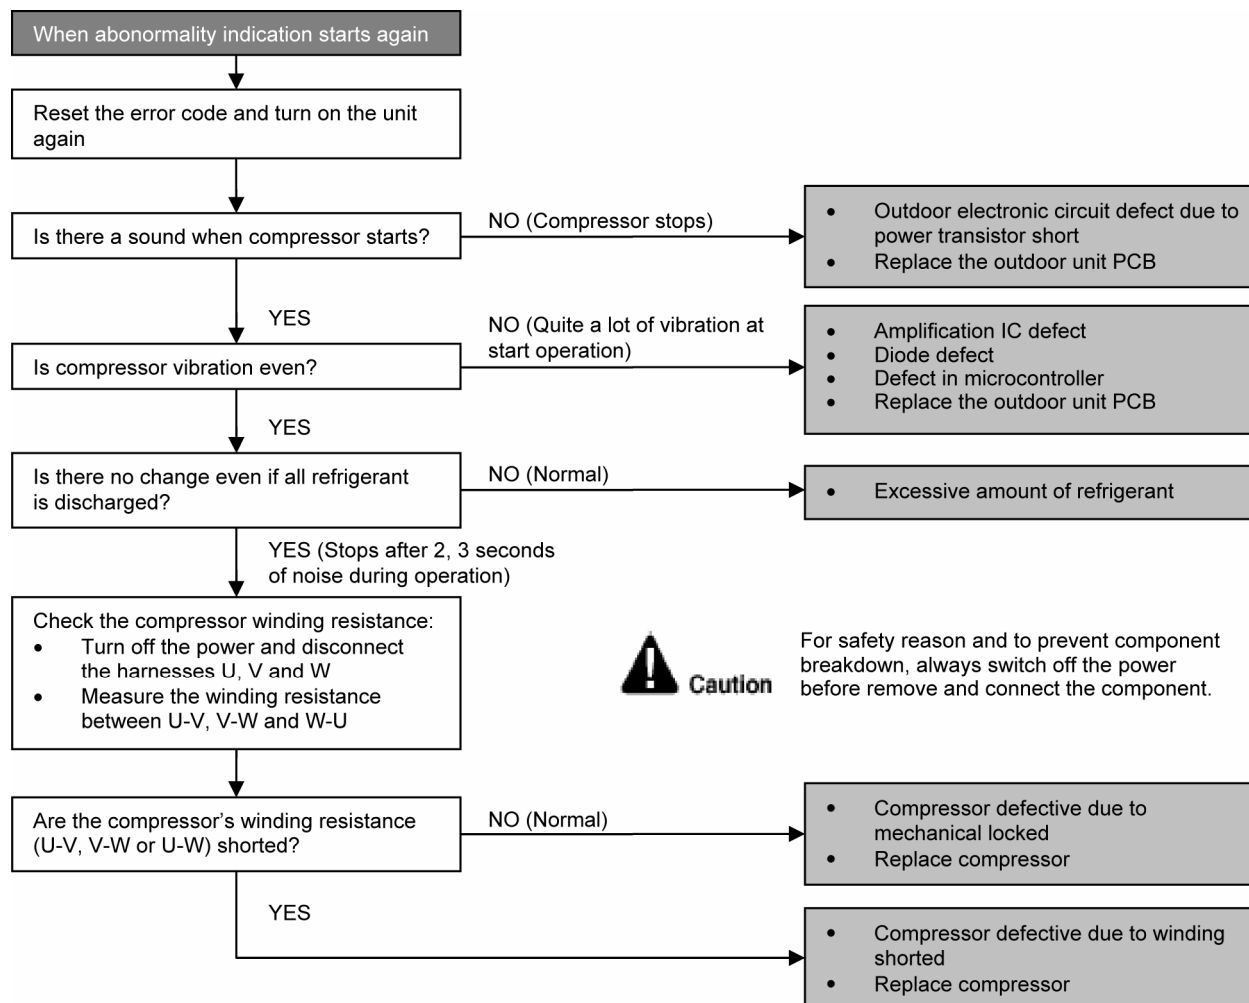

16. Disassembly and Assembly Instructions




WARNING

High Voltage are generated in the electrical parts area by the capacitor. Ensure that the capacitor has discharged sufficiently before proceeding with repair work. Failure to heed this caution may result in electric shocks.


16.1 Disassembly of Parts

16.1.1 Detaching the Upper and Inner Casing

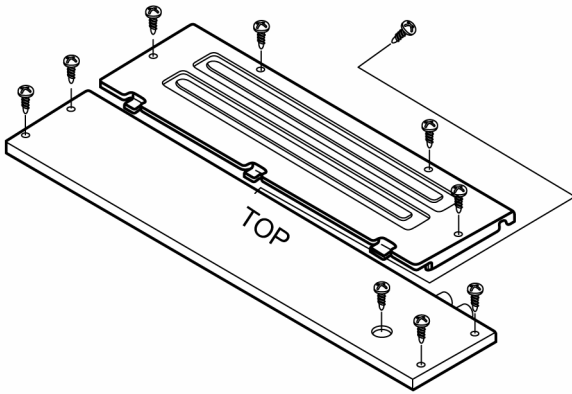


- 1 Unscrew the 10 screws on the Upper and Inner Casing and detach them

16.1.2 Detaching the Control Board

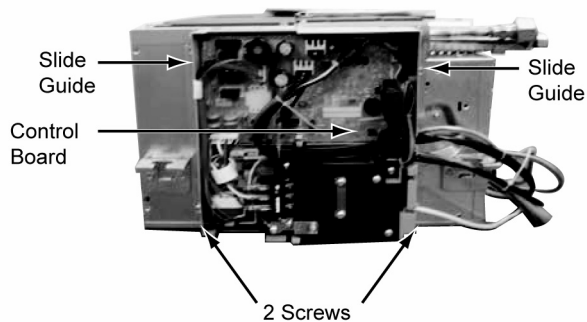

- 1 Unscrew the 2 screws on the Control Board and open the Control Board Cover.
- 2 Pull the Control Board down following the Slide Guide.
- 3 Lift the Control Board up from the bottom, disengage the Catch holding the Board.

16.1.3 Detaching the Fan

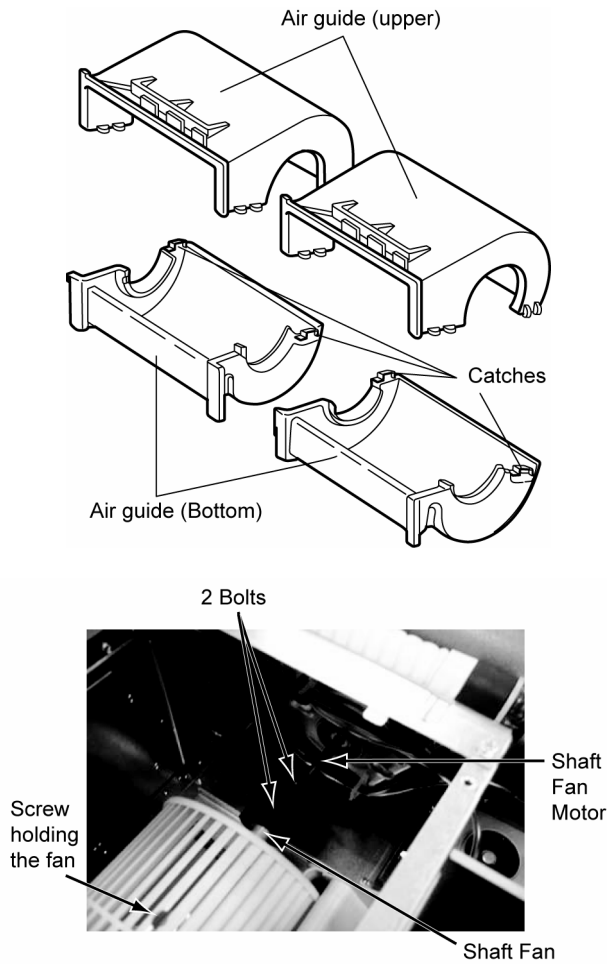

- 1 First detach the Upper and Inner Casing (16.1.1)
- 2 Disengage the 4 catches (2 each on the left and right) on the Air Guide.
- 3 Use a 2.5 mm hexagonal wrench to loosen the 2 bolts connecting the Fan Motor and Fan, detach the shaft connecting the Fan Motor and Fan, loosen the screw holding the Fan and detach the Fan.

16.1.4 Detaching the Fan Motor and Drain Motor



Fan Motor

- 1 First detach the Upper and Inner Casing (16.1.1) and the Fan (16.1.3).
- 2 Unscrew the 4 screws holding the Fan Motor and detach it.

Drain Motor

- 1 First detach the Upper and Inner Casing (16.1.1) and the Fan (16.1.3).
- 2 From the Fan Motor side, undo the 2 hexagon bolts and detach the Drain Motor.

16.1.5 Outdoor Electronic Controller Removal Procedure

1 Remove the top panel and front panel

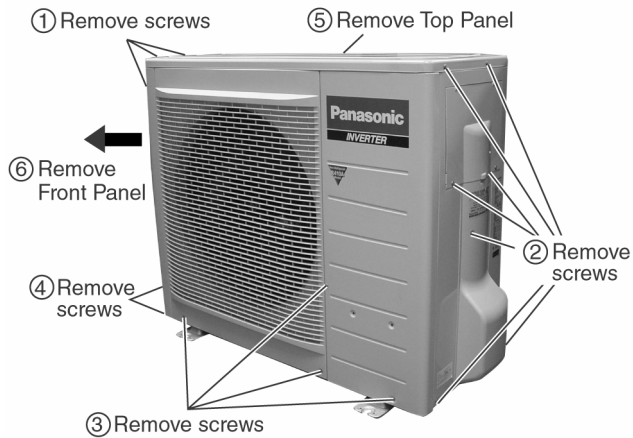



Fig. 7

2 Remove the Outdoor Electronic Controller



Fig. 8

**WARNING**

- Be save to return the wiring to its original position
- There are many high voltage components within the heat sink cover so never touch the interior during operation. Wait at least two minutes after power has been turned off.


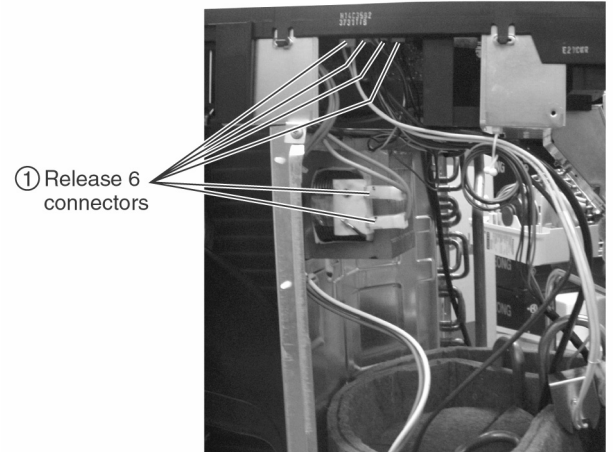


Fig. 9

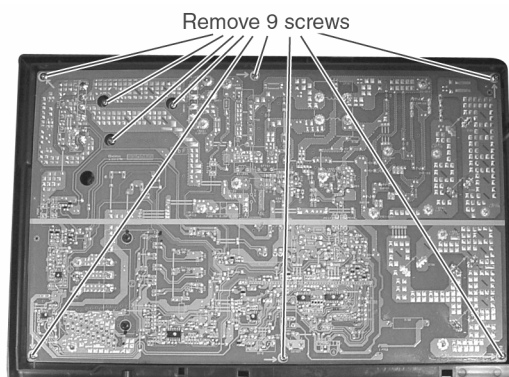

 **Caution!** When handling electronic controller, be careful of electrostatic discharge.

17. Technical Data

Technical data provided are based on the air conditioner running under free frequency.

17.1 Cool Mode Performance Data

Unit setting: Standard piping length, Hi Fan, Cool mode at 16°C

Voltage: 220V/230V

Indoor (°C)		Outdoor DB (°C)											
DB	WB	-10			-7			0			5		
		TC	SHC	IP	TC	SHC	IP	TC	SHC	IP	TC	SHC	IP
27	19.0	3331	2359	784	3417	2411	742	3621	2475	651	3533	2455	707
	22.0	3987	2012	662	3853	1974	727	3965	2002	681	3861	1979	744
23	15.7	3118	2344	712	2843	2217	833	3076	2338	727	3138	2365	725
	18.4	3332	1893	755	3393	1935	732	3330	1907	777	3419	1948	750
20	13.3	2200	1929	223	2123	1900	269	2132	1902	578	2398	2019	566
	15.8	2760	1728	474	2827	1734	817	3086	1878	747	2963	1817	815

Indoor (°C)		Outdoor DB (°C)								
DB	WB	16			25			35		
		TC	SHC	IP	TC	SHC	IP	TC	SHC	IP
27	19.0	3370	2370	481	2750	2349	521	3400	2499	910
	22.0	4140	2068	599	3063	1800	502	3606	1875	910
23	15.7	2987	2291	423	2218	2174	543	2796	2198	897
	18.4	3893	2143	593	2973	1863	578	3166	1834	903
20	13.3	2160	1912	294	1843	1806	420	2222	1956	719
	15.8	2718	1705	349	2602	1671	448	2882	1778	900

(Dry bulb value based on 46% humidity)

TC - Total Cooling Capacity (W)

SHC - Sensible Heat Capacity (W)

IP - Input Power (W)

17.2 Heat Mode Performance Data

Unit setting: Standard piping length, Hi Fan, Heat mode at 30°C

Voltage: 220V/230V

Indoor (°C)	Outdoor WB (°C)									
DB	-10		-7		2		7		12	
	TC	IP	TC	IP	TC	IP	TC	IP	TC	IP
24	2252	1288	2457	1290	3184	1353	3600	1198	4191	1213
20	2520	1231	3000	1320	3700	1420	4000	1170	4566	1257
16	2298	1208	2701	1223	3753	1381	4146	1199	5274	1461

TC - Total Cooling Capacity (W)

SHC - Sensible Heat Capacity (W)

IP - Input Power (W)


17.3 Fan Performance

Test Report

Tap	Static Pressure (mmAq)	Airflow (m ³ /min)
Lo	0.0	8.68
	1.2	7.08
	2.0	6.05
	2.8	5.09
	3.4	4.17
	4.1	3.46
	4.4	2.92
	4.6	2.76
Hi	0.0	11.90
	1.1	10.79
	2.1	9.69
	3.1	8.63
	4.3	7.63
	5.0	6.62
	5.9	5.67
	6.6	4.86
	7.2	4.19
	7.6	3.74
	7.8	3.55

Tap	Static Pressure (mmAq)	Airflow (m ³ /min)
Phi	0.0	12.58
	1.3	11.41
	2.3	10.24
	3.4	9.12
	4.8	8.07
	5.6	7.00
	6.6	5.99
	7.3	5.14
	8.0	4.43
	8.5	3.95
Switch Hi	8.7	3.75
	0.0	15.73
	2.0	14.26
	3.7	12.80
	5.4	11.40
	7.5	10.08
	8.8	8.75
	10.3	7.49
	11.5	6.42
	12.6	5.54
	13.3	4.94
	13.6	4.69

Fan Performance Curve

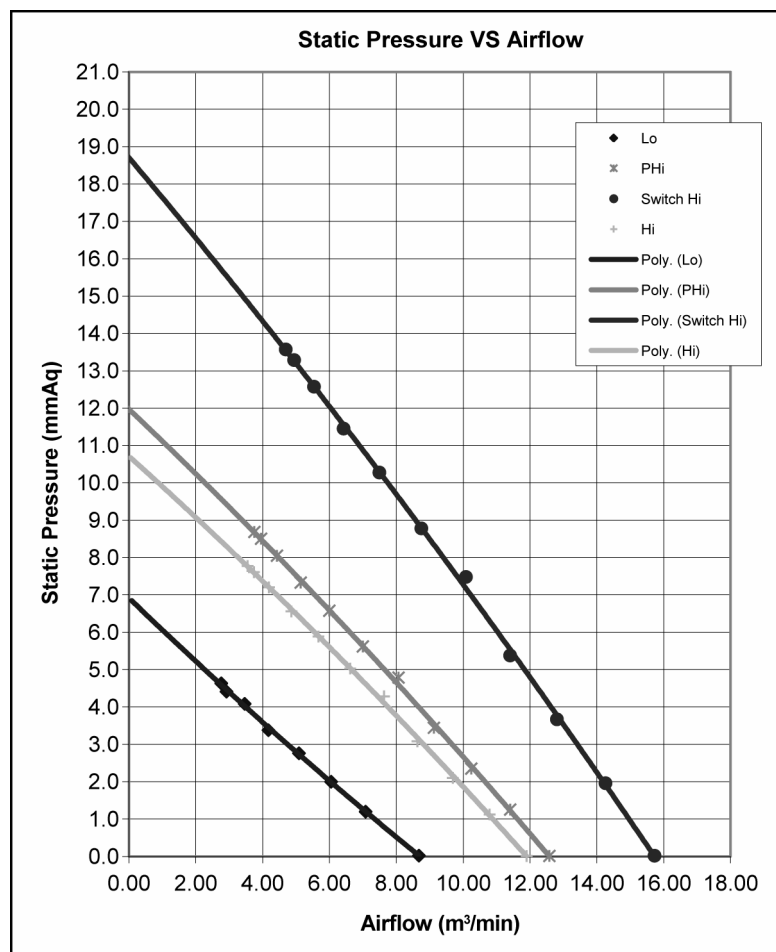


18. Service Data

Service data provided are based on the air conditioner running under rated frequency during forced cooling / forced heating mode.

18.1 Cool Mode Outdoor Air Temperature Characteristic

Condition


- Indoor room temperature: 27°C DryBulb/19°C Wet Bulb
- Unit setting: Standard piping length, forced cooling at 16°C, Hi fan
- Compressor frequency: Rated for cooling operation
- Voltage: 220V/230V

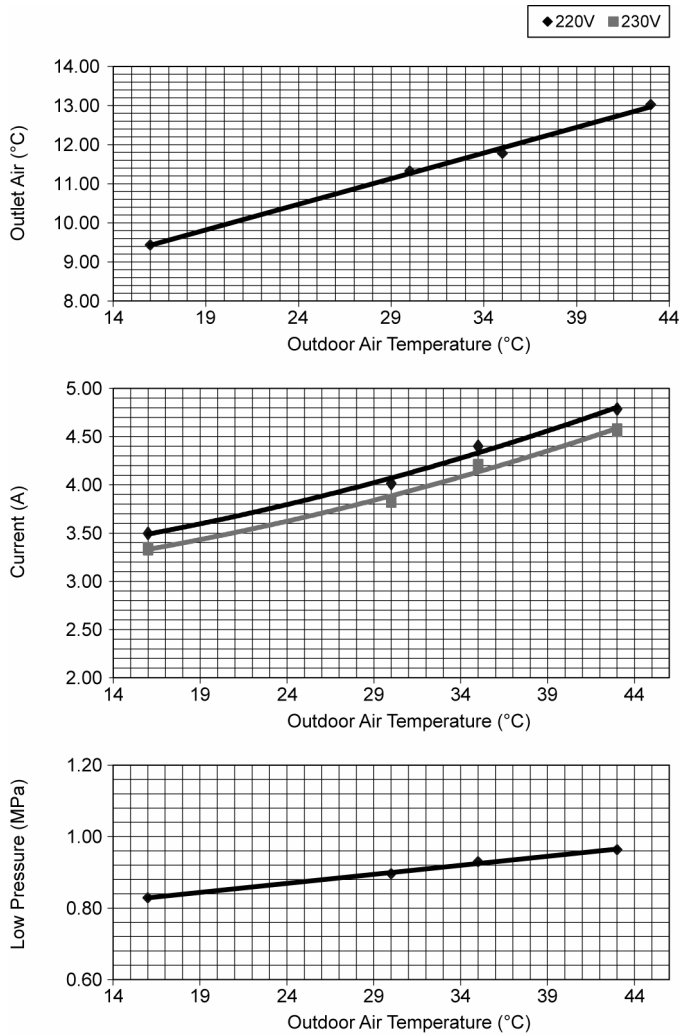

18.2 Heat Mode Outdoor Air Temperature Characteristic

Condition


- Indoor room temperature: 20°C DryBulb/ -°C Wet Bulb
- Unit setting: Standard piping length, forced heating at 30°C, Hi fan
- Compressor frequency: Rated for Heating operation
- Voltage: 220V/230V

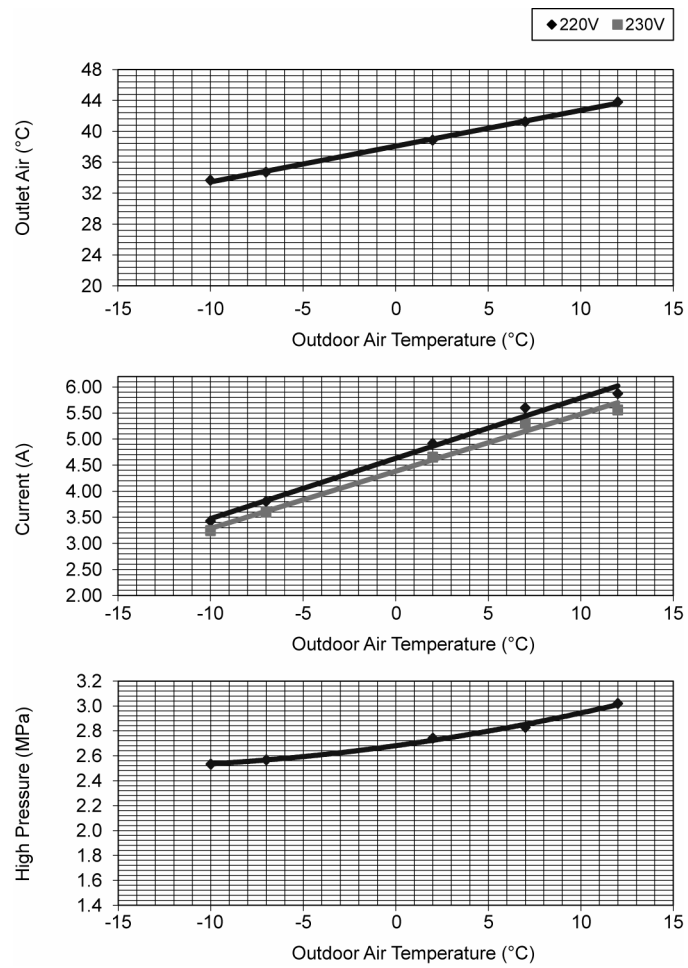


18.3 Piping Length Correction Factor

The characteristic of the unit has to be corrected in accordance with the piping length.

18.3.1 Cooling Capacity

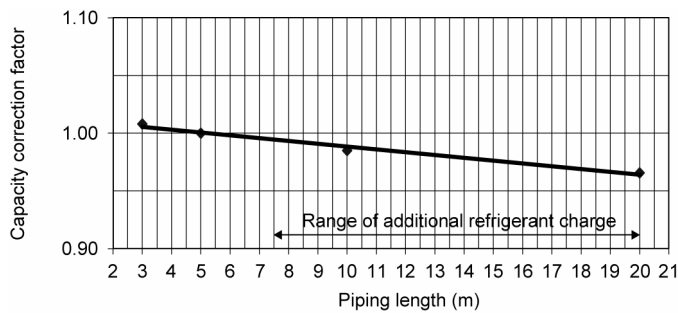


18.3.2 Heating Capacity

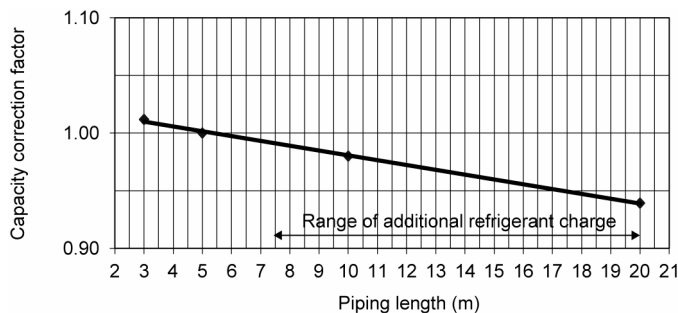

Note: The graphs show the factor after added right amount of additional refrigerant.

19. Exploded View and Replacement Parts List

19.1 Indoor Unit

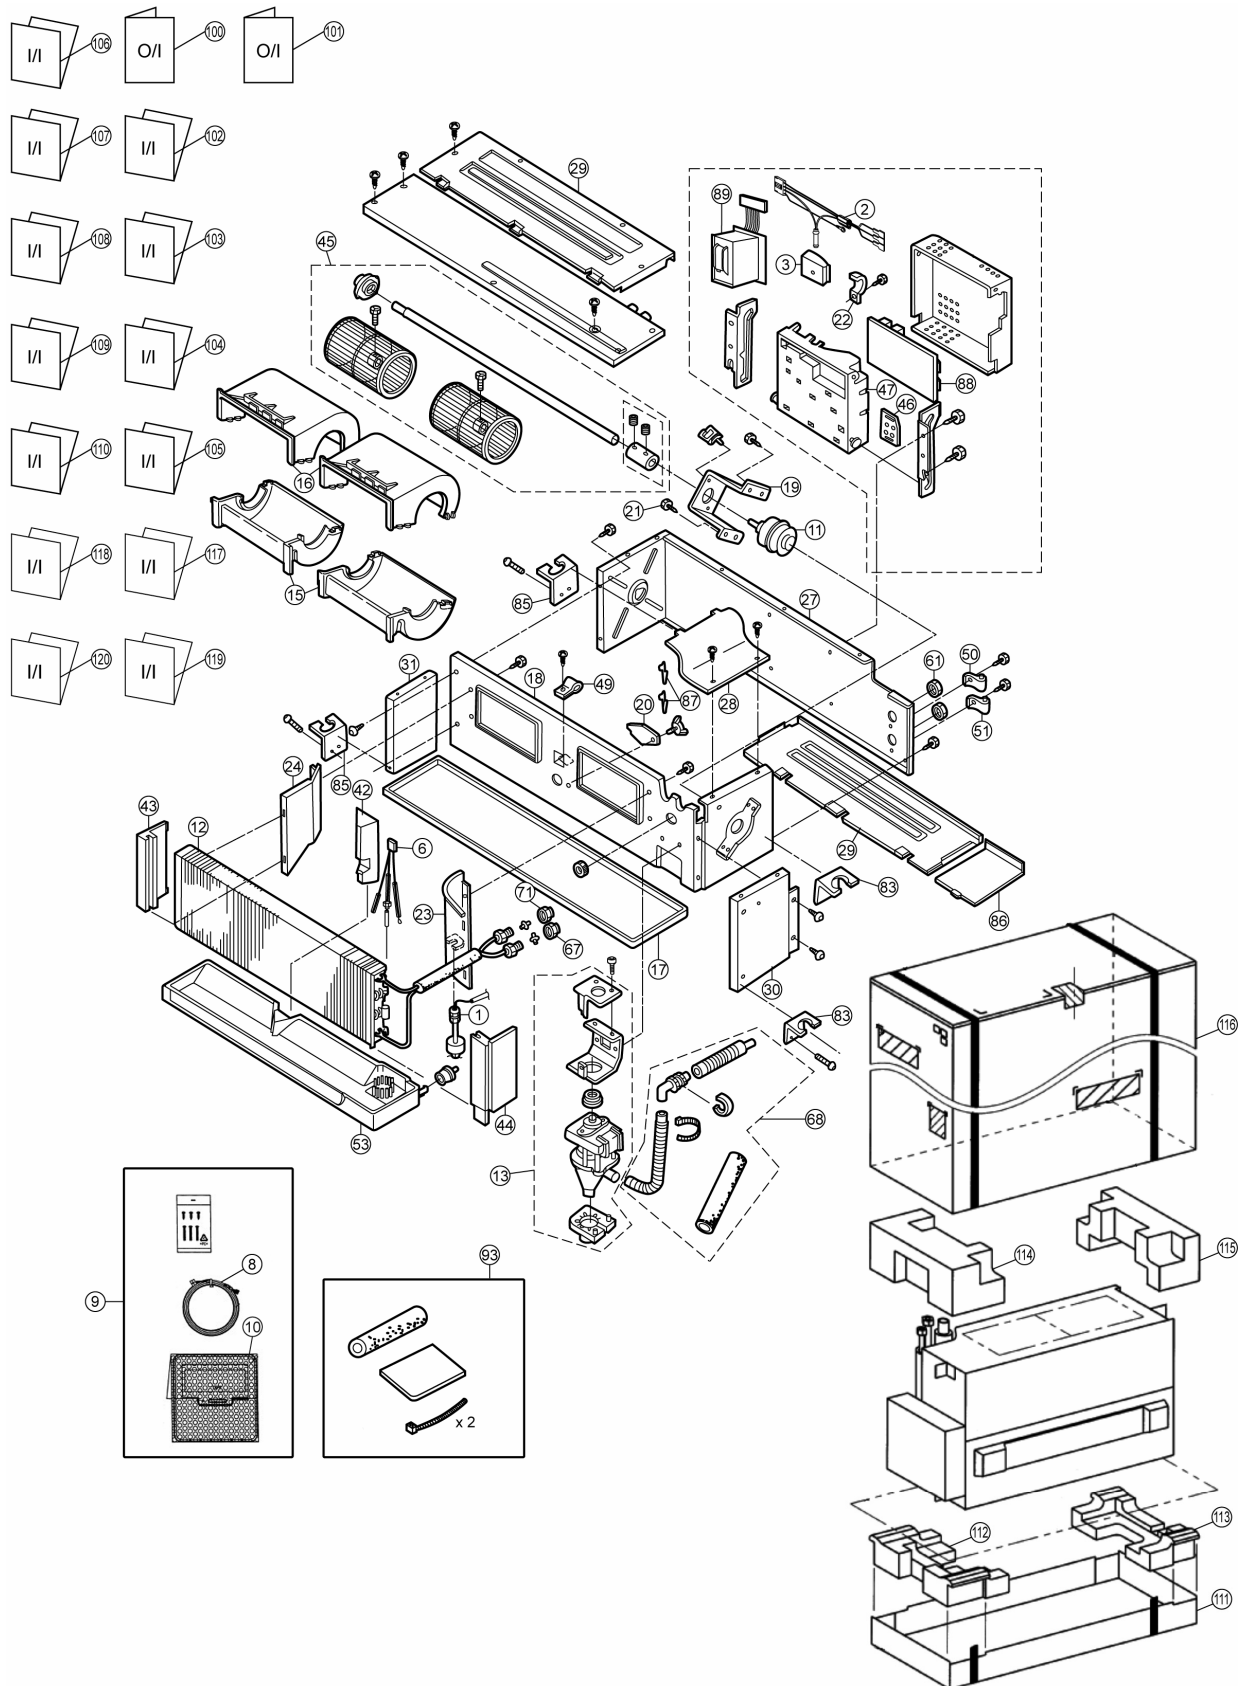

Note:

The above exploded view is for the purpose of parts disassembly and replacement.
The non-numbered parts are not kept as standard service parts.


SAFETY	REF NO.	PART NAME & DESCRIPTION	QTY.	CS-E12QD3EAW	REMARK
	1	OVER LOAD PROTECTOR	1	CWA12161	O
	2	FUSE-COMPLETE	1	CWA16C1038	O
⚠	3	TERMINAL BOARD ASS'Y	1	CWA28K1045J	O
	6	SENSOR-COMPLETE	1	CWA50C2556	O
	8	REMOTE CONTROL CABLE	1	CWA221081	
	9	WIRED REMOTE CONTROL COMPLETE (WITH CABLE)	1	CWA75C4398	O
	10	WIRED REMOTE CONTROL	1	CWA75C4264	O
⚠	11	FAN MOTOR, DC 30W 3PH	1	ARW41G8P30AC	O
	12	FIN & TUBE EVAPORATER-COMPLETE	1	CWB30C2570	
	13	PUMP-COMPLETE	1	CWB53C1010	O
	15	AIR GUIDER B.W.	2	CWD32091	
	16	AIR GUIDER B.W.	2	CWD32092	
	17	BASE PAN	1	CWD52259	
	18	BULKHEAD	1	CWD531019	
	19	FAN MOTOR BRACKET	1	CWD541036	
	20	FLAT PIECE	1	CWD74100	
	21	SCREW - FAN MOTOR BRACKET	4	CWH55315J	
	22	HOLDER-P.S. CORD	1	CWH31044	
	23	PARTICULAR PLATE-A'SSY	1	CWD90K080	
	24	PARTICULAR PLATE	1	CWD90616	
	27	CABINET REAR PLATE	1	CWE02079	
	28	CABINET TOP PLATE	1	CWE03034	
	29	CABINET TOP PLATE	2	CWE03035	
	30	CABINET SIDE PLATE (RIGHT)	1	CWE04071	
	31	CABINET SIDE PLATE (LEFT)	1	CWE04072	
	42	FOAMED POLYSTYRENE	1	CWG07165	
	43	FOAMED POLYSTYRENE	1	CWG07166	
	44	FOAMED POLYSTYRENE	1	CWG07167	
	45	BLOWER WHEEL-COMPLETE	1	CWH01C005	
	46	CONTROL BOARD	1	CWH102208	
	47	CONTROL BOARD (BOTTOM PCB)	1	CWH10527	
	49	HOLDER-P.S. CORD	1	CWH31103	
	50	HOLDER-P.S. CORD	1	CWH31030	
	51	A-PIECE	1	CWD77013	
	53	DRAIN PAN-COMPLETE	1	CWH40C061	
	61	BUSHING	1	CWH51134	
	67	UNION NUT	1	CWT251030	
	68	FLEXIBLE PIPE-COMPLETE	1	CWH85C008	
	71	UNION NUT	1	CWT251031	
	83	PARTICULAR PIECE	2	CWD93435	
	85	PARTICULAR PIECE	2	CWD93436	
	86	CABINET BOTTOM PLATE	1	CWE05012	
	87	HOLDER-SENSOR	2	CWH32137	
⚠	88	ELECTRONIC CONTROLLER-MAIN	1	CWA73C8613	O
⚠	89	TRANSFORMER-COMPLETE	1	CWA40C1027	O
	93	ACCESSORY-COMPLETE	1	CWH82C1649	
	100	OPERATING INSTRUCTION (EN, DE, NE, IT, GR, FR, ES, PO, BU)	1	CWF569697	
	101	OPERATING INSTRUCTION (SW, NO, DA, FI)	1	CWF569698	
	102	INSTALLATION INSTRUCTION (EN)	1	CWF616474	
	103	INSTALLATION INSTRUCTION (ES)	1	CWF616475	
	104	INSTALLATION INSTRUCTION (IT)	1	CWF616476	
	105	INSTALLATION INSTRUCTION (NE)	1	CWF616477	
	106	INSTALLATION INSTRUCTION (PO)	1	CWF616478	
	107	INSTALLATION INSTRUCTION (GR)	1	CWF616479	
	108	INSTALLATION INSTRUCTION (BU)	1	CWF616480	

SAFETY	REF NO.	PART NAME & DESCRIPTION	QTY.	CS-E12QD3EAW	REMARK
	109	INSTALLATION INSTRUCTION (FR)	1	CWF616481	
	110	INSTALLATION INSTRUCTION (DE)	1	CWF616482	
	111	BASE BOARD	1	CWG62099	
	112	SHOCK ABSORBER (RIGHT)	1	CWG712936	
	113	SHOCK ABSORBER (LEFT)	1	CWG712946	
	114	SHOCK ABSORBER	1	CWG712937	
	115	SHOCK ABSORBER	1	CWG712947	
	116	C.C. CASE	1	CWG565694	
	117	INSTALLATION INSTRUCTION (SW)	1	CWF616483	
	118	INSTALLATION INSTRUCTION (NO)	1	CWF616484	
	119	INSTALLATION INSTRUCTION (DA)	1	CWF616485	
	120	INSTALLATION INSTRUCTION (FI)	1	CWF616486	

(Note)

- All parts are supplied from PAPAMY, Malaysia (Vendor Code: 00029488).
- “O” marked parts are recommended to be kept in stock.

19.2 Outdoor Unit

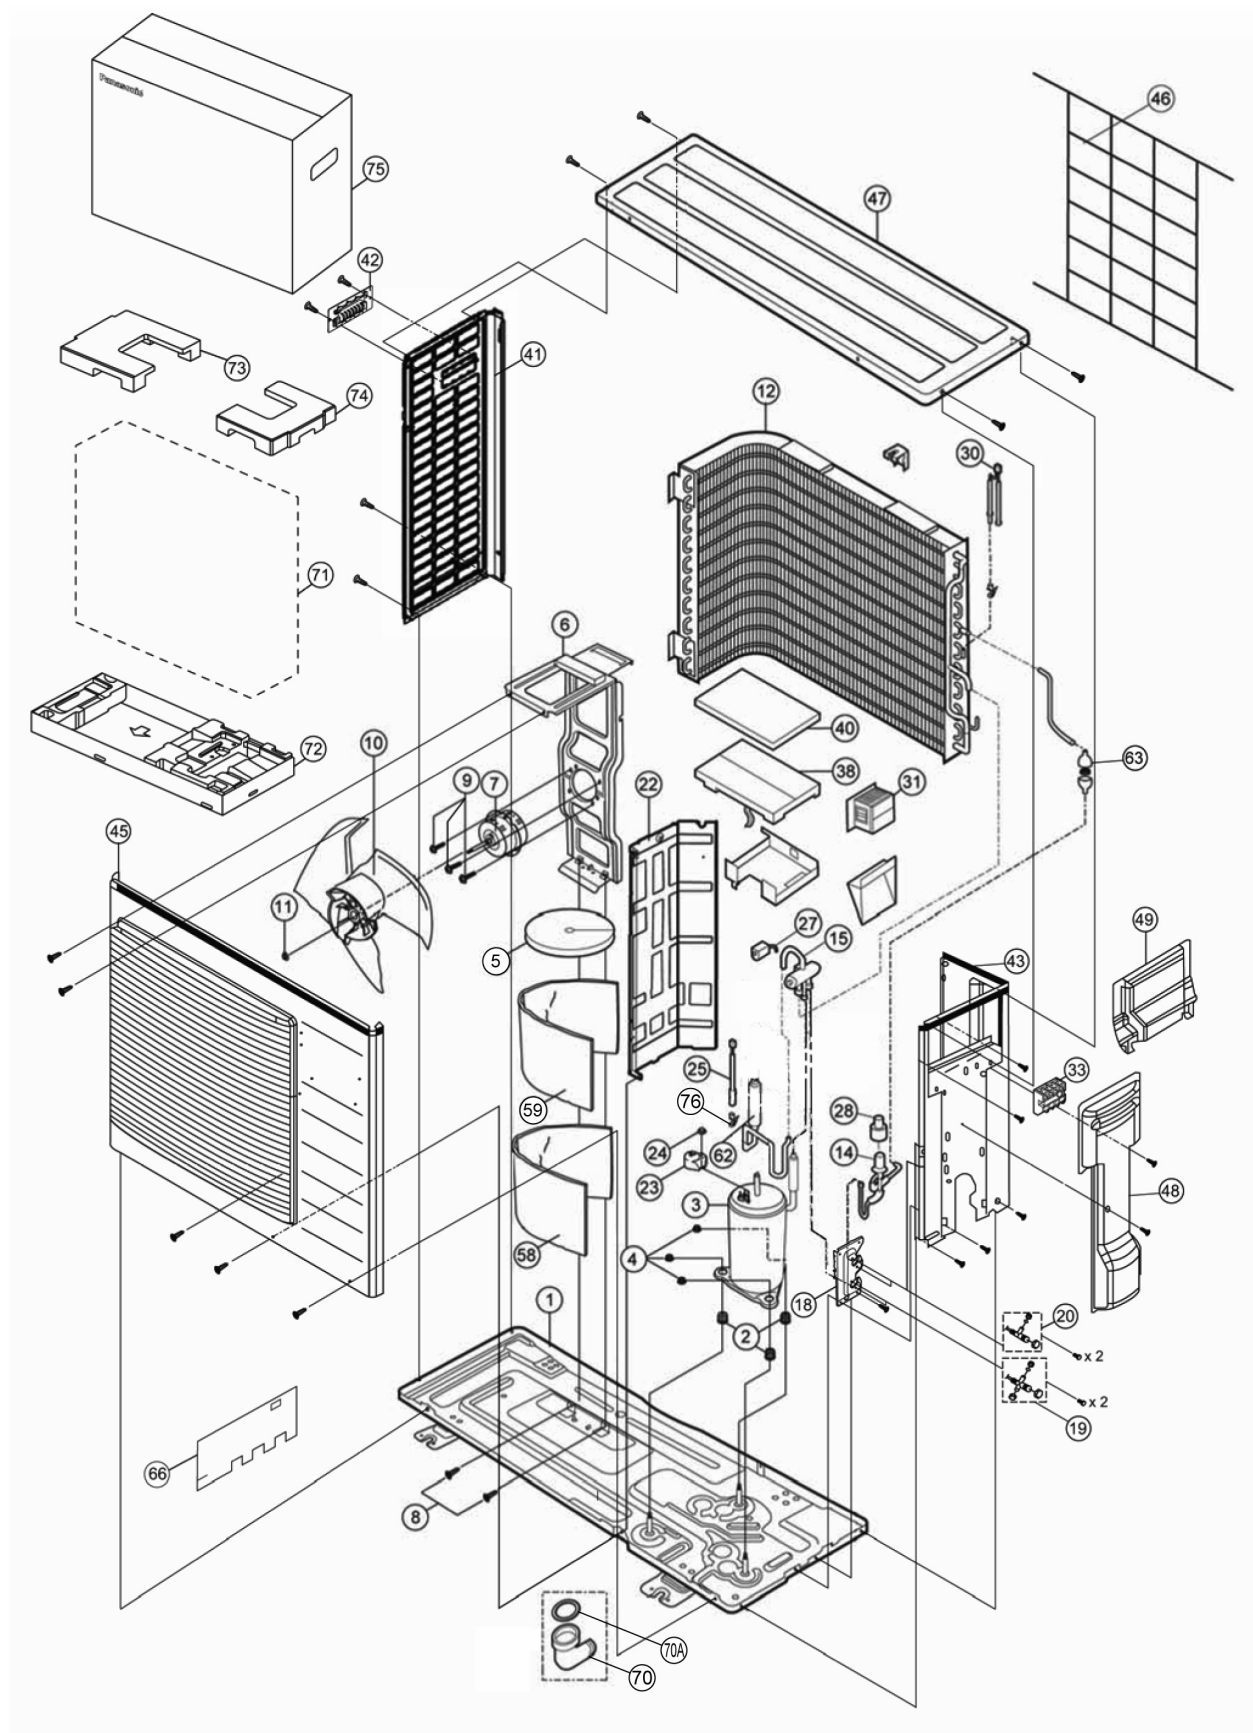

Note:

The above exploded view is for the purpose of parts disassembly and replacement.
The non-numbered parts are not kept as standard service parts.

SAFETY	REF NO.	DESCRIPTION & NAME	QTY.	CU-E12QD3EA	REMARK
	1	CHASSIS ASSY	1	CWD52K1261	
	2	ANTI-VIBRATION BUSHING	3	CWH50077	
⚠	3	COMPRESSOR	1	5RD132XBA21	O
	4	NUT-COMPRESSOR MOUNT	3	CWH561096	
	5	SOUND PROOF MATERIAL	1	CWG302630	
	6	FAN MOTOR BRACKET	1	CWD541153	
⚠	7	FAN MOTOR	1	ARW8401AC	O
	8	SCREW - FAN MOTOR BRACKET	3	CWH551217	
	9	SCREW - FAN MOTOR MOUNT	3	CWH551106J	
	10	PROPELLER FAN ASSY	1	CWH03K1065	
	11	NUT - PROPELLER FAN	1	CWH56053J	
	12	CONDENSER	1	CWB32C4030	
	14	EXPANSION VALVE	1	CWB051016J	O
	15	4 WAYS VALVE	1	CWB001026J	O
	18	HOLDER - COUPLING	1	CWH351227	
	19	3 WAYS VALVE (GAS)	1	CWB011786	O
	20	2 WAYS VALVE (LIQUID)	1	CWB021454	O
	22	SOUND PROOF BOARD	1	CWH151257	
	23	TERMINAL COVER	1	CWH171039A	
	24	NUT-TERMINAL COVER	1	CWH7080300J	
	25	SENSOR COMPLETE (COMP. TEMP.)	1	CWA50C2185	O
⚠	27	V-COIL COMPLETE (4-WAYS VALVE)	1	CWA43C2169J	O
⚠	28	V-COIL COMPLETE (EXPAND VALVE)	1	CWA43C2257	O
	30	SENSOR COMPLETE	1	CWA50C2517	O
⚠	31	REACTOR	1	G0C203J00003	O
⚠	33	TERMINAL BOARD ASSY	1	CWA28K1110J	O
⚠	38	ELECTRONIC CONTROLLER - MAIN	1	CWA73C8614R	O
	40	CONTROL BOARD COVER (TOP)	1	CWH131333	
	41	CABINET SIDE PLATE (LEFT)	1	CWE041522A	
	42	HANDLE	1	CWE161010	
	43	CABINET SIDE PLATE (RIGHT)	1	CWE041555A	
	45	CABINET FRONT PLATE CO.	1	CWE06K1077	
	46	WIRE NET	1	CWD041155A	
	47	CABINET TOP PLATE	1	CWE031083A	
	48	CONTROL BOARD COVER COMPLETE	1	CWH13C1238	
	49	CONTROL BOARD COVER	1	CWH131409A	
	58	SOUND PROOF MATERIAL	1	CWG302636	
	59	SOUND PROOF MATERIAL	1	CWG302744	
	62	RECEIVER	1	CWB14011	
	63	STRAINER	1	CWB11094	
	66	SOUND PROOF MATERIAL	1	CWG302632	
	70	DRAIN HOSE	1	CWH5850080	
	70A	PACKING	1	CWB81012	
	71	BAG	1	CWG861461	
	72	BASE BOARD-COMplete	1	CWG62C1131	
	73	SHOCK ABSORBER (LEFT)	1	CWG713217	
	74	SHOCK ABSORBER (RIGHT)	1	CWG713218	
	75	C.C. CASE	1	CWG568360	
	76	HOLDER SENSOR	1	CWH32143	

(NOTE)

- All parts are supplied from PAPAMY, Malaysia (Vendor Code: 00029488).
- "O" marked parts are recommended to be kept in stock.