


- This allows the system address, indoor unit address, and other settings to be made for the individual or group-control indoor unit to which the remote controller used for detailed settings is connected.





When detailed settings mode is engaged, operation stops at the individual or group-control indoor unit where the remote controller used for detailed settings is connected. Simple settings items can also be set at this time.

<Procedure>


- ① Press and hold the , **SET** and **CAN CEL** buttons simultaneously for 4 seconds or longer.
- ② “**SETTING**,” unit No. “**1-1**” (or “**ALL**” in the case of group control), item code “**10**,” and settings data “**00XX**” are displayed blinking on the remote controller LCD display (Fig. 2).

At this time, the indoor unit fan (or all indoor unit fans in the case of group control) begins operating.

- ③ If group control is in effect, press the **UNIT** button and select the address (unit No.) of the indoor unit to set. At this time, the fan at the indoor unit begins operating.

- ④ Press the temperature setting  /  buttons to select the item code to change.
- ⑤ Press the timer time  /  buttons to select the desired setting data.

* For item codes and setting data, refer to the following page.

- ⑥ Press the **SET** button. (The display stops blinking and remains lit, and setting is completed.)
- ⑦ Press the  button to return to normal remote controller display.

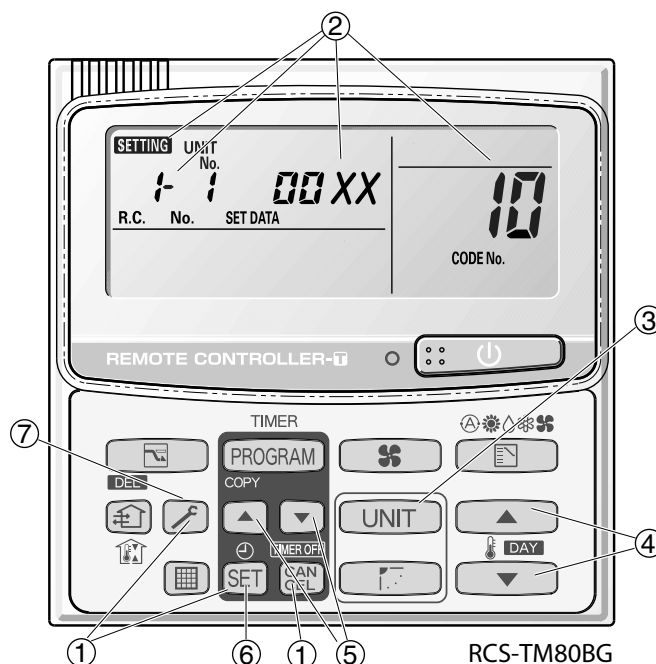


Fig. 2

2. Detailed Settings Function

List of Detailed Setting Items

Item code	Item	Setting data					
		No.	Description	No.	Description	No.	Description
10	Type	0000	1-Way Air Discharge Semi-Concealed (A)	0001	4-Way Air Discharge Semi-Concealed (X, XM)	0002	2-Way Air Discharge Semi-Concealed (S)
		0003	1-Way Air Discharge Semi-Concealed Slim (L)	0005	Concealed-Duct (U, US)	0006	Concealed-Duct High Static Pressure (D)
		0007	Ceiling-Mounted (T)	0008	Wall-Mounted (K)	0010	Floor Standing (F)
		0011	Concealed Floor Standing (FM)				
11	Indoor unit capacity	0001	22 (Type 7)	0003	28 (Type 9)	0005	36 (Type 12)
		0007	45 (Type 16)	0009	56 (Type 18)	0011	71 (Type 25) For FR254 and FMR254
		0012	80 (Type 25) (Except FR254, FMR254)	0013	90 (Type 30)	0015	112 (Type 36)
		0017	140 (Type 48)	0018	160 (Type 60)	0021	224 (Type 76)
		0023	280 (Type 96)				
12	System address	0001	Unit No. 1				
		0002	Unit No. 2				
		0003	Unit No. 3				
		}	}				
		0030	Unit No. 30				
		0099	Not set				
13	Indoor unit address	0001	Unit No. 1				
		0002	Unit No. 2				
		0003	Unit No. 3				
		}	}				
		0064	Unit No. 64				
		0099	Not set				
14	Group control address	0000	Individual (1:1 = Indoor unit with no group wiring)				
		0001	Main unit (One of the group-control indoor units)				
		0002	Sub unit (All group-control indoor units except for main unit)				
		0099	Not set				
17	Cooling intake temperature shift	-010	Shifts intake temperature by -10°C.				
		-009	Shifts intake temperature by -9°C.				
		}	}				
		-001	Shifts intake temperature by -1°C.				
		0000	No intake temperature shift				
		0001	Shifts intake temperature by +1°C.				
		}	}				
		0009	Shifts intake temperature by +9°C.				
		0010	Shifts intake temperature by +10°C.				
18	Automatic stop time after operation start *Can be set in 5-minute units.	0000	Function disabled				
		0001	Stops automatically 5 minutes after operation starts.				
		0002	Stops automatically 10 minutes after operation starts.				
		}	}				
		0123	Stops automatically 615 minutes after operation starts.				
		0124	Stops automatically 620 minutes after operation starts.				
		0125	Stops automatically 625 minutes after operation starts.				